



i n v e n t

Hardware Reference Guide

HP Compaq Business Desktops
dx6120 Microtower Models

Document Part Number: 374967-001

September 2004

This guide provides basic information for upgrading this computer model.

© Copyright 2004 Hewlett-Packard Development Company, L.P.
The information contained herein is subject to change without notice.

Microsoft, MS-DOS, Windows, and Windows NT are trademarks of Microsoft Corporation in the U.S. and other countries.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.



WARNING: Text set off in this manner indicates that failure to follow directions could result in bodily harm or loss of life.



CAUTION: Text set off in this manner indicates that failure to follow directions could result in damage to equipment or loss of information.

Hardware Reference Guide

HP Compaq Business Desktops
dx6120 Microtower Models

First Edition (September 2004)

Document Part Number: 374967-001

Contents

1 Product Features

Standard Configuration Features	1-1
Front Panel Components	1-2
Rear Panel Components	1-3
Keyboard	1-4
Windows Logo Key	1-5
Special Mouse Functions	1-5
Serial Number Location	1-6

2 Hardware Upgrades

Serviceability Features	2-1
Warnings and Cautions	2-1
Removing the Computer Access Panel	2-2
Removing the Front Bezel	2-3
Installing Additional Memory	2-4
DIMMs	2-4
DDR2-SDRAM DIMMs	2-4
Populating DIMM Sockets	2-5
Installing DIMMs	2-7
Replacing or Upgrading a Drive	2-9
Locating Drive Positions	2-9
Removing a Drive	2-10
Replacing a Drive	2-13
Removing or Installing an Expansion Card	2-18
Reassembling the Computer	2-25

A Specifications

B Battery Replacement

C Security Lock Provisions

Installing a Security Lock C-1
 Cable Lock C-1
 Padlock C-2

D Electrostatic Discharge

Preventing Electrostatic Damage D-1
Grounding Methods D-1

E Routine Computer Care and Shipping Preparation

Routine Computer Care E-1
Optical Drive Precautions E-2
 Operation E-2
 Cleaning E-2
 Safety E-2
Shipping Preparation E-3

Index

Product Features

Standard Configuration Features


The HP Compaq Microtower features may vary depending on the model. For a complete listing of the hardware and software installed in the computer, run the Diagnostics for Windows utility. Instructions for using this utility are provided in the *Troubleshooting Guide* on the *Documentation CD*.



Microtower Configuration

Front Panel Components


Drive configuration may vary by model.

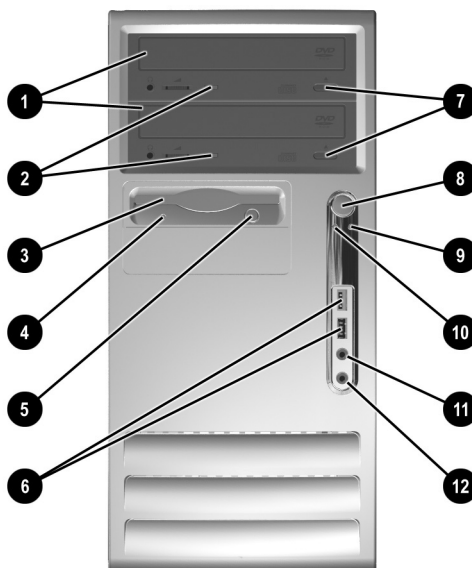

Front Panel Components


- | | |
|---|-------------------------------|
| ❶ Optical Drives (CD-ROM, CD-R/RW, DVD-ROM, DVD+R/RW, or CD-RW/DVD Combo Drive) | ❷ Optical Drive Eject Buttons |
| ❸ Optical Drive Activity Lights | ❸ Power Button |
| ❹ Diskette Drive (optional) | ❹ Power On Light |
| ❺ Diskette Drive Activity Light (optional) | ❺ Hard Drive Activity Light |
| ❻ Diskette Eject Button (optional) | ❻ Headphone Jack |
| ❼ USB (Universal Serial Bus) Ports | ❼ Microphone Connector |
-

Rear Panel Components

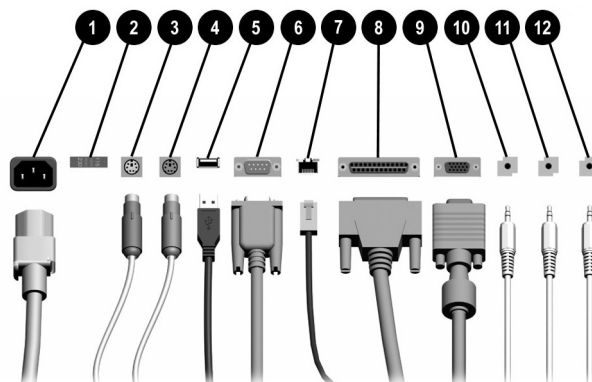

Rear Panel Components


❶	Power Cord Connector	❷	네트워크 RJ-45 Network Connector
❷	Voltage Select Switch	❸	프린터 Parallel Connector
❸	마우스 PS/2 Mouse Connector	❹	모니터 Monitor Connector
❹	키보드 PS/2 Keyboard Connector	❺	헤드폰/라인아웃 Headphone/Line-Out Connector
❺	USB Universal Serial Bus (USB)	❻	라인인 Line-In Audio Connector
❻	시리얼 IO/IO Serial Connector	❼	마이크 Microphone Connector

 Arrangement and number of connectors may vary by model.

The monitor connector on the system board is inactive when a PCI Express graphics card is installed in the computer.

If a standard PCI graphics card is installed, the connectors on the card and the system board may be used at the same time. Some settings may need to be changed in Computer Setup to use both connectors. For information about Boot Order, refer to the *Computer Setup (F10) Utility Guide* on the Documentation CD.

Keyboard

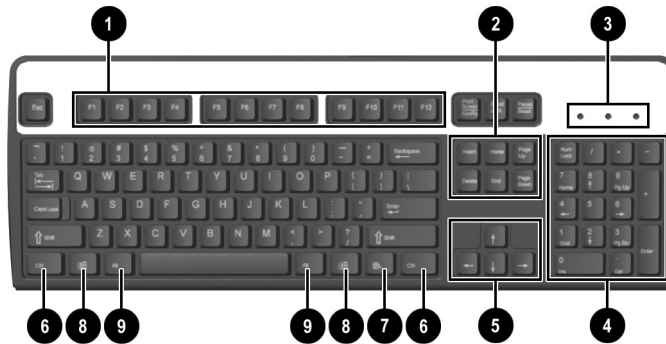

Keyboard Components

❶	Function Keys	Perform special functions depending on the software application being used.
❷	Editing Keys	Includes the following: Insert, Home, Page Up, Delete, End, and Page Down.
❸	Status Lights	Indicate the status of the computer and keyboard settings (Num Lock, Caps Lock, and Scroll Lock).
❹	Numeric Keys	Work like a calculator keypad.
❺	Arrow Keys	Used to navigate through a document or Web site. These keys allow you to move left, right, up, and down, using the keyboard instead of the mouse.
❻	Ctrl Keys	Used in combination with another key; its effect depends on the application software you are using.
❼	Application Key*	Used (like the right mouse button) to open pop-up menus in a Microsoft Office application. May perform other functions in other software applications.
❽	Windows Logo Keys*	Used to open the Start menu in Microsoft Windows. Used in combination with other keys to perform other functions.
❾	Alt Keys	Used in combination with another key; its effect depends on the application software you are using.

*Keys available in select geographic regions.

Windows Logo Key

Use the Windows Logo key in combination with other keys to perform certain functions available in the Windows operating system. Refer to the “[Keyboard](#)” section to identify the Windows Logo key.

Windows Logo Key Functions

Windows Logo Key	Displays or hides the Start menu.
Windows Logo Key + d	Displays the Desktop.
Windows Logo Key + m	Minimizes all open applications.
Shift + Windows Logo Key + m	Undoes Minimize All.
Windows Logo Key + e	Launches My Computer.
Windows Logo Key + f	Launches Find Document.
Windows Logo Key + Ctrl + f	Launches Find Computer.
Windows Logo Key + F1	Launches Windows Help.
Windows Logo Key + l	Locks the computer if you are connected to a network domain, or allows you to switch users if you are not connected to a network domain.
Windows Logo Key + r	Launches the Run dialog box.
Windows Logo Key + u	Launches the Utility Manager.
Windows Logo Key + Tab	Activates the next Taskbar button.

Special Mouse Functions

Most software applications support the use of a mouse. The functions assigned to each mouse button depend on the software applications you are using.

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/085300204011011310>