



**DATA LOGGING  
HOT WIRE ANEMOMETER with  
CFM/CMM and 8:1 IR THERMOMETER**  
**USER'S MANUAL**



**CIH20DL**

*Please read this manual carefully and thoroughly before using this product.*

---

## TABLE OF CONTENTS

<b>Introduction</b> .....	<b>3 – 4</b>
<b>Key Features</b> .....	<b>4</b>
<b>Safety Instructions</b> .....	<b>5</b>
<b>What's in the Case</b> .....	<b>5</b>
<b>Product Overview</b> .....	<b>5 – 7</b>
<b>Setup Instructions</b> .....	<b>8</b>
<b>Install Battery</b> .....	<b>8</b>
<b>Operating Instructions</b> .....	<b>8 – 21</b>
<b>Getting Started</b> .....	<b>8 – 9</b>
<b>Measuring Air Speed and Temperature</b> .....	<b>9</b>
<b>Measuring Airflow Volume</b> .....	<b>9</b>
<b>Measuring Surface Temperature</b> .....	<b>10</b>
<b>Holding and Storing Measurements</b> .....	<b>10</b>
<b>Displaying Maximum, Minimum and Average Values</b> .....	<b>10 – 11</b>
<b>Recalling and Erasing Stored Measurements</b> .....	<b>11 – 12</b>
<b>Using the Advanced Settings Menu</b> .....	<b>12 – 13</b>
<b>Data Logging with a Computer</b> .....	<b>14 – 21</b>
<b>Install Software and Drivers</b> .....	<b>14 – 15</b>
<b>Connecting the Meter to Your Computer</b> .....	<b>15</b>
<b>Viewing Real-Time Measurements on the Dashboard</b> .....	<b>15 – 17</b>
<b>Using the Meter to Log Data</b> .....	<b>17 – 18</b>
<b>Uploading Record Data</b> .....	<b>18</b>
<b>Viewing Record Data Graphically</b> .....	<b>19 – 20</b>
<b>Uploading and Viewing Data Logs</b> .....	<b>20 – 21</b>
<b>Specifications</b> .....	<b>22</b>
<b>Maintenance Tips</b> .....	<b>23</b>
<b>Warranty Information</b> .....	<b>23</b>
<b>Return for Repair Policy</b> .....	<b>23</b>
<b>Appendix</b> .....	<b>24 – 25</b>

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如  
要下载或阅读全文，请访问：[https://d.book118.com/18810113712  
6006070](https://d.book118.com/188101137126006070)