



Windows Embedded 8.1 Industry Pro on HP Thin Clients

Administrator Guide

© Copyright 2014, 2015 HP Development Company, L.P.

Citrix and XenDesktop are registered trademarks of Citrix Systems, Inc. and/or one more of its subsidiaries, and may be registered in the United States Patent and Trademark Office and in other countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. VMware and Horizon View are registered trademarks or trademarks of VMware, Inc. in the United States and/or other jurisdictions.

Confidential computer software. Valid license from HP required for possession, use or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Third Edition: December 2015

First Edition: November 2014

Document Part Number: 798830-003

About this guide

Command-line syntax in this guide might use one or more of the elements described in the following table.

Element	Description
<i>Variable</i>	Italicized text denotes placeholders for user-defined variables. <pre>location=<i>IpAddress</i>: <i>Port</i></pre> For the above parameter, you would input something similar to the example shown below: <pre>location=192.168.0.10:12345</pre>
[]	Parameters enclosed in square brackets are optional. <pre>location=<i>IpAddress</i>[: <i>Port</i>]</pre> For the above parameter, you could input something similar to one of the examples shown below: <pre>location=192.168.0.10</pre> <pre>location=192.168.0.10:12345</pre> NOTE: A parameter is mandatory if it is not enclosed in square brackets.
{ }	Braces and vertical bars denote where you must choose only one of the options. <pre>speed={high medium low}</pre> For the above parameter, you would input one of the following: <pre>speed=high</pre> <pre>speed=medium</pre> <pre>speed=low</pre>
" "	Double quotes and single quotes must not be omitted.
' '	<pre>location="'192.168.0.10' '12345'"</pre> The above parameter demonstrates nested strings, for which you would input the double quotes and single quotes along with the other text.
...	An ellipsis denotes where a parameter could be repeated multiple times and can be used in conjunction with square brackets to show that the repetition is optional. <pre>devicenames=Computer1 [Computer2...]</pre> For the above parameter, you would input a minimum of one computer name, and you could optionally specify an infinite number of additional computer names.

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/295110134344011303>