


Operating Instructions

CNGmass

Modbus RS485

Coriolis flowmeter

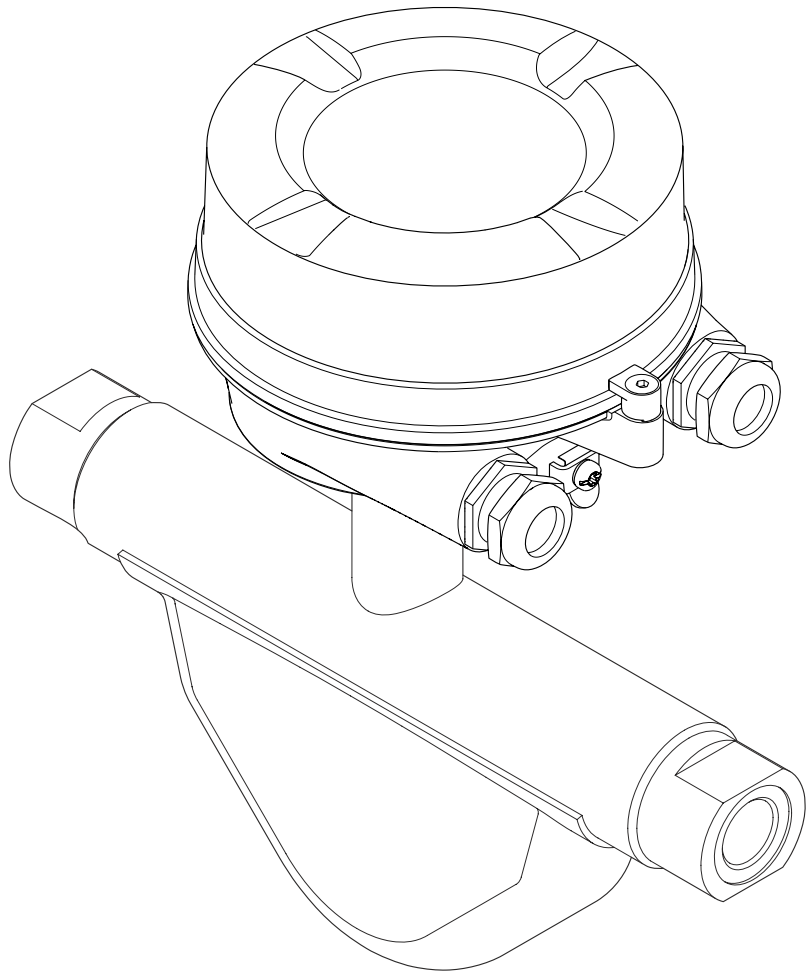

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these Instructions.

Table of contents

1	Document information	5		
1.1	Document function	5		
1.2	Symbols used	5		
1.2.1	Safety symbols	5		
1.2.2	Electrical symbols	5		
1.2.3	Tool symbols	6		
1.2.4	Symbols for certain types of information	6		
1.2.5	Symbols in graphics	6		
1.3	Documentation	7		
1.3.1	Standard documentation	7		
1.3.2	Supplementary device-dependent documentation	7		
1.4	Registered trademarks	7		
2	Basic safety instructions	8		
2.1	Requirements for the personnel	8		
2.2	Designated use	8		
2.3	Workplace safety	9		
2.4	Operational safety	9		
2.5	Product safety	9		
2.6	IT security	9		
3	Product description	11		
3.1	Product design	11		
3.1.1	Device version with Modbus RS485 communication type	11		
4	Incoming acceptance and product identification	12		
4.1	Incoming acceptance	12		
4.2	Product identification	12		
4.2.1	Transmitter nameplate	13		
4.2.2	Sensor nameplate	13		
4.2.3	Promass 100 safety barrier - nameplate	14		
4.2.4	Symbols on measuring device	14		
5	Storage and transport	15		
5.1	Storage conditions	15		
5.2	Transporting the product	15		
5.3	Packaging disposal	16		
6	Installation	17		
6.1	Installation conditions	17		
6.1.1	Mounting position	17		
6.1.2	Requirements from environment and process	17		
6.1.3	Special mounting instructions	17		
6.2	Mounting the measuring device	18		
6.2.1	Required tools	18		
6.2.2	Preparing the measuring device	18		
6.2.3	Mounting the measuring device	19		
6.3	Post-installation check	19		
7	Electrical connection	20		
7.1	Connection conditions	20		
7.1.1	Required tools	20		
7.1.2	Requirements for connecting cable	20		
7.1.3	Terminal assignment	22		
7.1.4	Shielding and grounding	23		
7.1.5	Preparing the measuring device	23		
7.2	Connecting the measuring device	24		
7.2.1	Connecting the transmitter	24		
7.2.2	Connecting the Safety Barrier Promass 100	25		
7.3	Hardware settings	26		
7.3.1	Enabling the terminating resistor	26		
7.4	Ensuring the degree of protection	27		
7.5	Post-connection check	27		
8	Operation options	28		
8.1	Overview of operation options	28		
8.2	Structure and function of the operating menu	29		
8.2.1	Structure of the operating menu	29		
8.2.2	Operating philosophy	30		
8.3	Access to the operating menu via the operating tool	31		
8.3.1	Connecting the operating tool	31		
8.3.2	FieldCare	31		
9	System integration	33		
9.1	Overview of device description files	33		
9.1.1	Current version data for the device	33		
9.1.2	Operating tools	33		
9.2	Modbus RS485 information	33		
9.2.1	Function codes	33		
9.2.2	Register information	34		
9.2.3	Response time	34		
9.2.4	Modbus data map	34		
10	Commissioning	37		
10.1	Function check	37		
10.2	Establishing a connection via FieldCare	37		
10.3	Configuring the measuring device	37		
10.3.1	Defining the tag name	37		
10.3.2	Setting the system units	37		
10.3.3	Selecting and setting the medium	40		
10.3.4	Configuring the communication interface	40		
10.3.5	Configuring the low flow cut off	43		
10.3.6	Configuring the partial filled pipe detection	44		

10.4	Advanced settings	45	14.4	Return	64
10.4.1	Calculated values	45	14.5	Disposal	64
10.4.2	Carrying out a sensor adjustment	46	14.5.1	Removing the measuring device	64
10.4.3	Configuring the totalizer	46	14.5.2	Disposing of the measuring device ...	65
10.5	Simulation	47			
10.6	Protecting settings from unauthorized access	48	15	Accessories	66
10.6.1	Write protection via write protection switch	48	15.1	Communication-specific accessories	66
			15.2	Service-specific accessories	66
11	Operation	50	16	Technical data	67
11.1	Reading device locking status	50	16.1	Application	67
11.2	Reading measured values	50	16.2	Function and system design	67
11.2.1	Process variables	50	16.3	Input	67
11.2.2	Totalizer	51	16.4	Output	68
11.3	Adapting the measuring device to the process conditions	51	16.5	Power supply	69
11.4	Performing a totalizer reset	52	16.6	Performance characteristics	70
12	Diagnostics and troubleshooting ...	53	16.7	Installation	71
12.1	General troubleshooting	53	16.8	Environment	71
12.2	Diagnostic information via light emitting diodes	53	16.9	Process	71
12.2.1	Transmitter	53	16.10	Mechanical construction	73
12.2.2	Safety Barrier Promass 100	54	16.11	Operability	74
12.3	Diagnostic information in FieldCare	54	16.12	Certificates and approvals	75
12.3.1	Diagnostic options	54	16.13	Application packages	75
12.3.2	Calling up remedy information	55	16.14	Accessories	75
12.4	Diagnostic information via communication interface	55	16.15	Documentation	75
12.4.1	Reading out diagnostic information ..	55			
12.4.2	Configuring error response mode	56	17	Appendix	77
12.5	Adapting the diagnostic information	56	17.1	Overview of the operating menu	77
12.5.1	Adapting the diagnostic behavior	56			
12.6	Overview of diagnostic information	57	Index	88	
12.7	Pending diagnostic events	58			
12.8	Diagnostic list	59			
12.9	Event logbook	59			
12.9.1	Event history	59			
12.9.2	Filtering the event logbook	60			
12.9.3	Overview of information events	60			
12.10	Resetting the measuring device	61			
12.11	Device information	61			
12.12	Firmware history	62			
13	Maintenance	63			
13.1	Maintenance tasks	63			
13.1.1	Exterior cleaning	63			
13.1.2	Interior cleaning	63			
13.2	Measuring and test equipment	63			
13.3	Endress+Hauser services	63			
14	Repair	64			
14.1	General notes	64			
14.2	Spare parts	64			
14.3	Endress+Hauser services	64			

1 Document information

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used

1.2.1 Safety symbols

Symbol	Meaning
 A0011189-EN	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
 A0011190-EN	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
 A0011191-EN	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
 A0011192-EN	NOTICE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning
 A0011197	Direct current A terminal to which DC voltage is applied or through which direct current flows.
 A0011198	Alternating current A terminal to which alternating voltage is applied or through which alternating current flows.
 A0017381	Direct current and alternating current ■ A terminal to which alternating voltage or DC voltage is applied. ■ A terminal through which alternating current or direct current flows.
 A0011200	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
 A0011199	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.
 A0011201	Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

1.2.3 Tool symbols

Symbol	Meaning
 A0011221	Allen key
 A0011222	Open-ended wrench

1.2.4 Symbols for certain types of information

Symbol	Meaning
 A0011182	Allowed Indicates procedures, processes or actions that are allowed.
 A0011183	Preferred Indicates procedures, processes or actions that are preferred.
 A0011184	Forbidden Indicates procedures, processes or actions that are forbidden.
 A0011193	Tip Indicates additional information.
 A0011194	Reference to documentation Refers to the corresponding device documentation.
 A0011195	Reference to page Refers to the corresponding page number.
 A0011196	Reference to graphic Refers to the corresponding graphic number and page number.
	Series of steps
	Result of a sequence of actions
 A0013562	Help in the event of a problem
 A0015502	Visual inspection

1.2.5 Symbols in graphics

Symbol	Meaning
1, 2, 3,...	Item numbers
	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections
 A0013441	Flow direction
 A0011187	Hazardous area Indicates a hazardous area.
 A0011188	Safe area (non-hazardous area) Indicates a non-hazardous area.

1.3 Documentation

-  For an overview of the scope of the associated Technical Documentation, refer to the following:
- The CD-ROM provided for the device (depending on the device version, the CD-ROM might not be part of the delivery!)
 - The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
 - The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.
-  For a detailed list of the individual documents along with the documentation code (→  75)

1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Modbus RS485 register information	Reference for Modbus RS485 register information The document provides Modbus-specific information for each individual parameter in the operating menu.

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task
- ▶ Are authorized by the plant owner/operator
- ▶ Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ▶ Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ▶ Following the instructions in these Operating Instructions

2.2 Designated use

Application and media

The measuring device described in these Instructions is intended only for flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media against which the process-wetted materials are adequately resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section (→  7).

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.



Danger of breakage of the measuring tube due to corrosive or abrasive fluids.

Housing breakage due to mechanical overload possible!

- ▶ Verify the compatibility of the process fluid with the measuring tube material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Observe the specified pressure and temperature range.

Verification for borderline cases:

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any

warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

The external surface temperature of the housing can increase by max. 20 K due to the power consumption of the electronic components. Hot process fluids passing through the measuring device will further increase the surface temperature of the housing. The surface of the sensor, in particular, can reach temperatures which are close to the fluid temperature.

Possible burn hazard due to fluid temperatures!

- ▶ For elevated fluid temperature, ensure protection against contact to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

- ▶ It is recommended to wear gloves on account of the higher risk of electric shock.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.


IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

Endress+Hauser can be contacted to provide support in performing this task.

3 Product description

3.1 Product design

3.1.1 Device version with Modbus RS485 communication type

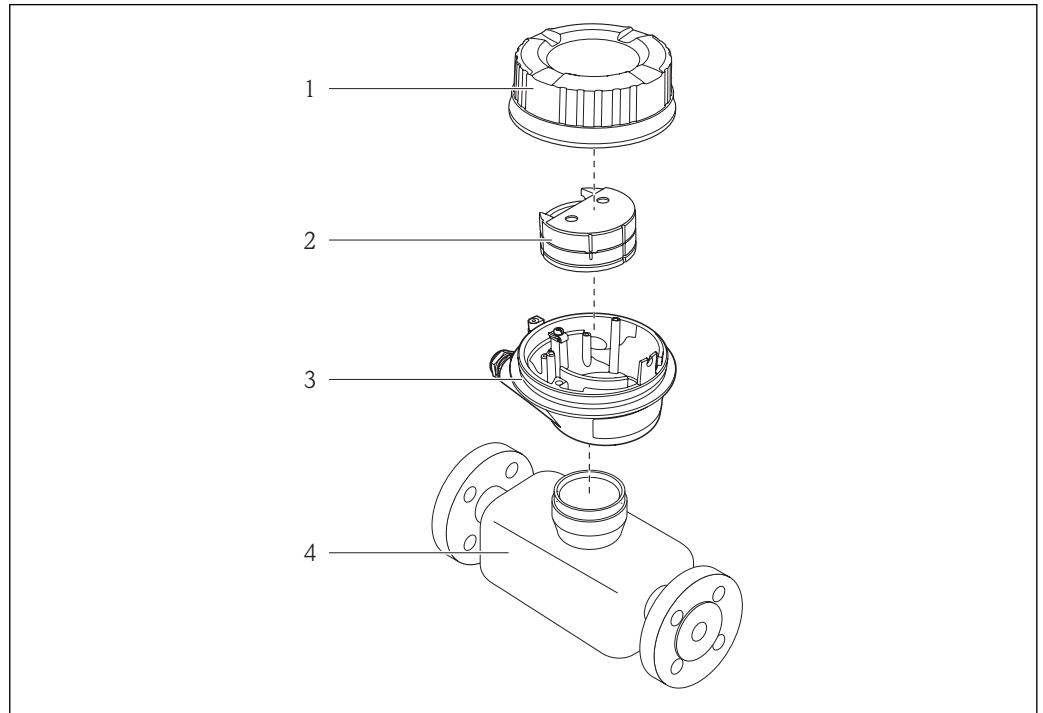

A0017609

1 Important components of a measuring device

- 1 Transmitter housing cover
- 2 Main electronics module
- 3 Transmitter housing
- 4 Sensor


 In the case of the device version with Modbus RS485 intrinsically safe, the Safety Barrier Promass 100 forms part of the scope of supply.

4 Incoming acceptance and product identification

4.1 Incoming acceptance




A0015502

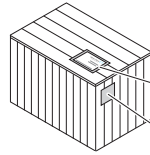1
+
21
+
2

A0013843



Are the order codes on the delivery note (1) and the product sticker (2) identical?

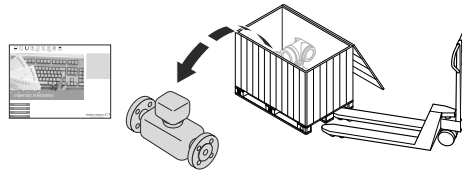

A0013695



 A0015502

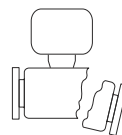



A0013698

Are the goods undamaged?



 A0015502

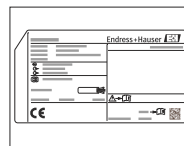

A0013699

Do the nameplate data match the ordering information on the delivery note?



A0015502



A0013697

Is the CD-ROM with the Technical Documentation (depends on device version) and documents present?



- If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
- Depending on the device version, the CD-ROM might not be part of the delivery! In such cases, the technical documentation is available via the Internet or via the *Endress+Hauser Operations App*, see the "Product identification" section (→ 13).

4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" (→  7) and "Supplementary device-dependent documentation" (→  7)
- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

4.2.1 Transmitter nameplate

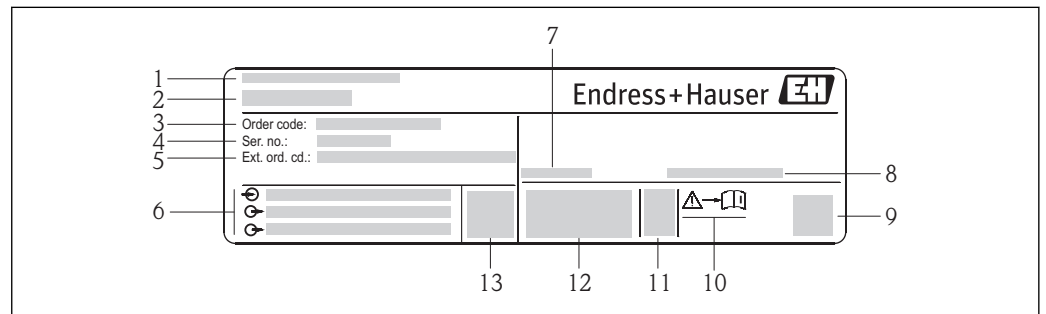

A0017520

 2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number
- 5 Extended order code
- 6 Electrical connection data, e.g. available inputs and outputs, supply voltage
- 7 Permitted ambient temperature range (T_a)
- 8 Degree of protection
- 9 2-D matrix code
- 10 Document number of safety-related supplementary documentation (→  76)
- 11 Manufacturing date: year-month
- 12 CE mark, C-Tick
- 13 Firmware version (FW)

4.2.2 Sensor nameplate




Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE+).

4.2.3 Promass 100 safety barrier - nameplate

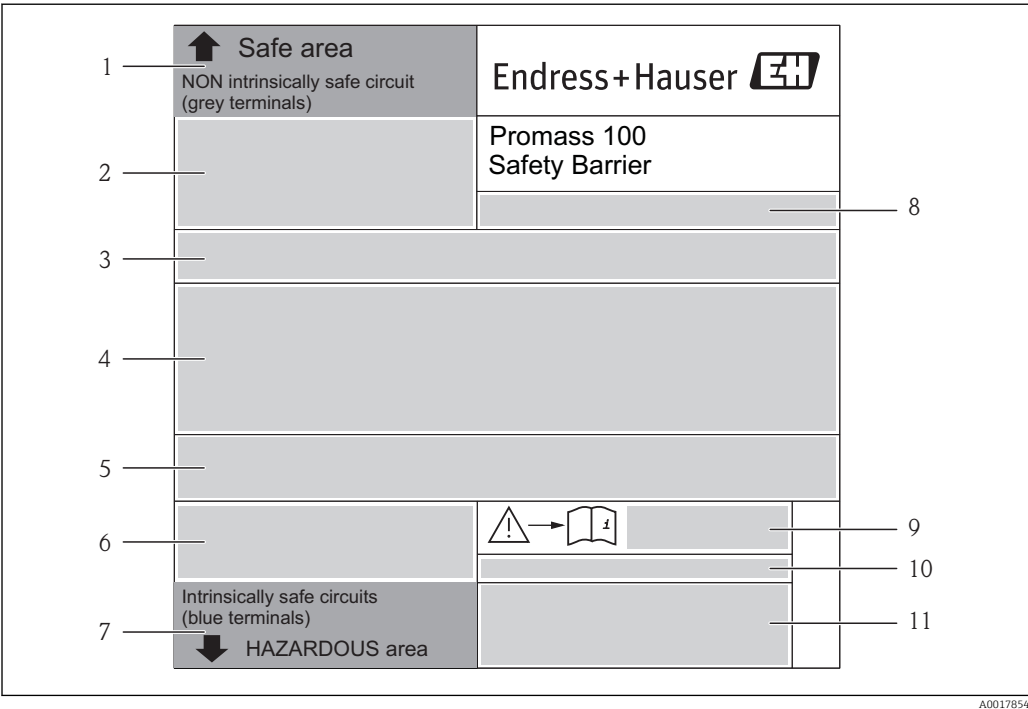

3 Example of a Safety Barrier Promass 100 nameplate

1 Non-hazardous area or zone 2/div. 2
2 Serial number, material number and 2-D matrix code of the Safety Barrier Promass 100
3 Electrical connection data, e.g. available inputs and outputs, supply voltage
4 Approval information for explosion protection
5 Safety warning
6 Communication-specific information
7 Intrinsically safe area
8 Manufacturing location
9 Document number of safety-related supplementary documentation (→ 76)
10 Permitted ambient temperature (T_a)
11 CE mark, C-Tick

4.2.4 Symbols on measuring device

Symbol	Meaning
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
 A0011194	Reference to documentation Refers to the corresponding device documentation.
 A0011199	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/336210210100010142>