

# **Pointing Devices and Keyboard**

Document Part Number: 405783-001

May 2006

This guide explains the pointing devices and keyboard.

---

# Contents

## 1 Pointing devices

|                                               |     |
|-----------------------------------------------|-----|
| Identifying pointing devices . . . . .        | 1-2 |
| Using the TouchPad . . . . .                  | 1-4 |
| Using the pointing stick . . . . .            | 1-4 |
| Using an external mouse . . . . .             | 1-5 |
| Setting pointing device preferences . . . . . | 1-5 |

## 2 Keyboard

|                                                                |      |
|----------------------------------------------------------------|------|
| Hotkeys . . . . .                                              | 2-1  |
| Hotkey quick reference . . . . .                               | 2-2  |
| Hotkey procedures . . . . .                                    | 2-3  |
| Initiate standby (fn+f3) . . . . .                             | 2-3  |
| Switch the screen image (fn+f4) . . . . .                      | 2-4  |
| View battery pack charge information (fn+f8) . . . . .         | 2-4  |
| Decrease screen brightness (fn+f9) . . . . .                   | 2-5  |
| Increase screen brightness (fn+f10) . . . . .                  | 2-5  |
| Activate the ambient light sensor (fn+f11) . . . . .           | 2-5  |
| Display and clear system information (fn+esc) . . . . .        | 2-5  |
| HP Quick Launch Buttons . . . . .                              | 2-6  |
| Presentation button . . . . .                                  | 2-8  |
| Info Center button . . . . .                                   | 2-9  |
| HP Quick Launch Buttons control panel . . . . .                | 2-10 |
| Opening the HP Quick Launch Buttons control<br>panel . . . . . | 2-11 |
| Setting button preferences . . . . .                           | 2-11 |
| Displaying the Q Menu . . . . .                                | 2-13 |

|                                           |      |
|-------------------------------------------|------|
| Setting tiling preferences . . . . .      | 2-17 |
| Setting Zoom preferences . . . . .        | 2-17 |
| Setting the ambient light sensor. . . . . | 2-18 |
| Setting other preferences . . . . .       | 2-19 |

### 3 Keypads

|                                                                  |     |
|------------------------------------------------------------------|-----|
| Using the embedded numeric keypad . . . . .                      | 3-2 |
| Enabling and disabling the embedded numeric keypad . . . . .     | 3-3 |
| Switching key functions on the embedded numeric keypad . . . . . | 3-3 |
| Using an external numeric keypad. . . . .                        | 3-4 |
| Enabling or disabling num lock mode as you work . . . . .        | 3-4 |

### 4 Pen and command controls (Tablet PC models only)

|                                               |      |
|-----------------------------------------------|------|
| Pen . . . . .                                 | 4-1  |
| Entering information with the pen. . . . .    | 4-2  |
| Calibrating the pen. . . . .                  | 4-4  |
| Setting pen preferences . . . . .             | 4-6  |
| Changing the pen tip . . . . .                | 4-7  |
| Command controls . . . . .                    | 4-8  |
| Identifying command controls. . . . .         | 4-8  |
| Command controls quick reference. . . . .     | 4-10 |
| Using command controls. . . . .               | 4-11 |
| Setting command control preferences . . . . . | 4-13 |
| On-screen keyboard . . . . .                  | 4-16 |

### Index

---

## Pointing devices

The following sections provide information on the pointing device features of the computer, which vary by model.

 


---

Your computer may look slightly different from the illustrations in this chapter.

---

# Identifying pointing devices

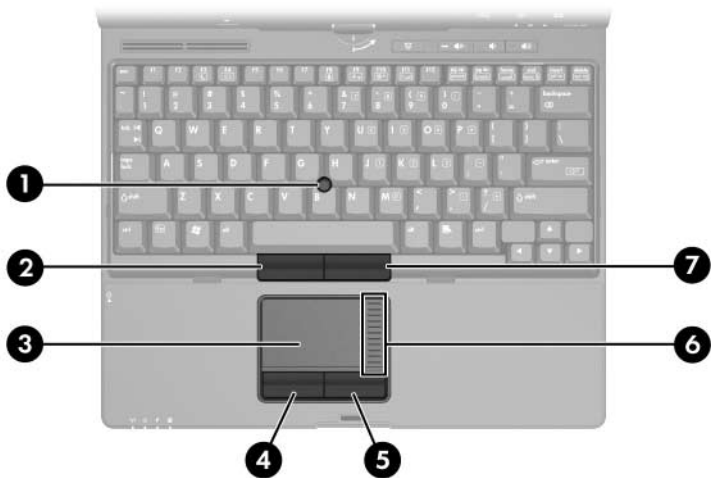

The pointing stick and TouchPad controls can be used interchangeably.

| Component                    | Description                                                                                                                                                     |
|------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ❶ Pointing stick             | Moves the pointer and selects or activates items on the screen.                                                                                                 |
| ❷ Left pointing stick button | Functions like the left button on an external mouse.                                                                                                            |
| ❸ TouchPad*                  | Moves the pointer and selects or activates items on the screen. Can be set to perform other mouse functions, such as scrolling, selecting, and double-clicking. |

(Continued)

| Component                                                                                                                                                                                                                                                                         | Description                                           |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------|
| ④ Left TouchPad button*                                                                                                                                                                                                                                                           | Functions like the left button on an external mouse.  |
| ⑤ Right TouchPad button*                                                                                                                                                                                                                                                          | Functions like the right button on an external mouse. |
| ⑥ Touchpad scroll zone*                                                                                                                                                                                                                                                           | Scrolls up or down.                                   |
| ⑦ Right pointing stick button                                                                                                                                                                                                                                                     | Functions like the right button on an external mouse. |
| <p>*This table describes default settings. To view and change TouchPad preferences, select <b>Start &gt; Control Panel &gt; Printers and Other Hardware &gt; Mouse</b>. For details about TouchPad settings, refer to “<a href="#">Setting pointing devices preferences</a>.”</p> |                                                       |

## Using the TouchPad

To move the pointer, slide your finger across the TouchPad surface in the direction you want the pointer to go. Use the TouchPad buttons as you would the corresponding buttons on an external mouse. To scroll up and down using the TouchPad vertical scroll zone, slide your finger up and down over the lines.

 


If you are using the TouchPad to move the pointer, you must lift your finger off the TouchPad before moving it to the scroll zone. Simply sliding your finger from the TouchPad to the scroll zone will not activate the scrolling function.

---

## Using the pointing stick

To move the pointer, press the pointing stick in the direction you want the pointer to go. Use the pointing stick buttons as you would the corresponding buttons on an external mouse.

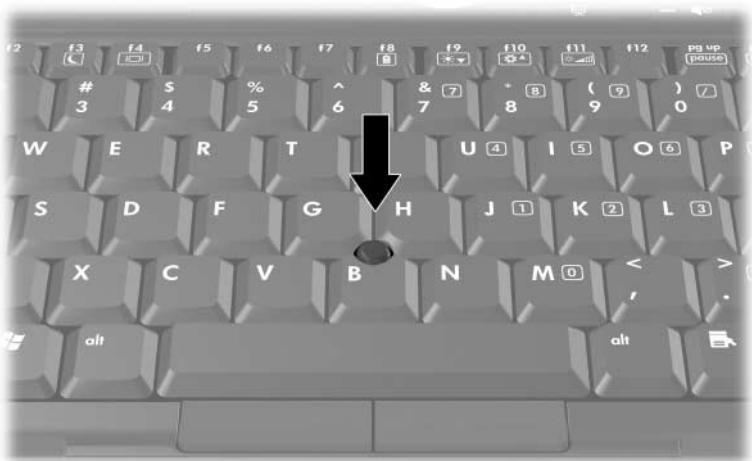

## Using an external mouse

An external USB mouse can be connected to the computer using one of the USB ports on the computer. A USB mouse can also be connected to the system using the ports on an optional docking device.

## Setting pointing device preferences

Mouse Properties in Microsoft® Windows® allows you to customize pointing device settings, including

- TouchPad tapping, which enables you to tap the TouchPad once to select an object or twice to double-click an object (enabled by default).
- Edge motion, which enables you to continue to scroll even though your finger has reached the edge of the TouchPad (disabled by default).
- Button preference, which allows you to switch between left-hand and right-hand use (right-hand preference is enabled by default).

Other features, such as mouse speed preferences and mouse trails, are also found in Mouse Properties.

To access Mouse Properties:

- » Select **Start > Control Panel > Printers and Other Hardware > Mouse**.

---


# Keyboard

The following sections provide information on the keyboard features of the computer.

## Hotkeys

Hotkeys are preset combinations of the **fn** key ❶, one of the function keys ❷, or the **esc** key ❸.

The icons on the **f3**, **f4**, and **f8** through **f11** keys represent the hotkey functions. Hotkey functions and procedures are discussed in the following sections.

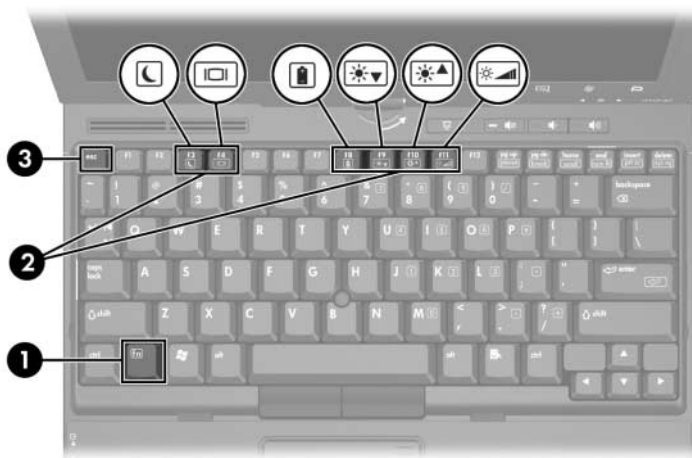 

---

Your computer may look slightly different from the illustrations in this chapter.

---

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/345110231344011303>