
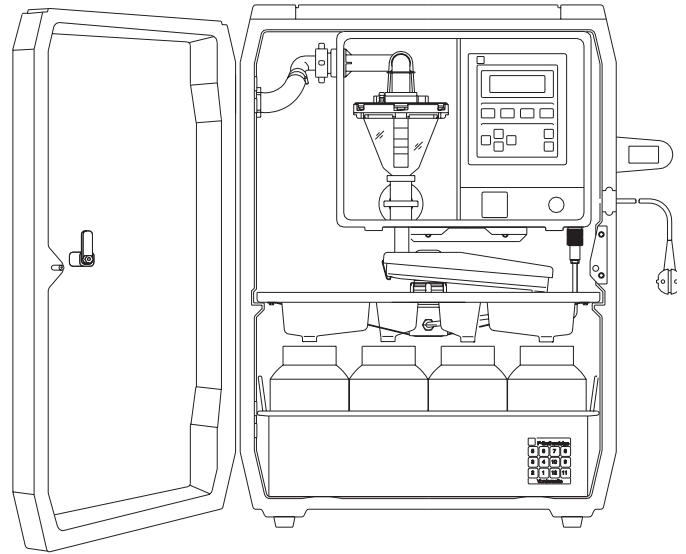


Multi-function water sampler *asp-port d 2*

Installation and operating instructions

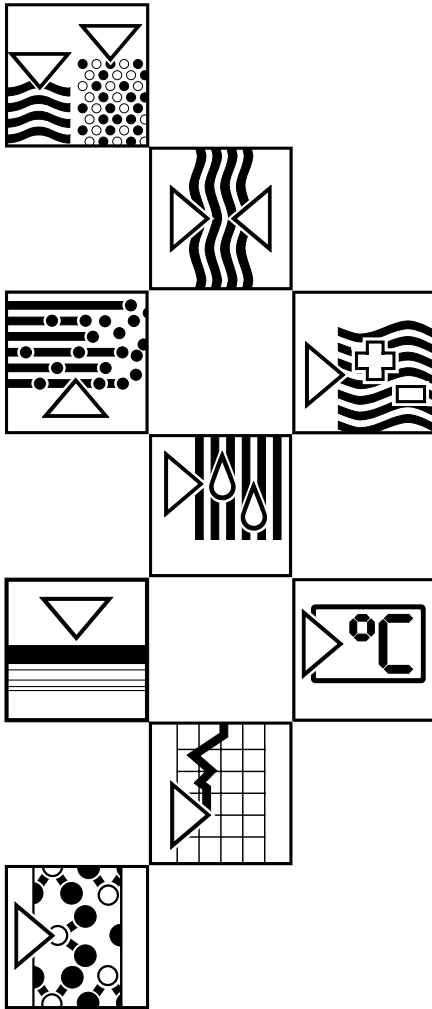

- Check: That the delivery note and delivery contents correspond!
Check the package and contents for external damage.

Complete delivery

Should there be any visible damage you should immediately inform both the transport agency as well as your supplier. If this is not done any later claims cannot be handled under the guarantee.

Transport insurance**Please take note of the following characters:**

Hint: Hints for better installation.



Attention: Ignoring this note can lead to damage of the device or faulty operation.



Danger: Ignoring this warning can lead to personal injury.



Should the "**asp-port d 2**" be in storage for more than 6 months please take note of the storage details in chapter "**Maintenance, general**".

**Please enter details here:**



Unit number: _____

Software version: _____

Door key number: _____

.... Always give these details when reordering or on any queries.

**Dimensional drawing,
complete unit**

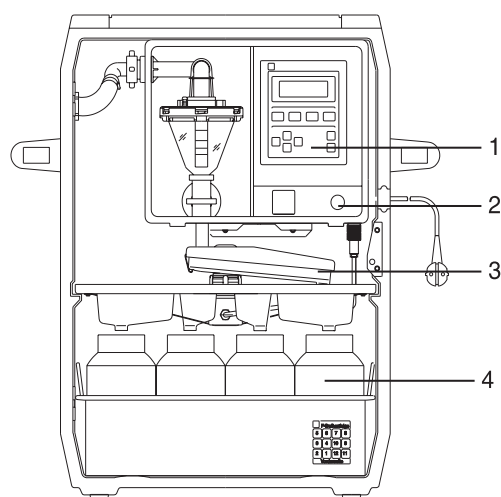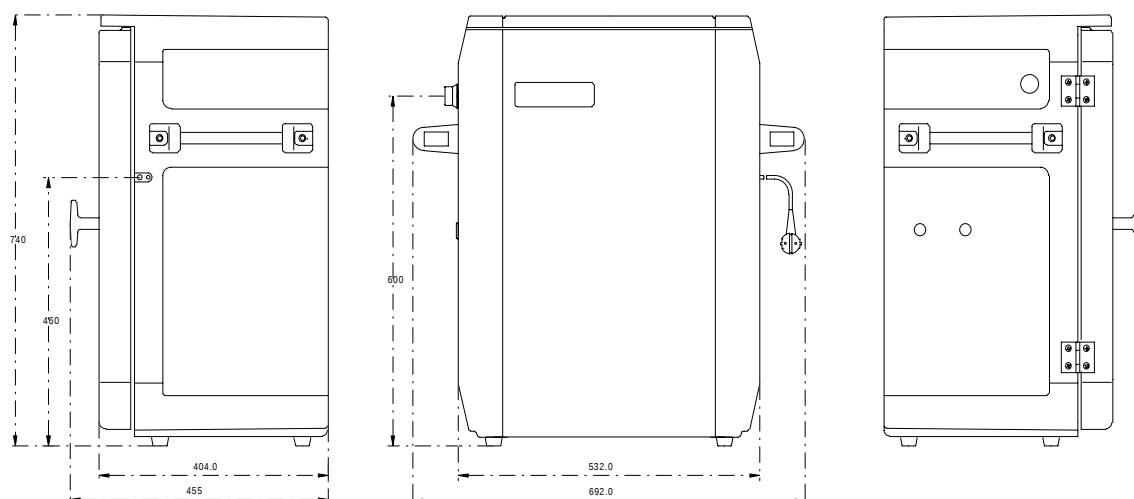

Sampler *asp-port d 2* :

- 1 = Controller *liqui-box d 2*
- 2 = Cable entry
- 3 = Distribution system (tap, tray)
- 4 = Bottle tray with bottles and lids

	Page	Contents
Please note:		
- Complete delivery	1	
- Transport insurance	1	
- Enter unit information	1	
	1	
asp-port d 2		
- Dimensional drawing and complete construction	2	
Contents	3	
General notes	5	
- Safety	5	
Mechanical installation	6	
- General	6	
- Installation	6	
- Hose connection / installation	6	
Electrical installation	7	
- Power supply	7	
- In and outputs	8	
- Outputs	8	
- Inputs	9	
- Control input	9	
- Connection examples	9	
- Input	9	
- What happens on power up ?	10	
- Power failures	10	
- Switching on and off (ON/OFF push buttons)	10	
Sampling principle	11	
For first installation	12	
Setting up sample volume	14	
- Setting up steps (1 to 7)	14	
Maintenance	17	
- General	17	
- Repairs	17	

	Page
Operating and display components	18
- General	18
- Operating components	19
- Setting up principle	19
- Short form instructions	20
- Programme selection and information	21
- Base settings	23
- Programmes: Creating and changeover	25
- Start/stop operation	27
- Service level	29
- Operator settings	31
 Changing analogue input	 34
 Sample distribution conversion	 35
- Changing number of containers/bottles	35
 Problems and solutions	 36
- Fault messages	36
- Spare parts	37
 Technical data	 38

This unit is constructed and tested according to EN 61010-1 / VDE 0411 Part 1 and left our works in perfect and safe condition. In order to maintain this condition and operate safely the user must take note of the following safety information and warnings contained in these instructions.

Safety

First check that the power supply to be used corresponds with that on the unit legend plate.

This unit is supplied with a loose power cable including plug and socket arrangement and is therefore classified to protection class I.

The power supply plug must only be connected to a socket with an earth protection connection. This protection must be continued when using extension leads. Any breakage of the earth conductor within or outside the unit or loosening the earth connections can make the unit potentially dangerous. Intentional disconnection or an open circuit of this earth connection is not permissible.

There are no components in the unit that can be repaired by the user. All repairs must be made by trained service personnel.

Removing covers or components, except where this can be done by hand, must only be carried out by skilled personnel.

If it is assumed that the unit cannot be safely operated it must be immediately taken out of operation and secured against unintentional use.

It can be assumed that the unit cannot be safely operated,

- if the unit is visibly damaged
- if the unit no longer operates
- if the unit has been in storage under adverse conditions for a longer period of time
- after long transport under adverse conditions.

The manufacturer does not accept liability for any damage that has been done due to the unit not having been used in accordance with these safety instructions.

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/455020002122011222>