

All rights reserved. No part of this documentation shall be reproduced, stored in a retrieval system, or transmitted by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Invensys Systems, Inc. No copyright or patent liability is assumed with respect to the use of the information contained herein. Although every precaution has been taken in the preparation of this documentation, the publisher and the author assume no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

The information in this documentation is subject to change without notice and does not represent a commitment on the part of Invensys Systems, Inc. The software described in this documentation is furnished under a license or nondisclosure agreement. This software may be used or copied only in accordance with the terms of these agreements.

? 2004 Invensys Systems, Inc. All Rights Reserved.

Invensys Systems, Inc.
26561 Rancho Parkway South
Lake Forest, CA 92630 U.S.A.
(949) 727-3200
<http://www.wonderware.com>

Trademarks

All terms mentioned in this documentation that are known to be trademarks or service marks have been appropriately capitalized. Invensys Systems, Inc. cannot attest to the accuracy of this information. Use of a term in this documentation should not be regarded as affecting the validity of any trademark or service mark.

Alarm Logger, ActiveFactory, ArchestrA, Avantis, DBDump, DBLoad, DT Analyst, FactoryFocus, FactoryOffice, FactorySuite, FactorySuite A², InBatch, InControl, IndustrialRAD, IndustrialSQL Server, InTouch, InTrack, MaintenanceSuite, MuniSuite, QI Analyst, SCADAAlarm, SCADASuite, SuiteLink, SuiteVoyager, WindowMaker, WindowViewer, Wonderware, and Wonderware Logger are trademarks of Invensys plc, its subsidiaries and affiliates. All other brands may be trademarks of their respective owners.

Contents

Before You Begin 5

About this Guide.....5

Documentation Conventions.....5

CHAPTER 1: Using the K2U Alarmboard
Wizards..... 7

About the K2U Alarmboard Wizards.....7

Installing the Wizards8

Configuring a Wizard8

Using the Wizards at Run Time10

Wizard Status Information.....11

Using the Selftest Control Wizard.....11

Using the Jumper Control Wizard12

Using the History Control Wizard.....13

Using the EEPROM Control Wizard.....14

Wizard Tags.....17

Selftest Control Wizard Tags.....17

Jumper Control Wizard Tags.....18

History Control Wizard Tags.....18

EEPROM Control Wizard Tags18

Index..... 21

K2U Alarmboard Wizards User's Guide

Before You Begin

About this Guide

This *K2U Alarmboard Wizards User's Guide* provides information on how to use the K2U Alarmboard wizards to view and configure settings for the Kontron 2U Alarmboard.

It is assumed that you are familiar with the Kontron 2U Alarmboard and the Alarm2U DAServer.

Documentation Conventions

This documentation uses the following conventions:

Convention	Used for
Initial Capitals	Paths and filenames.
Bold	Menus, commands, dialog box names, and dialog box options.
Monospace	Code samples and display text.

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/468133051012006042>