

 **BOEING**
737-300/400/500
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
3					
- 20	65-54416-27		. DUCT INSTL-CONT CAB. ANTI-FOGGING POSITION DATA: LH FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-41-00-03 ICE & RAIN PROTECTION FOR DETAILS SEE 30-41-00-01	523929 938952 955955 991999	1
- 25	65-54416-24		. DUCT INSTL-CONT CAB. ANTI-FOGGING POSITION DATA: LH FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-41-00-03 ICE & RAIN PROTECTION FOR DETAILS SEE 30-41-00-01	930937 953954 956990	1
- 25	65-54416-26		. DUCT INSTL-CONT CAB. ANTI-FOGGING POSITION DATA: LH FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-41-00-03 ICE & RAIN PROTECTION FOR DETAILS SEE 30-41-00-01	523929 938952 955955 991999	1
- 30	65-52499-8		. DUCT INSTL-CONT CAB. FOOT OUTLET FOR DETAILS SEE: 21-22-11-02	930937 953954 956990	1
- 30	65-52499-10		. DUCT INSTL-CONT CAB. FOOT OUTLET FOR DETAILS SEE: 21-22-11-02	523929 938952 955955 991999	1
- 35	65-54415-1		. DIFFUSER INSTL-CONT CAB. OVERHEAD DISTR POSITION DATA: LH VARIABLE DRAWING REF: 65-54415-5003 FOR DETAILS SEE: 21-23-50-79	523937 953998	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

SWL

21-00-00-03

21-00-00
FIG. 03
PAGE 2
JUL 12/07

 **BOEING**
737-300/400/500
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
3					
- 35	65-54415-13		.DIFFUSER INSTL-OVHD DISTR CONT CAB. FOR DETAILS SEE: 21-23-50-89	938952 999999	1
- 40	65-54415-2		.DIFFUSER INSTL-CONT CAB. OVERHEAD DISTR POSITION DATA: RH VARIABLE DRAWING REF: 65-54415-5006 FOR DETAILS SEE: 21-23-50-79	523937 953998	1
- 40	65-54415-14		.DIFFUSER INSTL-OVHD DISTR CONT CAB. FOR DETAILS SEE: 21-23-50-89	938952 999999	1
- 45	65-54413-9		.DUCT INSTL-AIR CONDITIONING CONT CAB. FOR DETAILS SEE: 21-22-11-01	953953	1
- 45	65-54413-13		.DUCT INSTL-AIR CONDITIONING CONT CAB. FOR DETAILS SEE: 21-22-11-01	523952 954999	1
- 55	65-80988-7		.OUTLET INSTL-CREW CAB. COOLING AIR FOR DETAILS SEE: 21-22-00-02		1
- 70	65-84158-35		.DUCT INSTL-INST COOLING EXHAUST POSITION DATA: UP. FOR DETAILS SEE: 21-58-50-02	523524 930937 953991	1
- 75	65-84159-10		.DUCT INSTL-INSTR COOLING EXHAUST POSITION DATA: LWR FOR DETAILS SEE: 21-58-43-02		1
- 80	65-77460-2		.DUCT INSTL-ELEC EQUIP AIR DISTR OUTLET FOR DETAILS SEE: 21-22-00-06		1

ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE

- ITEM NOT ILLUSTRATED

SWL

21-00-00-03

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 03
PAGE 3
JUL 12/07

 **BOEING**
737-300/400/500
PARTS CATALOG (MAINTENANCE)

NON-ILLUSTRATED FIGURE

THE ITEMS REFLECTED IN THIS FIGURE ARE INTENTIONALLY
NON-ILLUSTRATED. THEY ARE REFERENCED TO EITHER A
NEXT HIGHER OR NEXT LOWER ASSEMBLY/INSTALLATION FIGURE.

EQUIPMENT INSTL-SECT. 53 AIR CONDITIONING
FIGURE 4

21-00-00-04

SWL
JUL 12/07

21-00-00-04
PAGE 0

 **BOEING**
737-300/400/500
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
4			EQUIPMENT INSTL-SECT. 53		
- 1	65-55853-1		AIR CONDITIONING EQUIPMENT INSTL-AIR CONDITIONING POSITION DATA: SECT. 53 VARIABLE DRAWING REF: 65-55853-5004 FOR NHA SEE: 53-10-00-04A		RF
- 10	65-54427-43		.SENSOR INSTL-TEMP POSITION DATA: MAIN CAB. FOR DETAILS SEE: 21-61-31-02	523525 930937 953992	1
- 15	65-55490-3		.NOZZLE INSTL-HEAT DISTR SYS POSITION DATA: FWD CARGO COMPT FOR DETAILS SEE: 21-43-11-01	953954	1
- 15	65-55490-4		.NOZZLE INSTL-HEAT DISTR SYS POSITION DATA: FWD CARGO COMPT FOR DETAILS SEE: 21-43-11-01	523952 955999	1
- 35	65-54425-11		.DUCT INSTL-CONT CAB. POSITION DATA: SECT. 53 FOR DETAILS SEE: 21-22-11-03		1
- 40	65-67949-5		.INLET INSTL-RAM AIR MODULATION POSITION DATA: LH FOR DETAILS SEE: 21-52-21-01		1
- 45	65-67949-6		.INLET INSTL-RAM AIR MODULATION POSITION DATA: RH FOR DETAILS SEE: 21-52-21-01		1
- 70	65-55304-12		.VENT INSTL-GALLEY POSITION DATA: FWD FOR DETAILS SEE: 21-23-17-03	523929 938952 991999	1

ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE

- ITEM NOT ILLUSTRATED

SWL

21-00-00-04

21-00-00
FIG. 04
PAGE 1
MAR 25/11

 **BOEING**
737-300/400/500
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
4					
- 85	65C27054-3		. DUCT INSTL-SIDEWALL RISER AIR DISTR FOR DETAILS SEE: 21-23-50-30A	523525 930937 953993	1
- 90	65-55805-2		. PORT INSTL-EQUIP. COOLING SYS EXH FOR DETAILS SEE: 21-58-31-01		1
- 95	65-74548-1		. PLENUM INSTL-EQUIP. COOLING EXH PRE SERVICE BULLETIN: 21-1112 FOR DETAILS SEE: 21-58-50-18	930937 953954 956990	1
- 100	65-55804-1		. BLOWER INSTL-ELECTRICAL AND ELECTRONIC COOLING PRE SERVICE BULLETIN: 21-1112 FOR DETAILS SEE: 21-58-12-02	930937 953954 956990	1
- 105	65-78229-13		. PLENUM INSTL-EQUIP. COOLING INLET FOR DETAILS SEE: 21-58-11-02	953953	1
- 105	65-78229-19		. PLENUM INSTL-EQUIP. PRE SERVICE BULLETIN: 21-1112 FOR DETAILS SEE: 21-58-11-02	930937 954954 956990	1
- 115	65C33230-1		. BAY INSTL-DISTR SYS FOR DETAILS SEE: 21-21-00-02 21-21-22-02 21-21-23-02 21-21-24-02 21-23-25-30A	523525 930937 953993	1
- 115	65C33230-6		. BAY INSTL-DISTR SYS FOR DETAILS SEE: 21-21-00-02 21-21-22-02 21-21-23-02 21-21-24-02 21-23-25-30A	526929 938952 994999	1
- 130	65C27374-3		. SUPPORT INSTL-SIDEWALL RISER AIR DISTR SYS FOR DETAILS SEE: 21-23-50-20L	953954	1

ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE

- ITEM NOT ILLUSTRATED

SWL

21-00-00-04

21-00-00
FIG. 04
PAGE 2
MAR 25/11


BOEING
 737-300/400/500
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
4 - 130	65C27374-4	.SUPPORT INSTL-SIDEWALL RISER AIR DISTR SYS FOR DETAILS SEE: 21-23-50-20L	523525 930937 955993	1

ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE

- ITEM NOT ILLUSTRATED

SWL

21-00-00-04

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
 FIG. 04
 PAGE 3
 MAR 25/11

NON-ILLUSTRATED FIGURE

THE ITEMS REFLECTED IN THIS FIGURE ARE INTENTIONALLY
NON-ILLUSTRATED. THEY ARE REFERENCED TO EITHER A
NEXT HIGHER OR NEXT LOWER ASSEMBLY/INSTALLATION FIGURE.

EQUIPMENT INSTL-SECT. 56 AIR CONDITIONING
FIGURE 5

21-00-00-05

SWL
JUL 12/07

21-00-00-05
PAGE 0

BOEING
737-300/400/500
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
5			EQUIPMENT INSTL-SECT. 56 AIR CONDITIONING		
- 1	65-55856-1		EQUIPMENT INSTL-AIR CONDITIONING POSITION DATA: SECT. 56 VARIABLE DRAWING REF: 65-55856-5004 FOR NHA SEE: 53-10-00-03		RF
- 10	65-51581-1		.CONNECTOR INSTL-PNEU START FOR DETAILS SEE: 80-11-05-02	523524 930937	1
- 10	65-51581-3		.CONNECTOR INSTL-PNEU START FOR DETAILS SEE: 80-11-05-02	953991 525929 938952	1
- 15	65-51576-7		.MANIFOLD INSTL-AIR COND AND T.A.I. POSITION DATA: SECT 56 FOR DETAILS SEE: 36-05-50-01	992999 953954	1
- 15	65-51576-9		.MANIFOLD INSTL-AIR COND AND T.A.I. POSITION DATA: SECT 56 FOR DETAILS SEE: 36-05-50-02	523952 955999	1
- 20	65-51586-31		.INSULATION INSTL-APU MANIFOLD THRM VARIABLE DRAWING REF: 65-51586-34 FOR DETAILS SEE: 36-19-25-03	953954 956990	1
- 20	65C36704-1		.INSULATION INSTL-AFT CARGO COMPT APU DUCT FOR DETAILS SEE: 36-19-25-05	523952 955955 991999	1
- 25	65-51573-15		.MANIFOLD INSTL-APU AIR VARIABLE DRAWING REF: 65-51573-16 FOR DETAILS SEE: 36-19-15-05	953954 956990	1
- 25	65-51573-25		.MANIFOLD INSTL-APU AIR FOR DETAILS SEE: 36-19-15-12	523952 955955 991999	1
- 25	65-51573-44		.MANIFOLD INSTL-APU AIR FOR DETAILS SEE: 36-19-15-10	523952 955955 991999	1

ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE

- ITEM NOT ILLUSTRATED

SWL

21-00-00-05

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 05
PAGE 1
JUL 12/07

 **BOEING**
737-300/400/500
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
5					
- 30	65-51200-9		.MODULATION INSTL-RAM AIR SYS EXH POSITION DATA: LH FOR DETAILS SEE: 21-52-11-01 21-61-83-02	953954	1
- 30	65-51200-11		.MODULATION INSTL-RAM AIR SYS EXH POSITION DATA: LH FOR DETAILS SEE: 21-52-11-01 21-61-83-02	930937 956990	1
- 30	65-51200-17		.MODULATION INSTL-RAM AIR SYS EXH POSITION DATA: LH FOR DETAILS SEE: 21-52-11-01 21-61-83-02	523524 955955 991992	1
- 30	65-51200-19		.MODULATION INSTL-RAM AIR SYS EXH POSITION DATA: LH FOR DETAILS SEE: 21-52-11-01 21-61-83-02	525929 938952 993999	1
- 35	65-51200-10		.MODULATION INSTL-RAM AIR SYS EXH POSITION DATA: RH FOR DETAILS SEE: 21-52-11-01 21-61-83-02	953954	1
- 35	65-51200-12		.MODULATION INSTL-RAM AIR SYS EXH POSITION DATA: RH FOR DETAILS SEE: 21-52-11-01 21-61-83-02	930937 956990	1
- 35	65-51200-18		.MODULATION INSTL-RAM AIR SYS EXH POSITION DATA: RH FOR DETAILS SEE: 21-52-11-01 21-61-83-02	523524 955955 991992	1

ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE

- ITEM NOT ILLUSTRATED

SWL

21-00-00-05

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 05
PAGE 2
MAR 25/09

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/486104035002010143>