



3. WIRING DIAGRAM


(a) Navigation System Wiring Diagram (LHD Models):

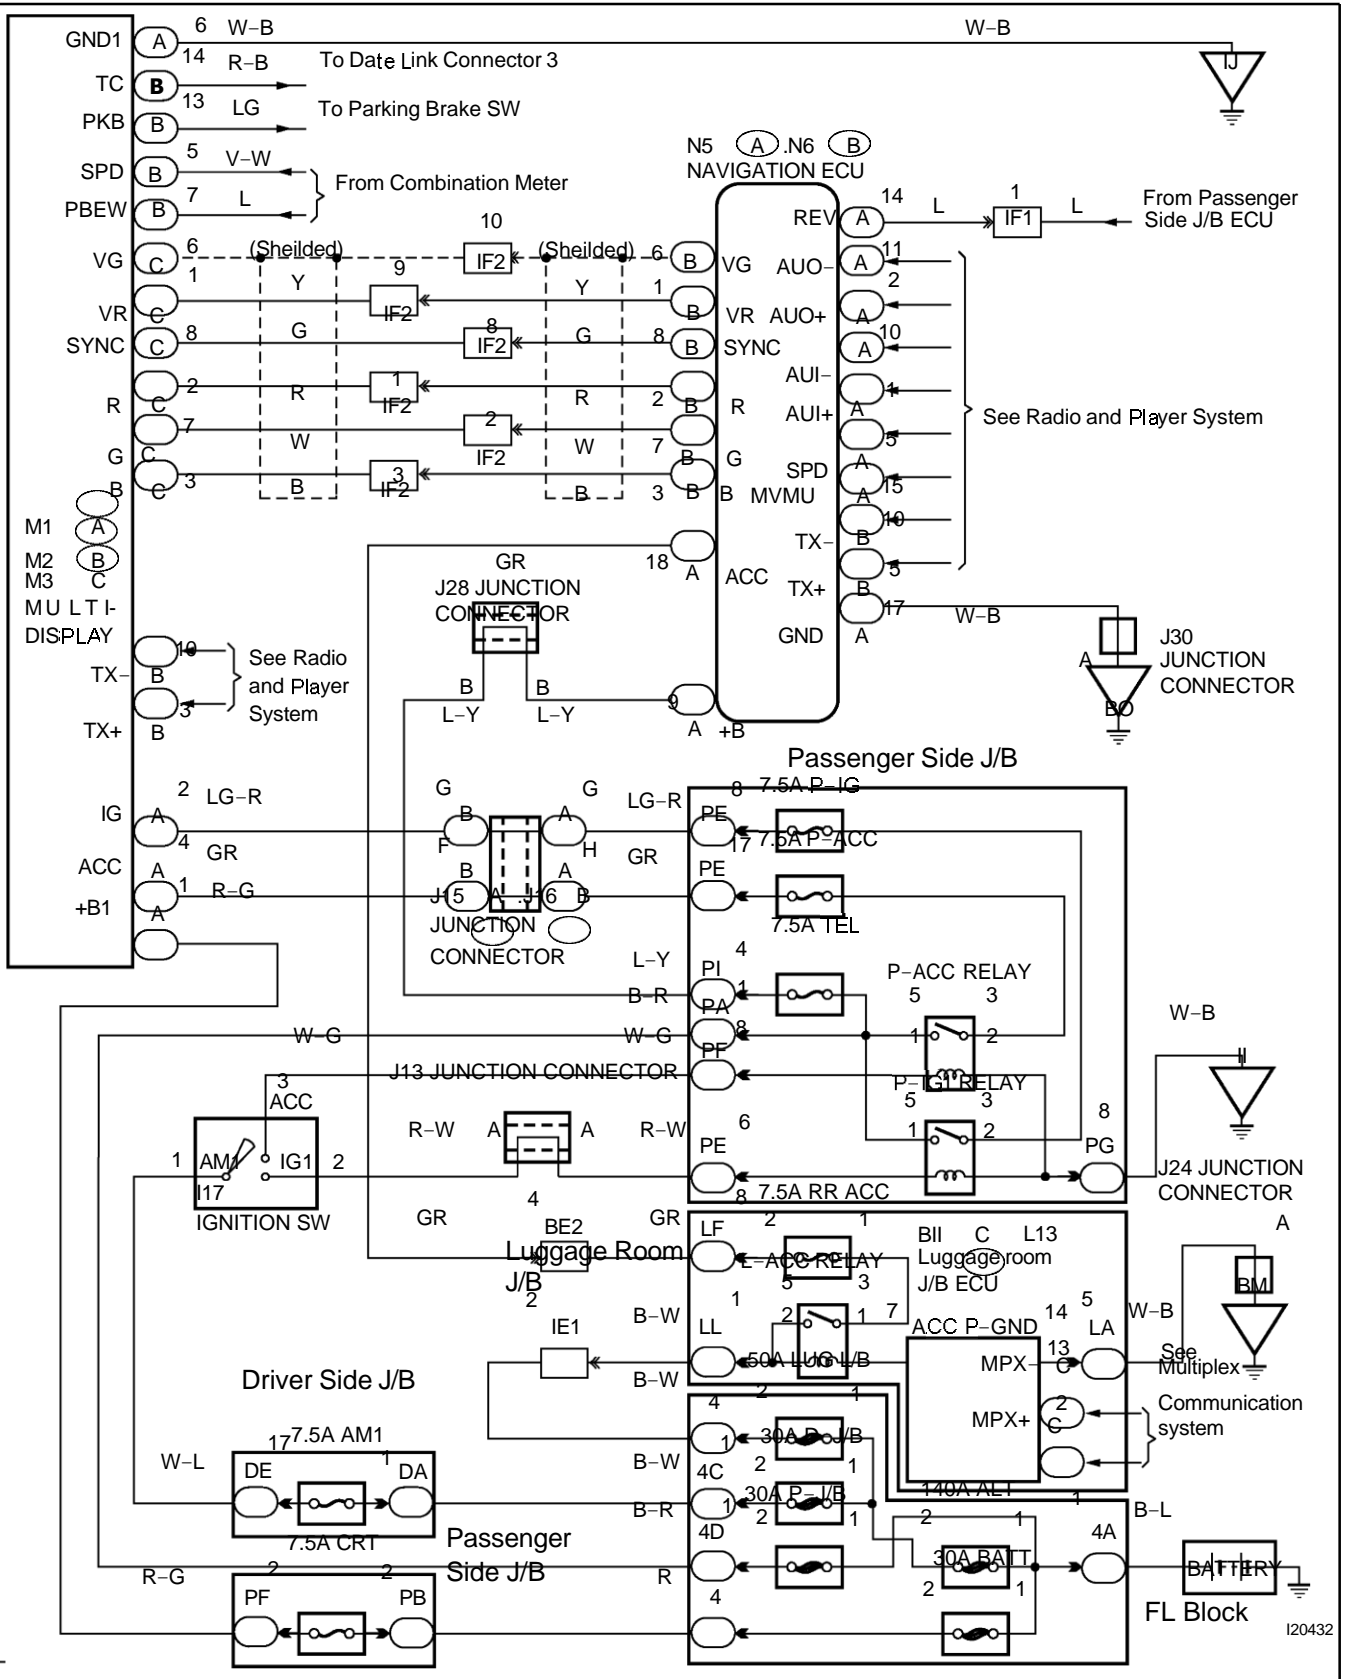

(b) Navigation System Wiring Diagram (RHD Models):

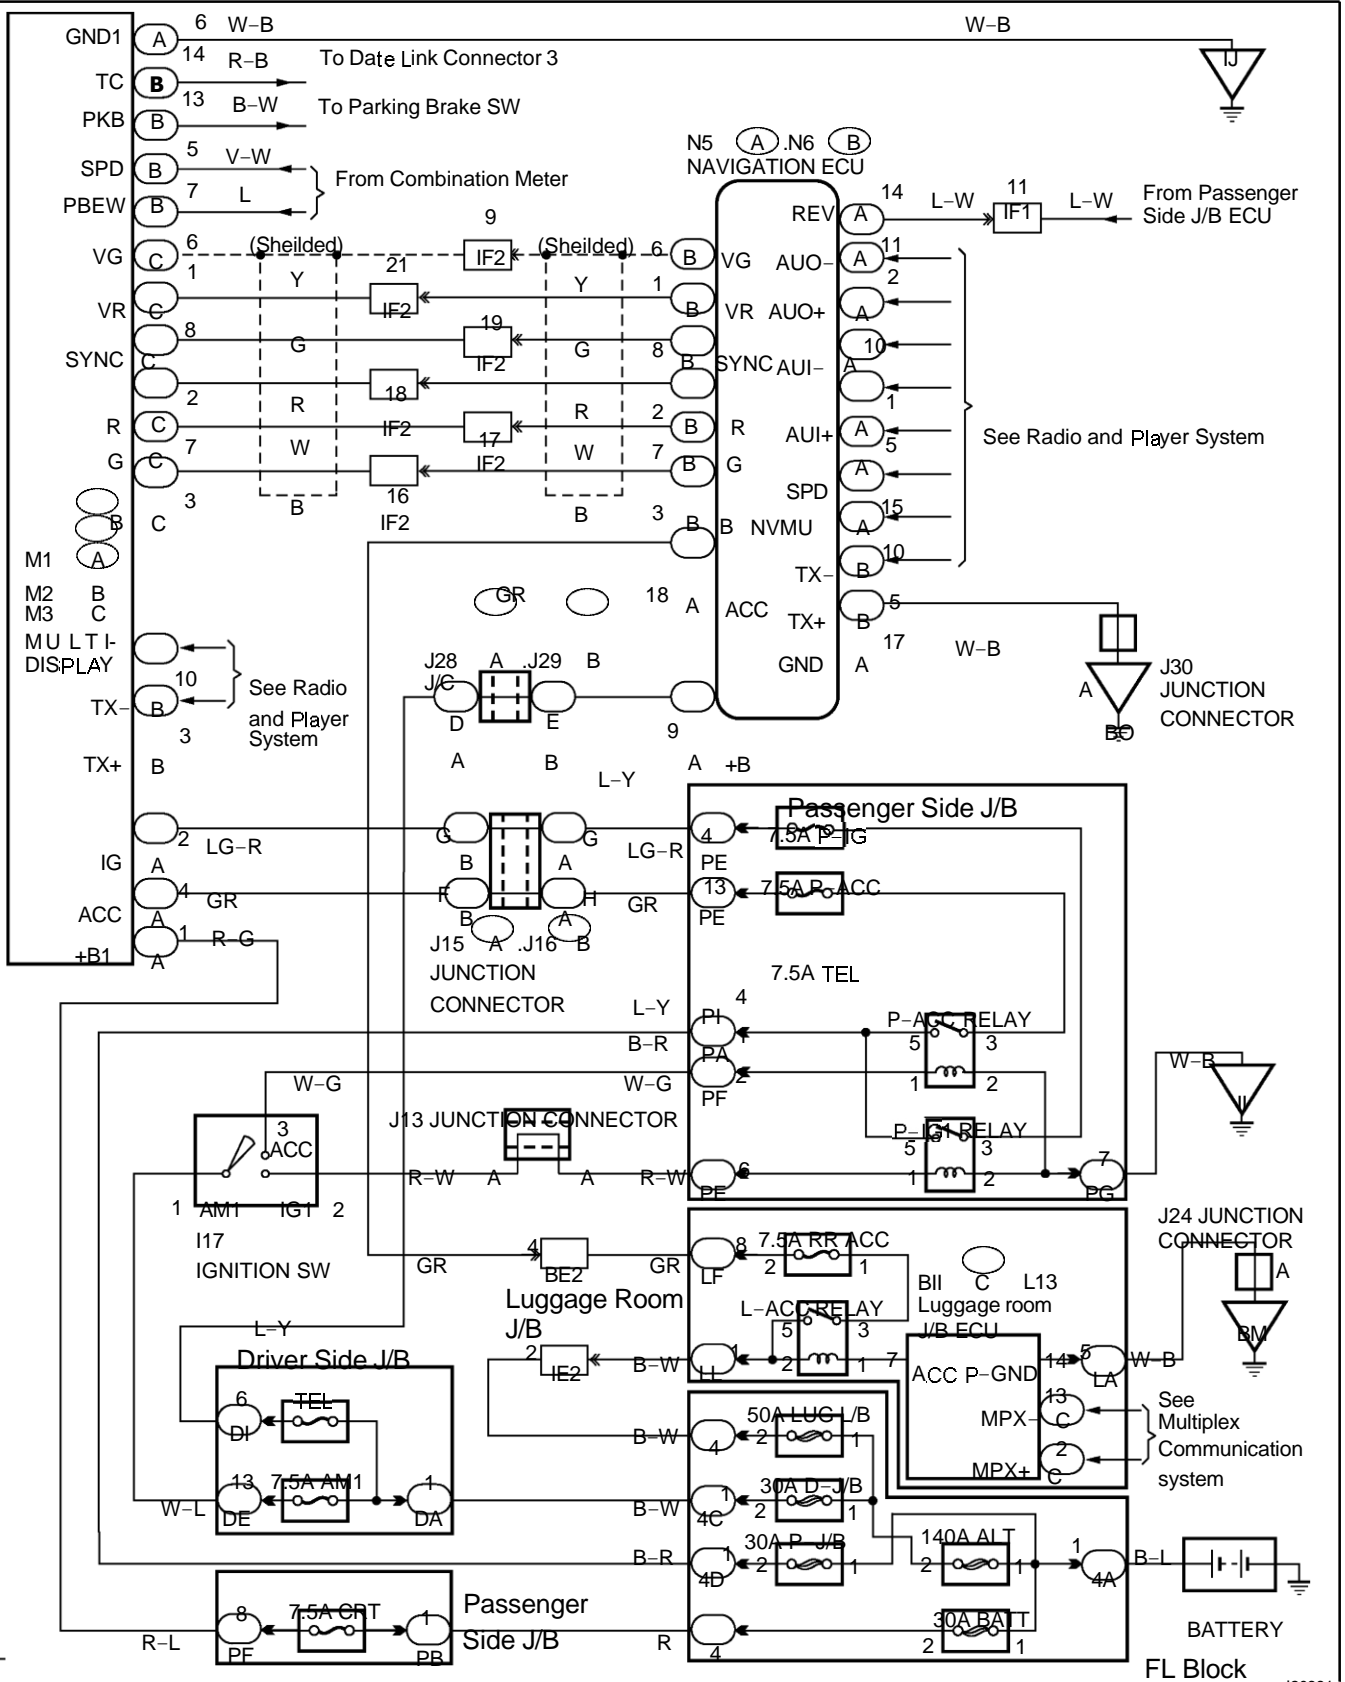


(c) Audio System Wiring Diagram (LHD Models):

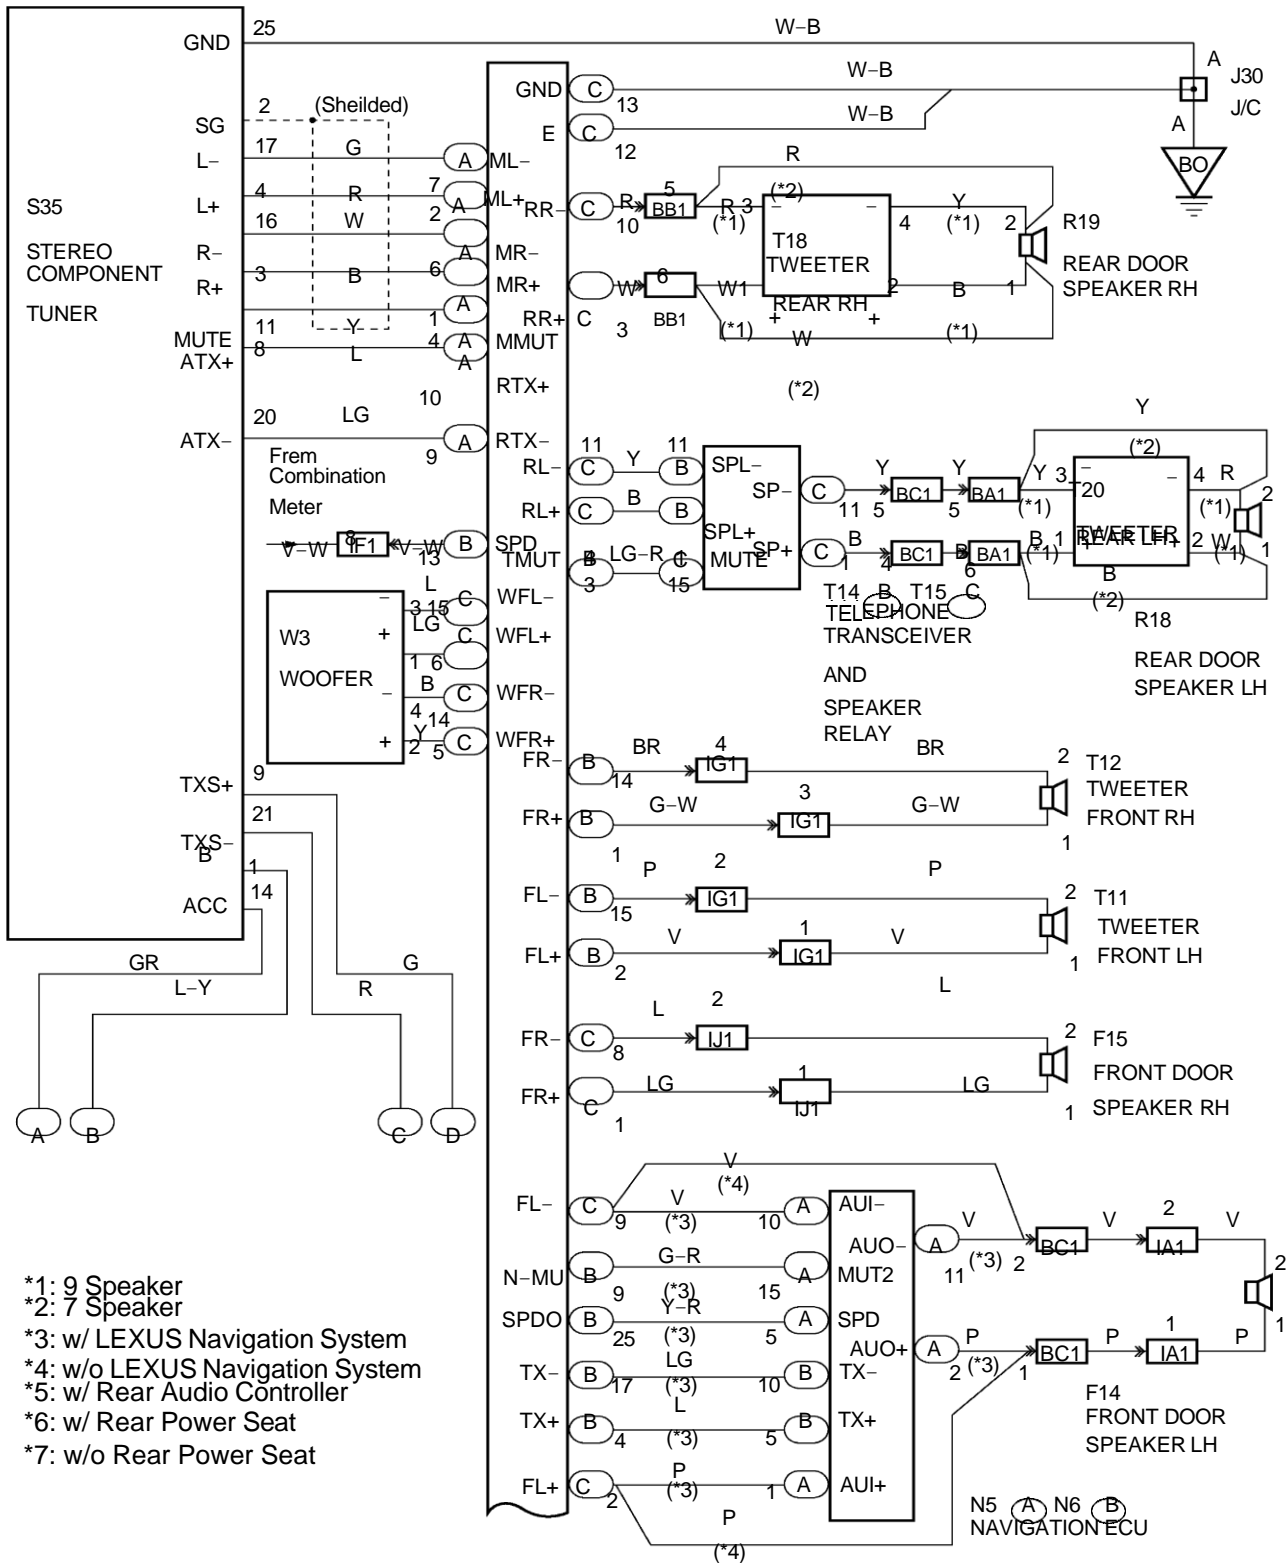


- *1: 9 Speaker
- *2: 7 Speaker
- *3: w/ LEXUS Navigation System
- *4: w/o LEXUS Navigation System
- *5: w/ Rear Audio Controller
- *6: w/ Rear Power Seat
- *7: w/o Rear Power Seat

T

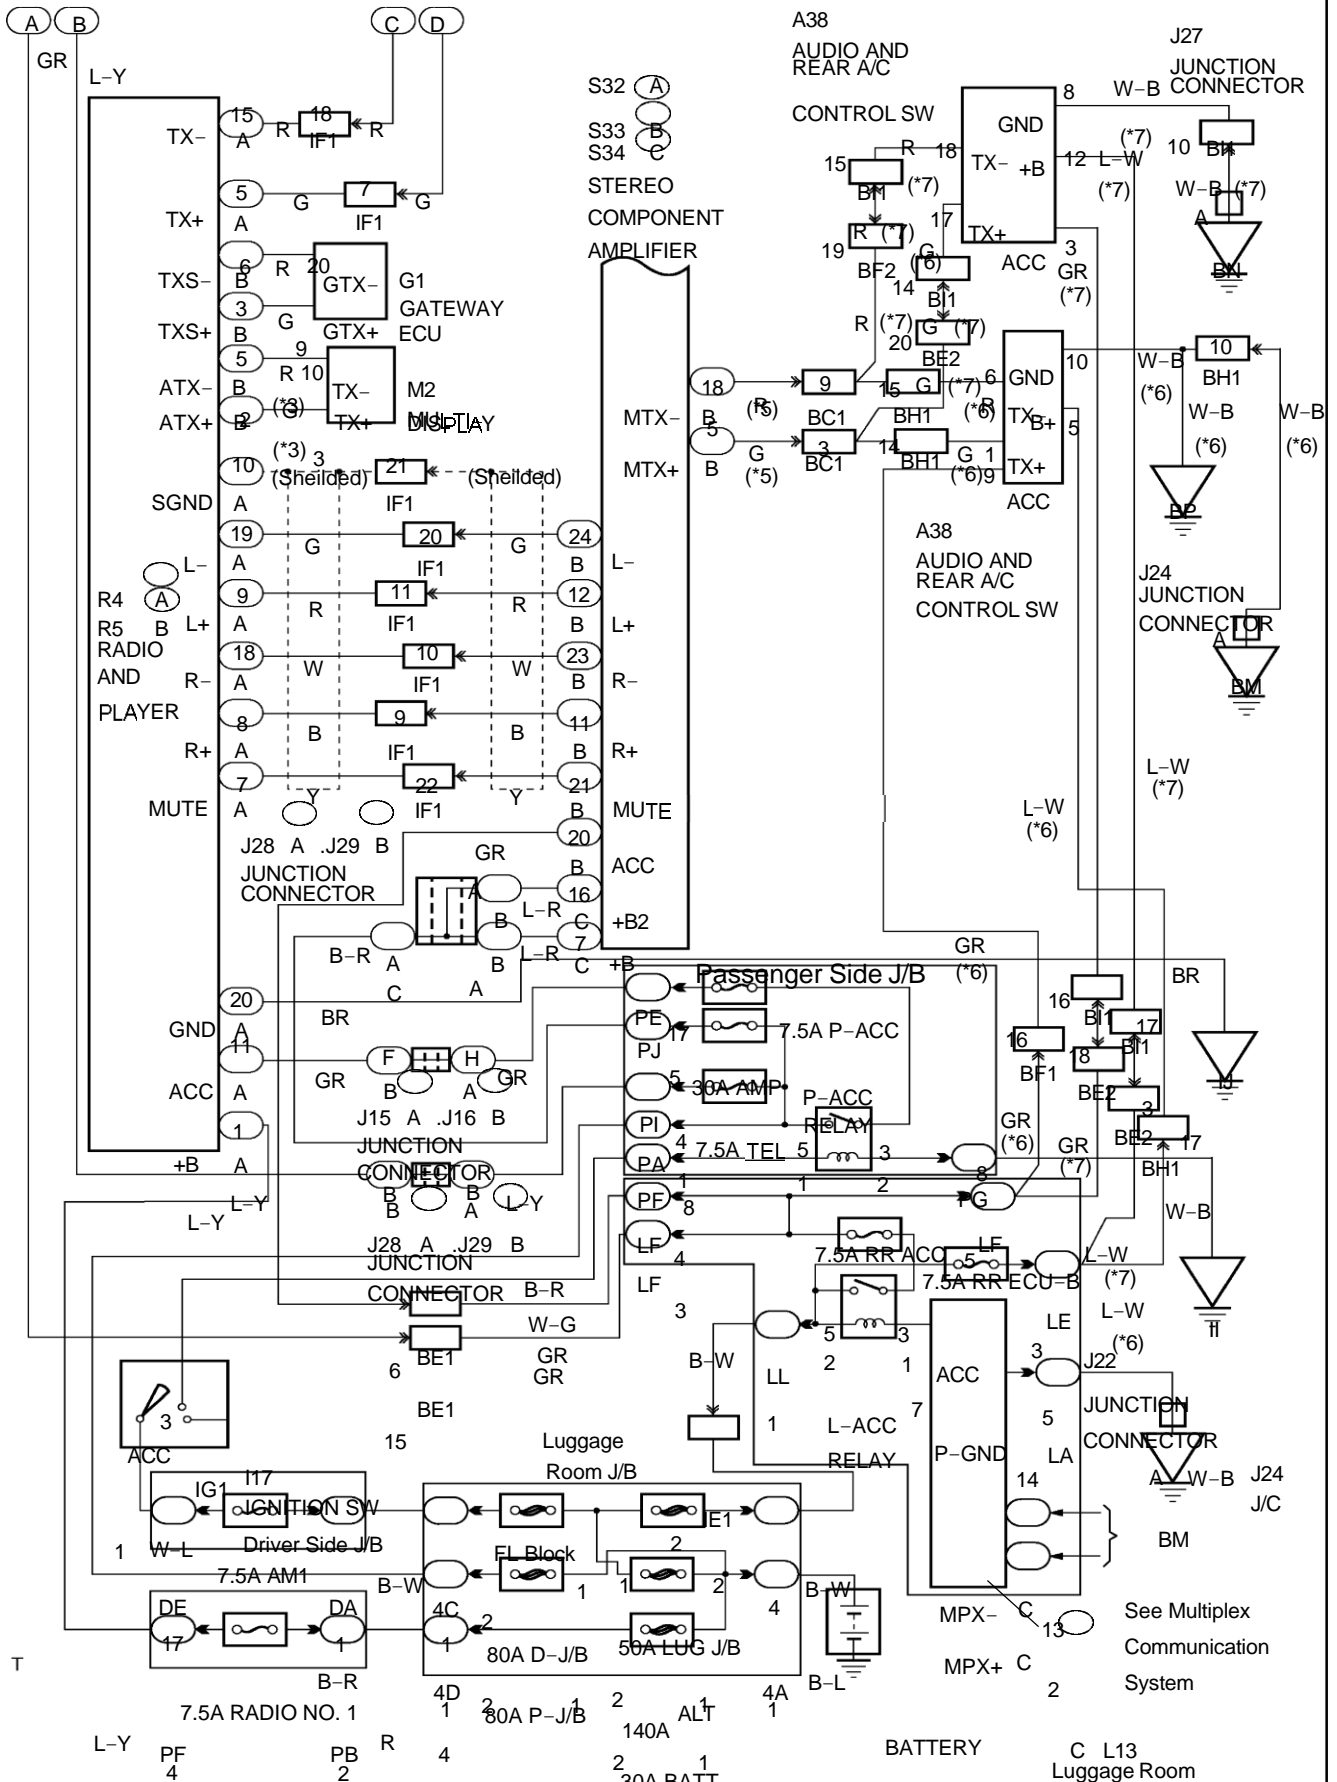


(d) Audio System Wiring Diagram (RHD Models):

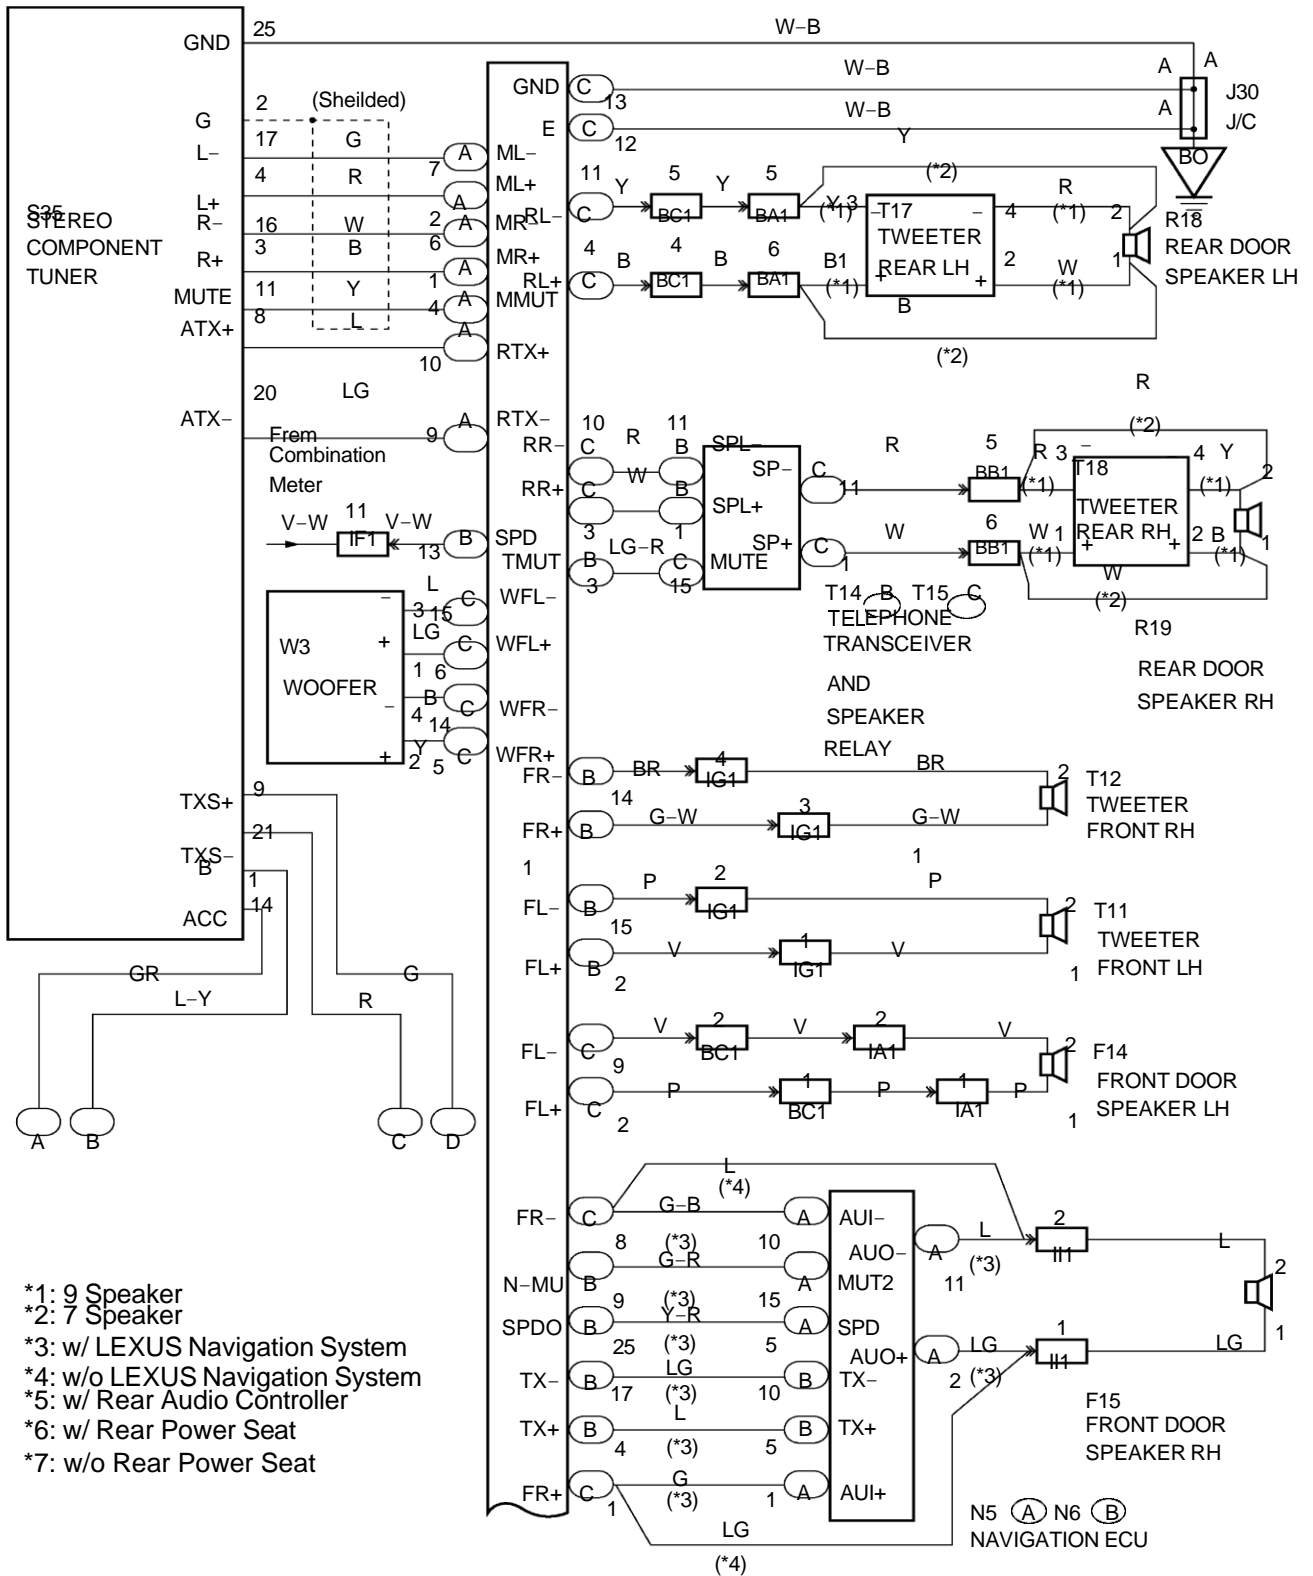

T

(e) Cellular Mobile Telephone System Wiring Diagram:

Europe Model

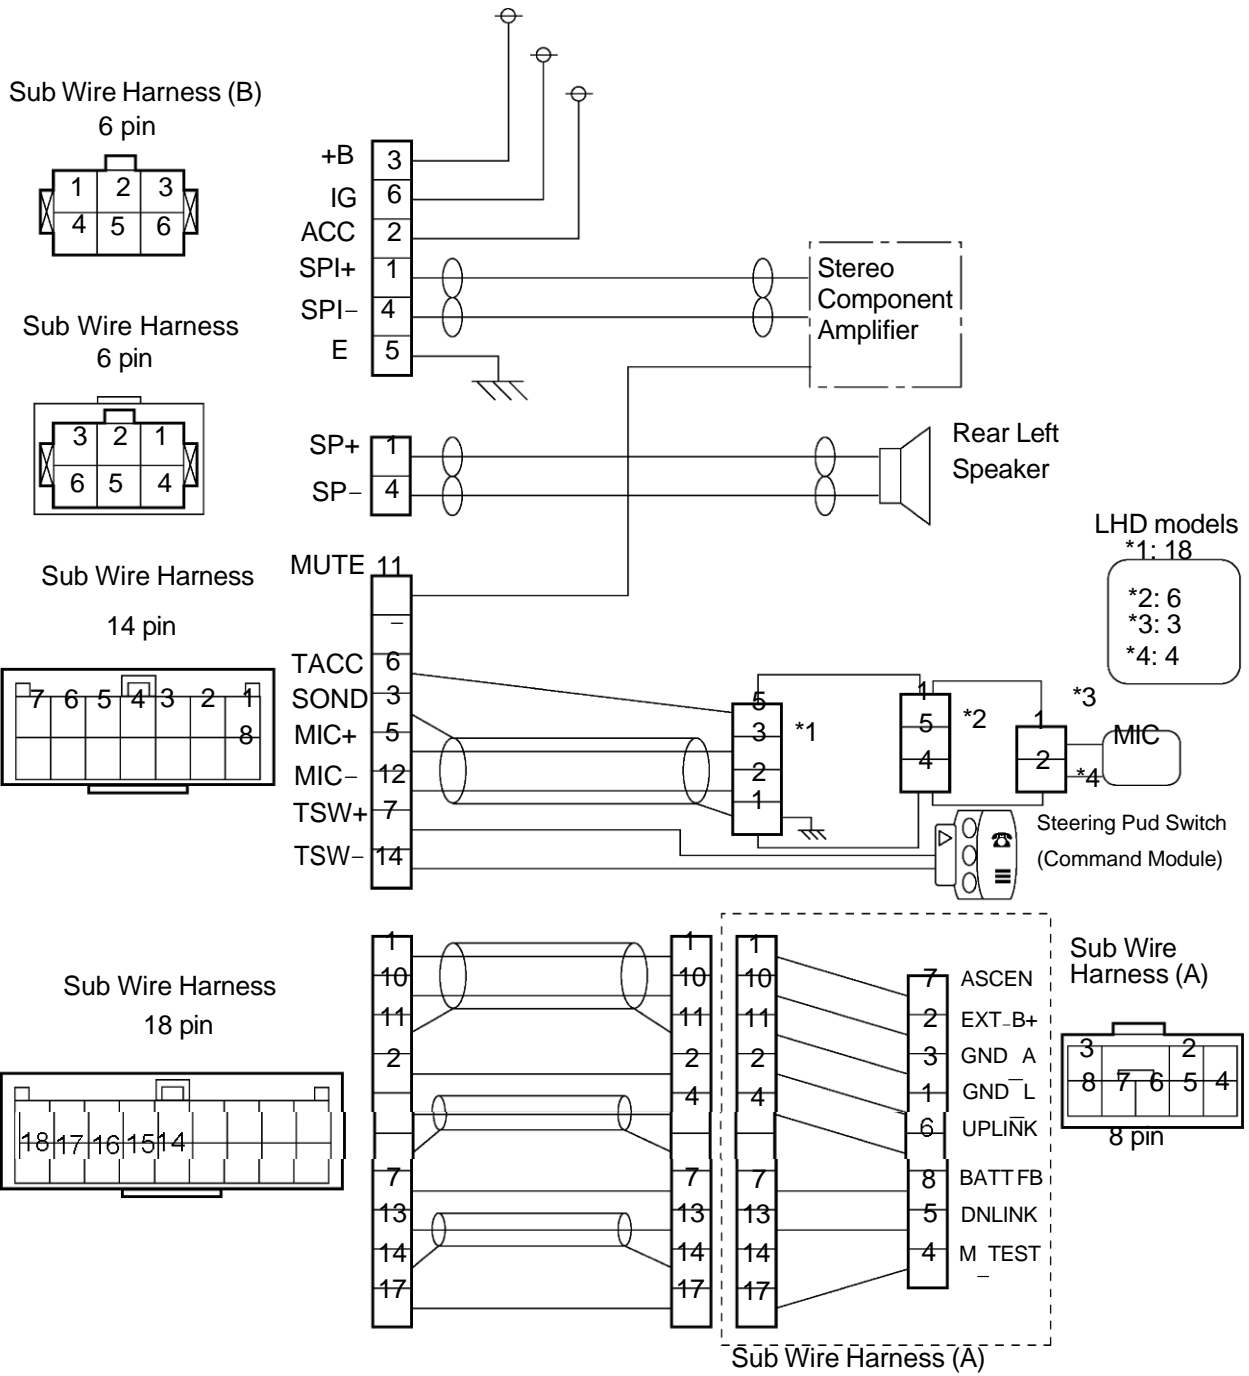


T

4. DIAGNOSIS SYSTEM MODE

HINT:

Diagnosis System Mode is operated as follows.

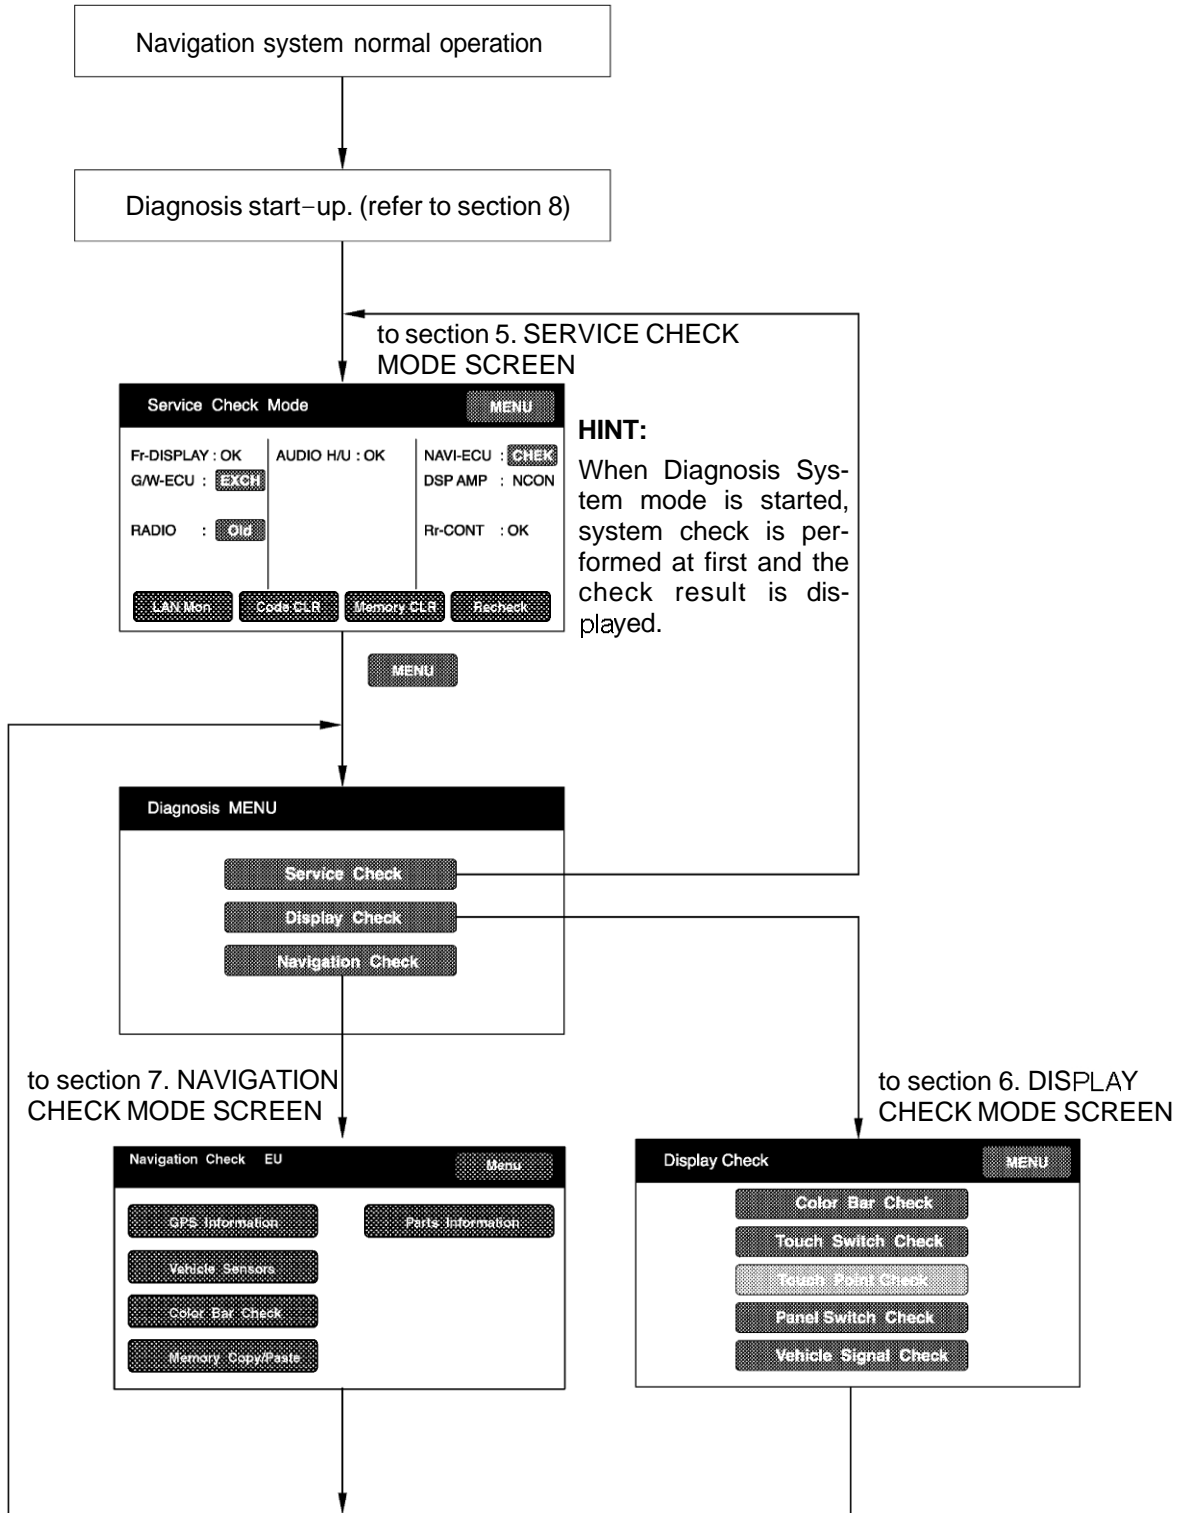


(a) Start-up and finishing of the diagnosis

HINT:

Before starting the Diagnosis System, make sure that the map appears on the screen after turning on the IG switch.

If not, some items cannot be checked.

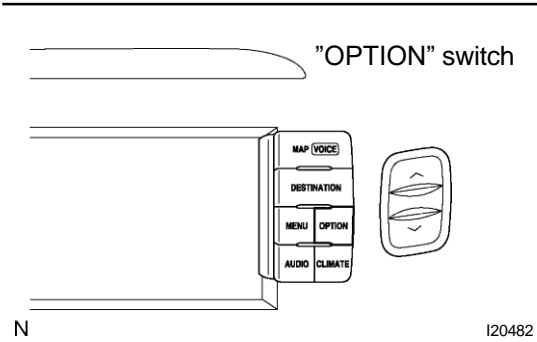


(b) Diagnosis Start-up by light control switch.

- (1) Vehicle speed should be 0 km/h (0 mph).
- (2) Apply the parking brake.
- (3) Turn the ignition switch to ACC or ON.
- (4) While pressing the "OPTION" switches on the Multi Display, turn the Light Control switch from OFF TAIL OFF TAIL OFF TAIL OFF.

Display	Description
Service Check	By performing system check and collecting data of diagnosis memory, this mode checks the current and past condition of each connection device.
Display Check	It displays the Display Check on the screen.
Navigation Check	It displays the Navigation ECU Check on the screen.

HINT:

- ⌘ When Diagnosis System starts, Service Check screen is displayed and the service check begins.
- ⌘ Select MENU to display Diagnosis Check Menu.

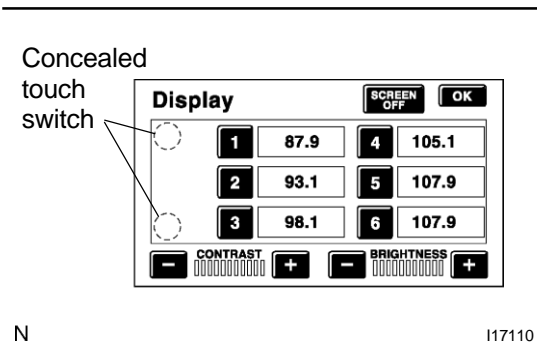

(c) Diagnosis Start-Up by touch switch.

- (1) Vehicle speed should be 0 km/h (0 mph).
- (2) Apply the parking brake.
- (3) Turn the ignition switch to ACC or ON.
- (4) Activate the screen adjustment screen.
- (5) Alternately touch the upper and lower bottom parts of the left end of the screen 3 times.

(d) Finishing the Diagnosis System

Turn the ignition switch off to finish the mode.

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/557160154061006043>