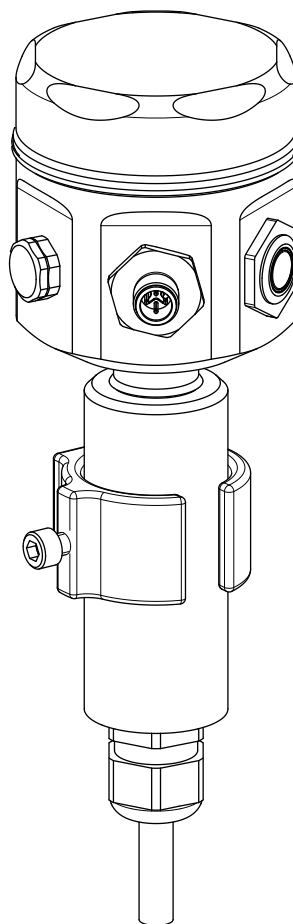


Operating Instructions

Liquicap FTZ61

Transmitter for foam detection in single-use bioreactors



- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser sales organization will supply you with current information and updates to this manual.

Table of contents

1	About this document	4	7.4	Change calibration	19
1.1	Document function	4	8	Operation	20
1.2	Symbols	4	8.1	Push button for empty calibration	20
1.2.1	Safety symbols	4	8.2	Human interface and display elements	21
1.2.2	Symbols for certain types of information	4	9	Diagnostics and troubleshooting	23
1.2.3	Symbols in graphics	5	9.1	Fault diagnostics	23
1.2.4	Electrical symbols	5	9.2	Error current/Warning	24
1.2.5	Symbols on device	5	10	Maintenance and servicing	25
1.3	Documentation	5	10.1	Cleaning the housing	25
2	Safety instructions	6	10.2	Disposal information	25
2.1	Intended use	6	11	Technical data	26
2.2	Installation, commissioning and operation	6	11.1	Power supply	26
2.3	Workplace safety	6	11.2	Data cable	26
2.3.1	Hazardous areas	6	11.3	Sensor cable	26
2.4	Operational safety	6	11.4	Input	27
2.5	Product safety	7	11.5	Output	27
3	Product description	8	11.6	Performance characteristics	27
3.1	Product design	8	11.7	Operating conditions: Environment	27
3.2	Data cable	8	11.8	Mechanical construction	28
3.3	Mounting bracket	9	12	Declarations	29
3.4	Function	10	Index		30
4	Incoming acceptance	11			
4.1	Scope of delivery	11			
4.2	Incoming acceptance test	11			
4.3	Storage	11			
4.4	Consumables	11			
5	Installation	12			
5.1	Mounting	12			
5.2	Installation	12			
5.3	Dimensions	13			
5.4	Post installation check	15			
6	Electrical connections	16			
6.1	Connecting the device	16			
6.1.1	Potential equalization	16			
6.1.2	Connector	16			
6.1.3	Failure information	16			
6.1.4	Connecting procedure	17			
6.2	Connecting the sensor	17			
6.3	Post connection check	17			
6.3.1	Sealing the housing	17			
7	Commissioning	18			
7.1	Installation and function check	18			
7.2	Empty calibration	18			
7.3	Full calibration	18			

1 About this document

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols

DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

CAUTION

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol alerts you to a potentially harmful situation. Failure to avoid this situation can result in damage to the product or something in its vicinity.

1.2.2 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation.
	Reference to page.
	Reference to graphic.
	Notice or individual step to be observed.
	Series of steps.
	Result of a step.

 
 
1.2.3 Symbols in graphics

Symbol	Meaning
1, 2, 3 ...	Item numbers
1 , 2 , 3 ...	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections

1.2.4 Electrical symbols

Symbol	Meaning
	Ground connection A grounded terminal which is grounded via a grounding system.
	Protective ground connection A terminal that has to be grounded before other connections can be made.

1.2.5 Symbols on device

Symbol	Meaning
	Documentation Reference to device documentation.
	Temperature resistance of the connecting cables Indicates that the connecting cables must be able to withstand temperatures of at least 85 °C (185 °F).

1.3 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/585010300122011222>