

Drives

User Guide

© Copyright 2009 Hewlett-Packard
Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: June 2009

Document Part Number: 534274-001

Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.

Table of contents

1 Identifying installed drives

2 Handling drives

3 Using an optical drive (select models only)

Identifying the installed optical drive	3
Using optical discs (CDs and DVDs)	4
Selecting the right disc (CDs and DVDs)	5
CD-R discs	5
CD-RW discs	5
DVD±R discs	5
DVD±RW discs	5
LightScribe DVD+R discs	5
Playing a CD or DVD	6
Copying or creating a CD or DVD	7
Removing an optical disc (CD or DVD)	8
The optical disc tray does not open for removal of a CD or DVD	9

4 Using external drives

Using optional external devices	11
---------------------------------------	----

5 Replacing the hard drive

Index	15
-------------	----

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/618054004143006116>