

hp
I1581a
advanced connectivity
module



user's guide

Notice

This manual and any examples contained herein are provided “as is” and are subject to change without notice. Hewlett-Packard Company makes no warranty of any kind with regard to this manual, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard Company shall not be liable for any errors or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual or the examples herein.

Consumer transactions in Australia and the United Kingdom: The above disclaimers and limitations shall not apply to consumer transactions in Australia and the United Kingdom and shall not affect the statutory rights of consumers.

© Copyright 2003, 2004 Hewlett-Packard Development Company, LP. Reproduction, adaptation or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The programs that control this product are copyrighted and all rights are reserved. Reproduction, adaptation, or translation of those programs without prior written permission of Hewlett-Packard Company is also prohibited.

Portions of the programs that control this product might also be copyrighted by MARGI Systems, Inc. See the individual programs for additional copyright notices.

This product uses open-source software.

Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corporation. Adobe® and Acrobat® are trademarks of Adobe Systems Incorporated. Presenter-to-Go® and MARGI® are trademarks of MARGI Systems, Inc.

Hewlett-Packard Company
Digital Projection and Imaging
1000 NE Circle Blvd.
Corvallis, OR 97330

Third Edition (October 2004)
Firmware Version 2.1

1 Setting Up the Projector

What's in the Box?	8
Identifying Features of the Module	9
Setting Up the Module	10
To install the connectivity module	10
To install a CompactFlash wireless card	12
To set up the projector for wired network access	13
To set up the projector for a wireless connection	15

2 Presenting from a Networked Computer

Preparing for Presentations	17
To prepare your computer for networked presentations	18
To set up your computer for a wired network connection (optional)	18
To set up your computer for a wireless connection (optional)	20
Showing Presentations	23
To start a presentation	24
To stop showing your presentation	25
To include other presenters	26
To disconnect and free the projector	27

3 Presenting from a Wireless Handheld Organizer

Preparing for Presentations	29
To prepare your handheld organizer for wireless presentations	29
To create a mobile presentation	30
Showing Presentations	32
To make a wireless connection	32
To start a presentation	34
To disconnect and free the projector	35

4 Presenting from a Memory Card

Preparing for Presentations	37
To store a presentation	37
To prepare your computer	39
To prepare a PowerPoint presentation	39
To create mobile presentations	40
Showing Presentations	41
To insert a memory card in the projector	41
To present from a memory card	41
To stop a memory card presentation	45

5 Maintaining the System

Managing the Projector	47
To find the projector's address	47
To manage the projector using the on-screen menu	48
To manage the projector from the Web	49
Upgrading the System	51
To update the firmware	51

6 Fixing the System

Troubleshooting Suggestions	53
Connection problems	53
Setup problems	56
Presentation problems	57
Memory card problems	59
Hardware problems	61
Testing the Projector	62
To run the projector diagnostics	62

7 Reference

Specifications	63
Safety Information	64
Regulatory Information	65
U.S.A.	65
Canada	65
Japan	66

Korea 66

International 67

Index

Setting Up the Projector

This chapter explains how to install and set up the module with the projector.

- “What’s in the Box?” on page 8
- “Identifying Features of the Module” on page 9
- “Setting Up the Module” on page 10




Get more from your presentations with HP projector accessories. You can purchase accessories at www.hp.com or through your projector dealer.

- **HP ceiling mount kit** enables you to simply and discreetly install your projector on the ceiling.
 - **HP mobile screens** with built-in handles are easy to carry and set up anywhere you need them.
 - **HP power cables** allow you to connect in any region.
 - **HP cables** allow you to connect all audio-video equipment.
 - **HP replacement lamp** brings your projector up to factory-fresh brightness.
-


What's in the Box?

Before setting up your projector, be sure your shipping box includes the following items. If the shipping box is missing any of the following items, contact HP.

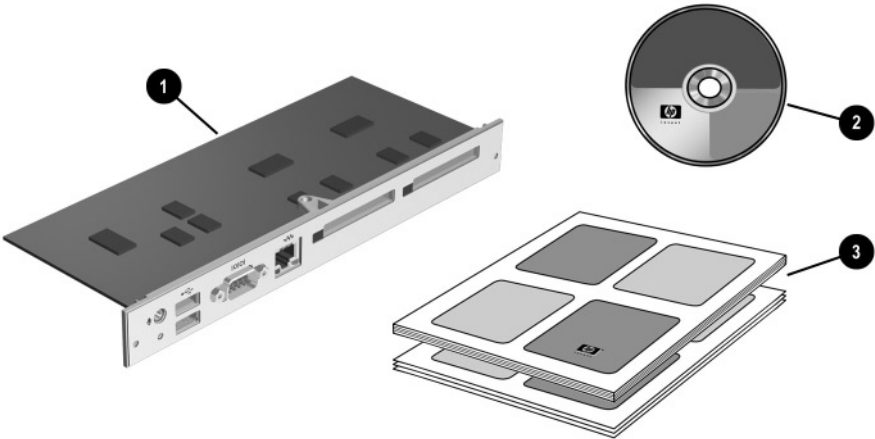

Symbol	Item	Function
❶	Advanced connectivity module	Adds advanced presentation options to the projector.
❷	Software and documentation CD	Contains software and documentation for the module.
❸	Setup, support, and warranty documentation	Provides documentation to help get started and find support.

Identifying Features of the Module

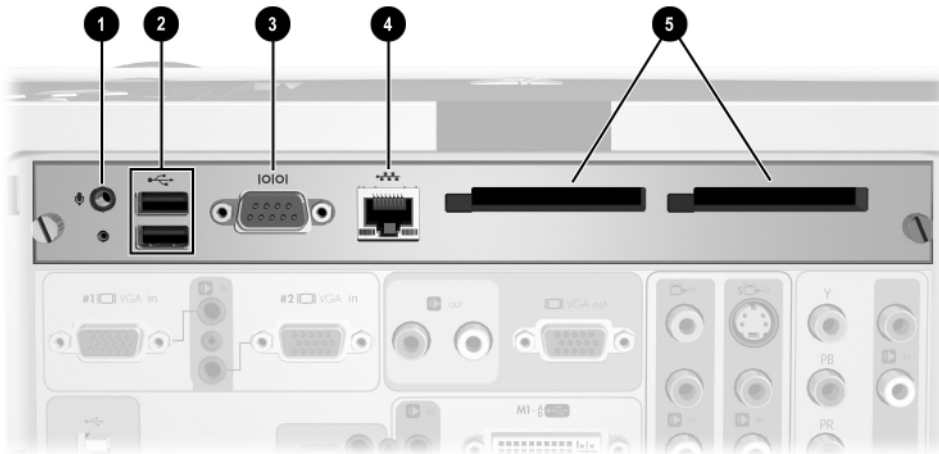

Symbol	Item	Function
①	Microphone input port	Reserved for future use.
②	USB ports	Connects USB memory card, mouse or keyboard.
③	RS232 port	Connects control equipment.
④	LAN port	Connects the projector to a network.
⑤	CompactFlash card slots	Accepts CompactFlash Type I and Type II cards.

Setting Up the Module

This section describes how to set up the module.

- “To install the connectivity module” on page 10
- “To install a CompactFlash wireless card” on page 12
- “To set up the projector for wired network access” on page 13
- “To set up the projector for a wireless connection” on page 15


To install the connectivity module

1. Turn off the projector and, after it cools, unplug the power cord.
2. Open the lid ❶, then remove the screw directly behind the back infrared receiver ❷.
3. Loosen the two thumb screws ❸ from the faceplate of the connectivity module.
4. Pull on the two thumb screws until the module releases from the projector ❹.
5. Remove the old connectivity module from the back of the projector and install the new connectivity module.

6. Perform these steps in reverse order to install the new module, then connect power and turn on the projector.



If the projector displays a message saying you must update the firmware for the projector or accessory module, see “To update the firmware” on page 51. The projector might not work properly if the components have incompatible firmware.

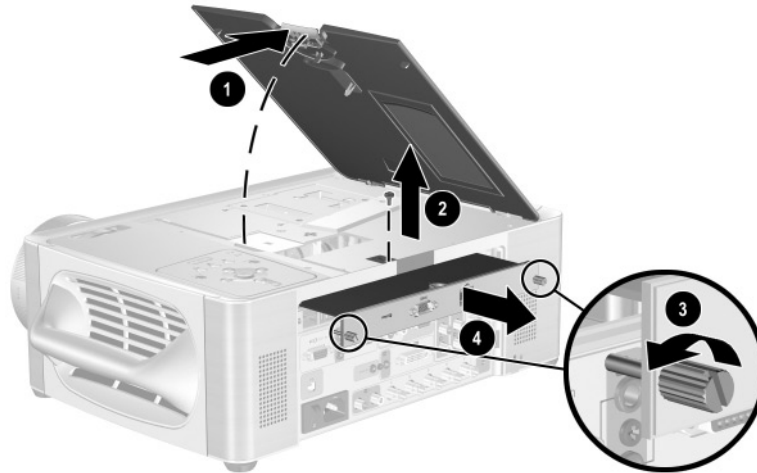

To install a CompactFlash wireless card


If you install a compatible CompactFlash wireless 802.11b networking card in the CompactFlash slot, you and other presenters can connect to the projector without using cables. The projector supports the HP L1640A CompactFlash 802.11b card—other cards might not be compatible. If this card is not available in your region, contact HP Support about possible options.

- Insert the CompactFlash wireless card into the slot with the top surface of the card facing up.



You can use only one CompactFlash wireless card.

To remove the card, push the button next to the slot to pop out the button, then push the button to eject the card.

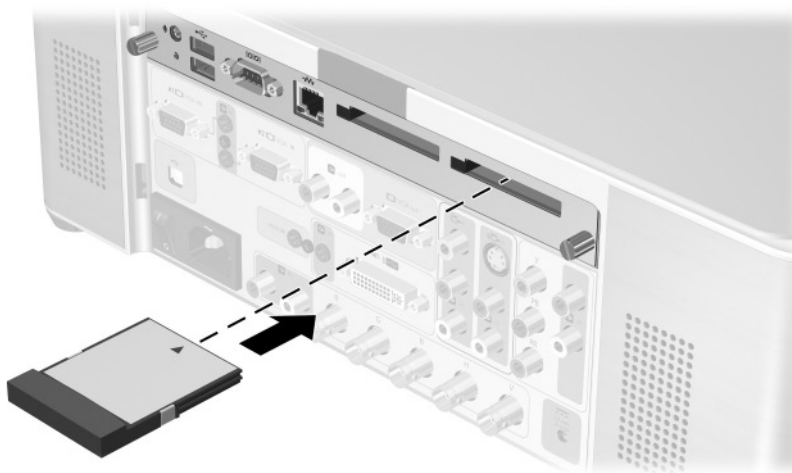

After installing the card, configure the card. See “To set up the projector for a wireless connection” on page 15.

For information about compatible computers and handheld organizers, see Chapter 2, “Presenting from a Networked Computer,” on page 17 and Chapter 3, “Presenting from a Wireless Handheld Organizer,” on page 29.

For information about installing CompactFlash memory cards, see Chapter 4, “Presenting from a Memory Card,” on page 37.

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/695112122344011303>