
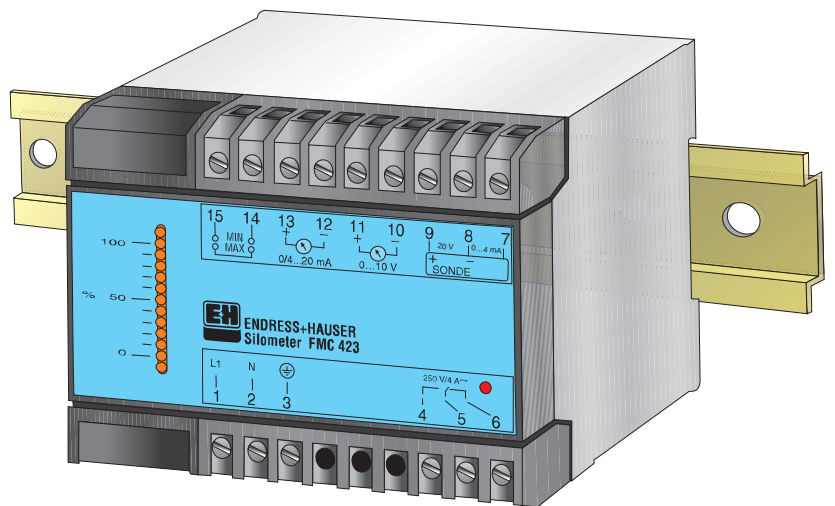


silometer FMC 423 Level measurement


Operating Instructions

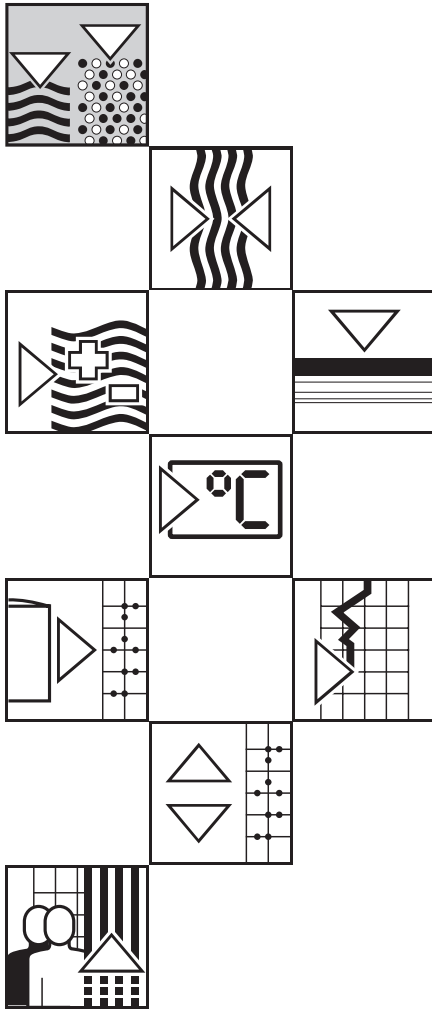


Short Instructions

Calibrating the analogue output

1. Basic settings

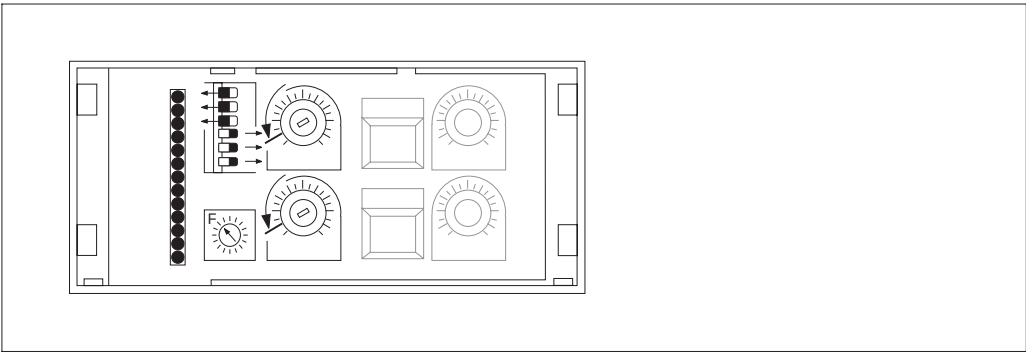

2. Calibration with **empty** vessel
(zero point calibration)

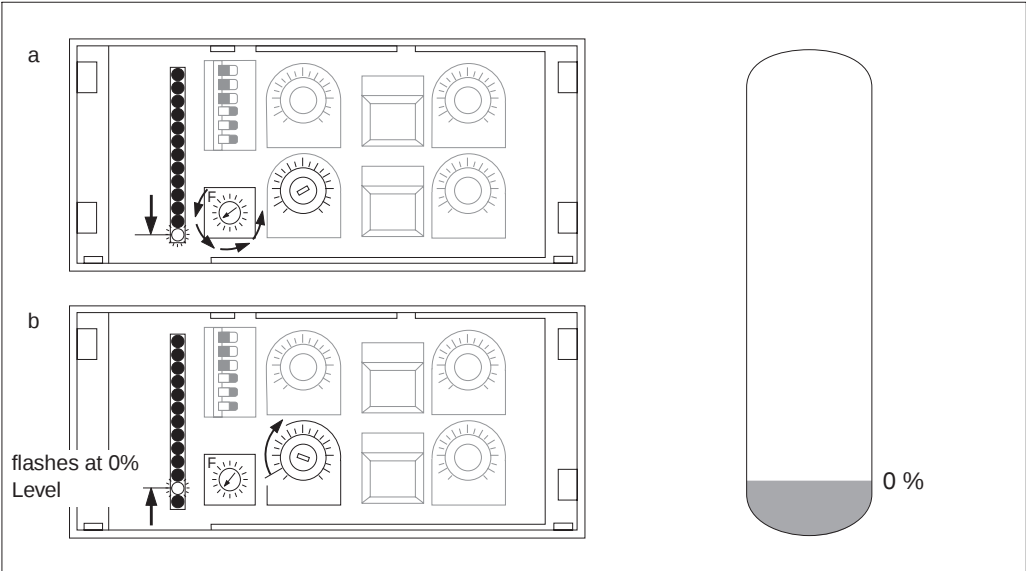

3. Calibration with **full** vessel
(span calibration)

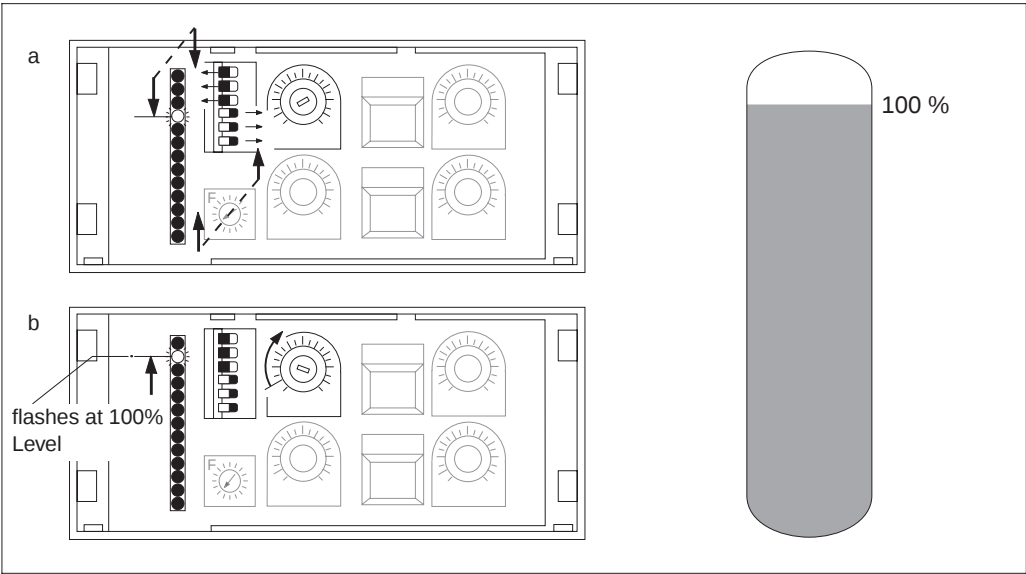


Table of Contents

1	Notes on Safety	4
1.1	Special notes on safety	4
1.2	General notes on safety	5
2	Application	6
2.1	The Measuring System	6
2.2	Functions	7
3	Mounting	8
4	Electrical Connection	9
5	Calibration	14
5.1	Preparing for calibration	14
5.2	Calibration with an empty vessel (0%)	15
5.3	Calibration with a full vessel	16
5.4	Calibrating the limit switch	17
6	Technical Data	18
7	Supplementary Documentation	19
8	Replacing an instrument	19

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/697142163051006116>