

连接到 WLC 的 console 口，启动超级终端或其它终端软件，把 com 口属性设置还原为默认值（如下图），点确定应用配置



回车进入命令行管理界面

```
o88b d888888b d8888 o88b d88b
d8P Y8 '88' 88' YP d8P Y8 8P Y8
8b 88 '8b' 8b 'Y8b 8b 88 88
Y8b d8 88 db 8D Y8b d8 '8b d8'
'Y88P' Y888888P '8888Y' 'Y88P' 'Y88P'
Model AS-4012 S/N: DZ11-10037700008-01025A
```

```
Booting Primary Image...
Press <ESC> now for additional boot options...
```

```
Boot Options
```

```
Please choose an option from below:
```

1. Run primary image (version 3.0.100.0) (active)
2. Run backup image (version 2.2.105.0)
3. Manually upgrade primary image
4. Change active boot image
5. Clear Configuration

```
Please enter your choice: █
```

选择 5，清除原有设置，并进行初始设置

Welcome to the Cisco Wizard Configuration Tool

Use the '-' character to backup

System Name [Cisco_40:4a:03]: **CI-CONTROLLER-01**

Enter Administrative User Name (24 characters max): **admin**

Enter Administrative Password (24 characters max): **minshenma**

Service Interface IP Address Configuration [none][DHCP]: **192.168.1.1**

Management Interface IP Address: **10.1.128.101**

Management Interface Netmask: **255.255.255.0**

Management Interface Default Router: **10.1.128.254**

Management Interface VLAN Identifier (0 = untagged): **128**

Management Interface DHCP Server IP Address: **10.1.32.1**

AP Manager Interface IP Address: **10.1.128.103**

AP Manager Interface DHCP Server : **10.1.32.1**

AP Transport Mode [Layer2] [Layer3]: **Layer3**

Virtual Gateway IP Address: **10.254.100.101**

Mobility/RF Group Name: **wukuang**

Network Name (SSID): **management**

Allow Static IP Addresses [YES][no]: **yes**

Configure a RADIUS Server now? [YES][no]: **no**

Enable 802.11b Network [YES][no]: **yes**

Enable 802.11a Network [YES][no]: **yes**

Enable 802.11g Network [YES][no]: **yes**

Enable Auto-RF [YES][no]: **yes**

Configuration saved!


Resetting system with new configuration...

至此，WLC 初始设置完成。


2. 增加 AP

打开浏览器，在地址栏输入

<https://10.1.128.101>，回车后出现安全警报提示（如下图）

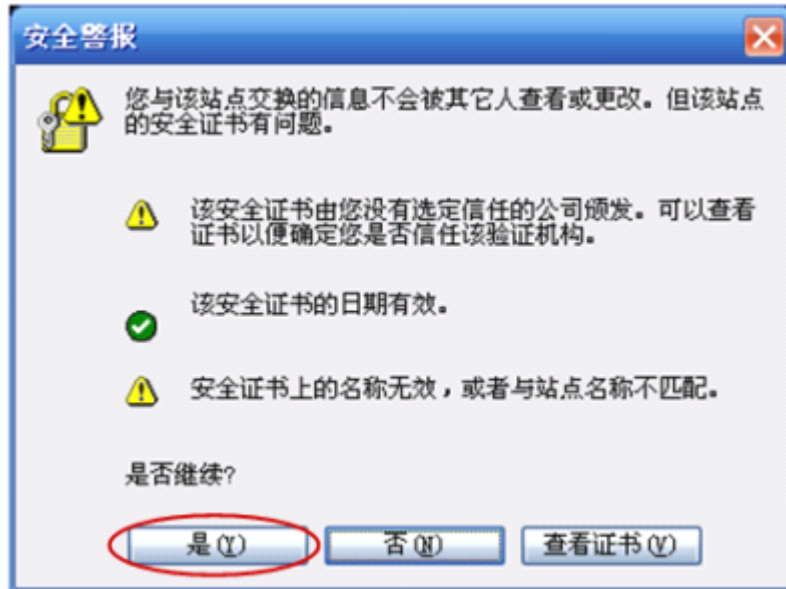

点击是，出现 Wireless Lan Controller 登陆界面（如下图）

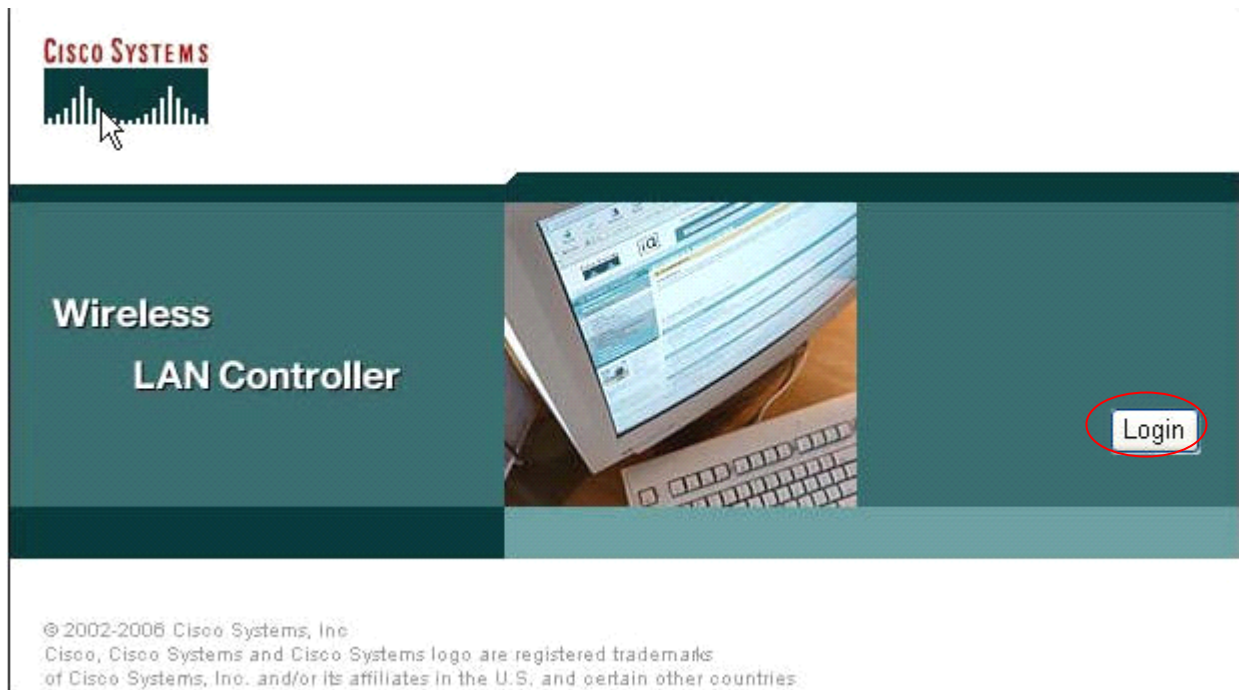

点击 login，出现输入用户名密码界面，输入初始设置里配置的用户名和密码


user: **admin**

password: **minshenma**

（如下图）




点击确定进入 WLC 配置主页面（如下图）

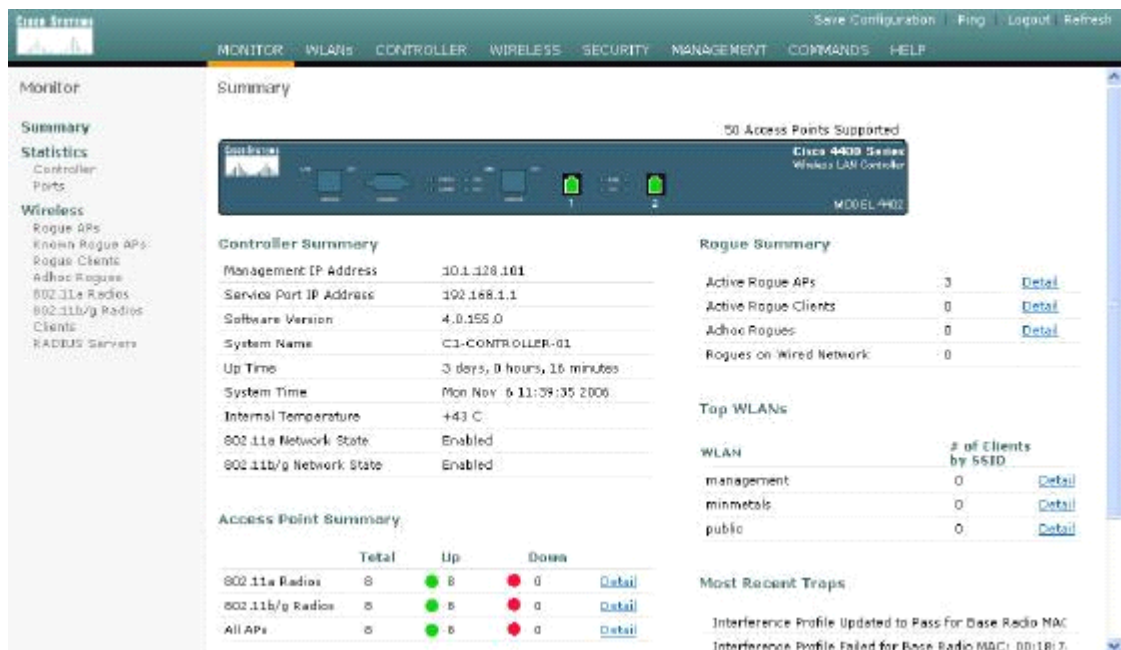

点击 WLANs, 能够看见初始设置中已经建立的 WLAN SSID, 点击 edit (如下图)




选择不广播 management 的 SSID (如下图)

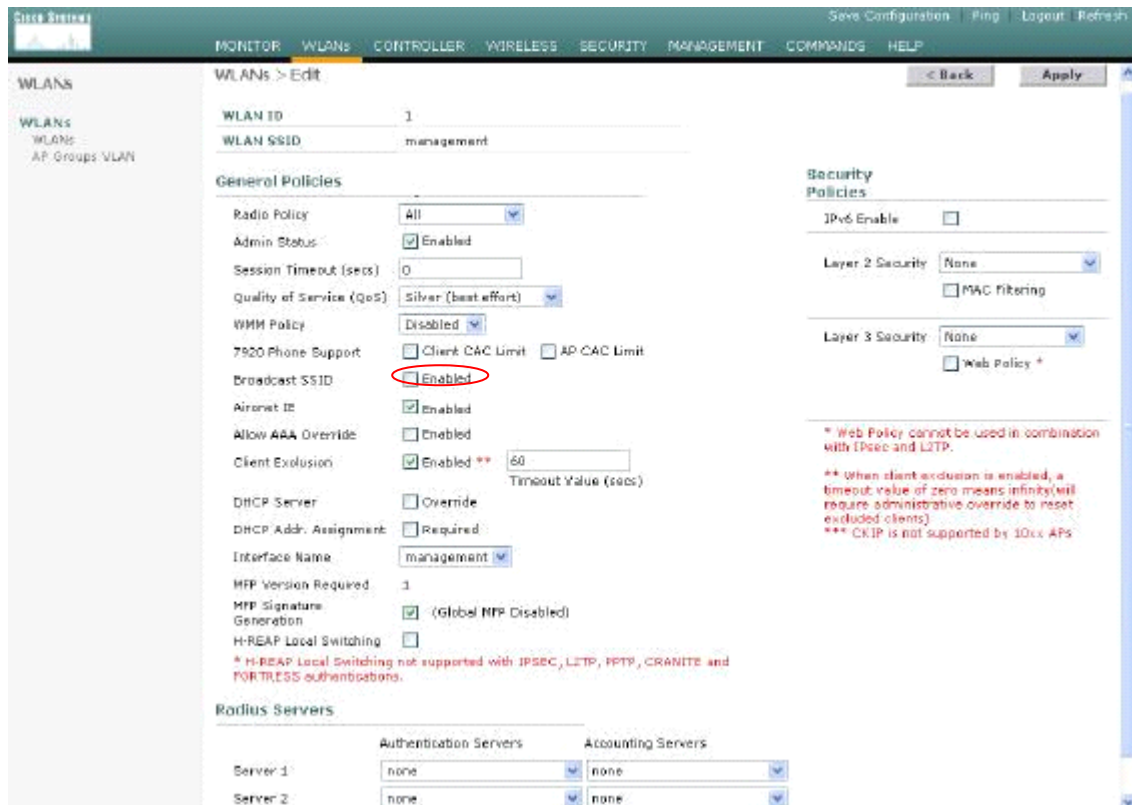


完成配置以后点击 **apply** 应用配置

回到 WLANs 主页面，点击 **new**，添加两个新的 WLAN SSID: **minmetals** 和 **public**
编辑 WLAN SSID **minmetals**，Interface Name 选择 **minmetals** 并应用配置（如下图）

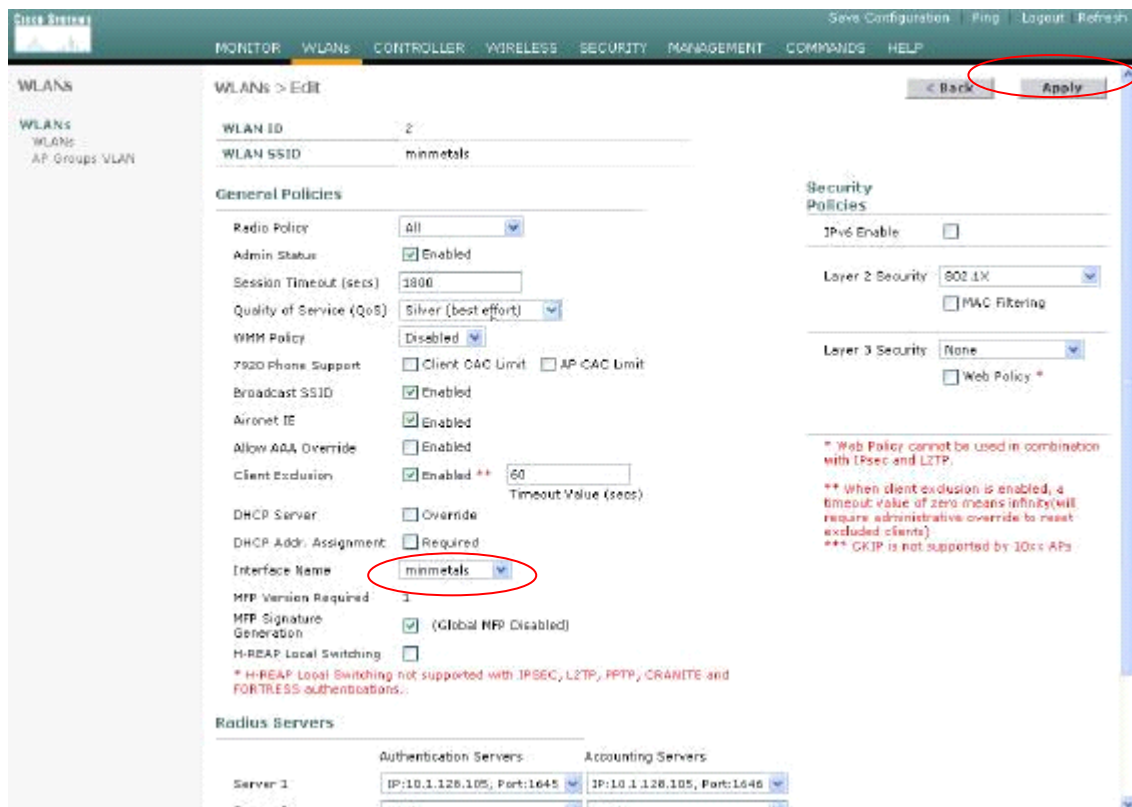

编辑 WLAN SSID public，Interface Name 选择 public 并应用配置（如下图）

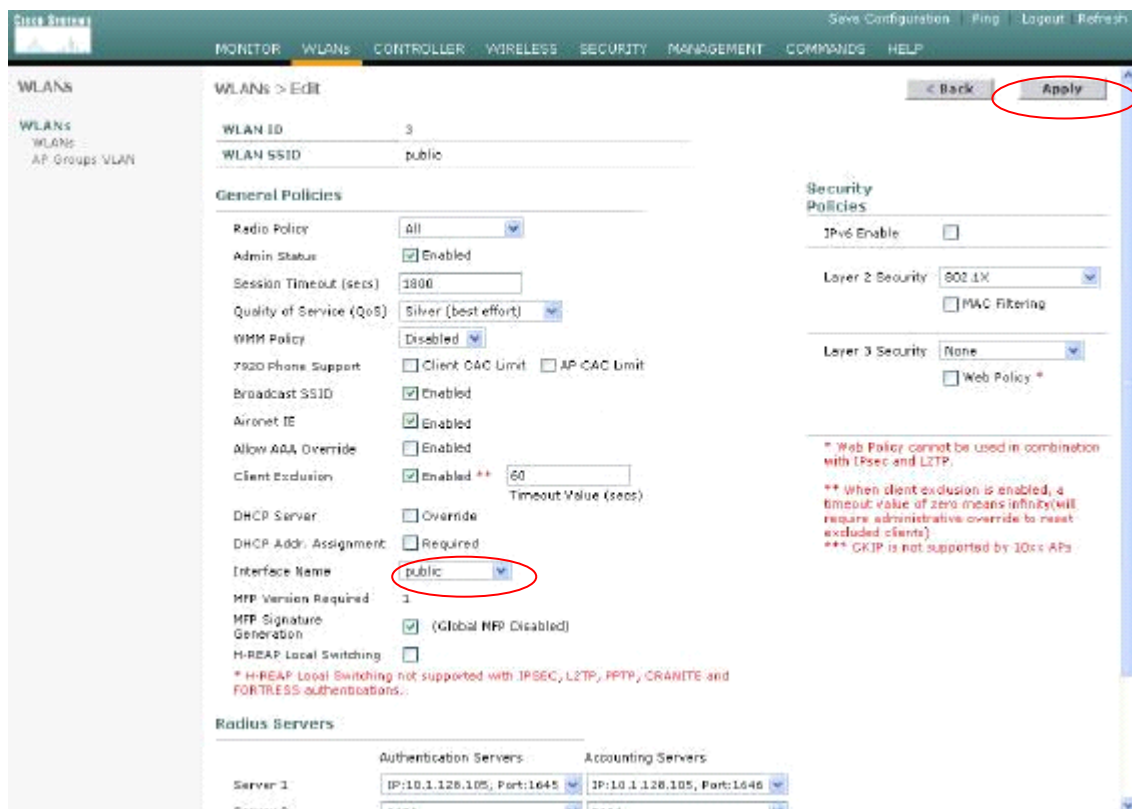

点击 CONTROLLER=>Interfaces（如下图）

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/725344033133011214>