
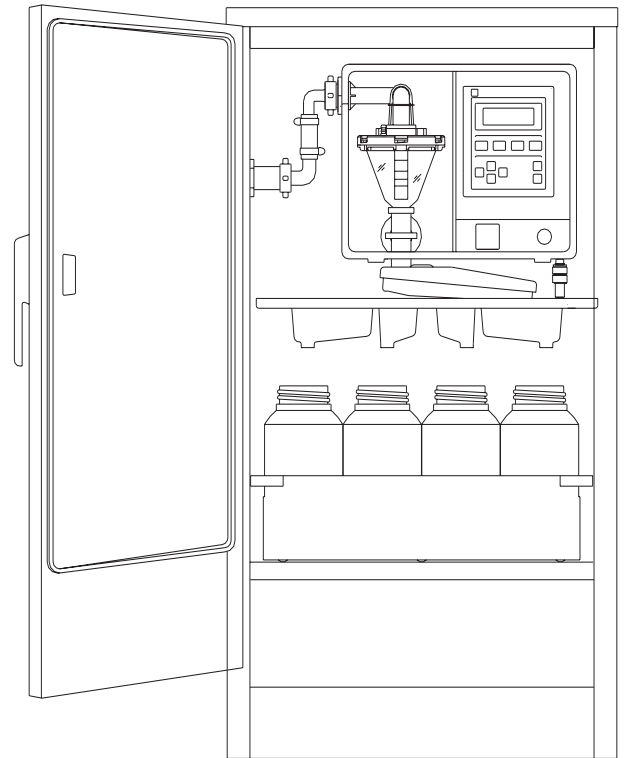


Multi-function water sampler

asp-station d 2

Installation and operating instructions

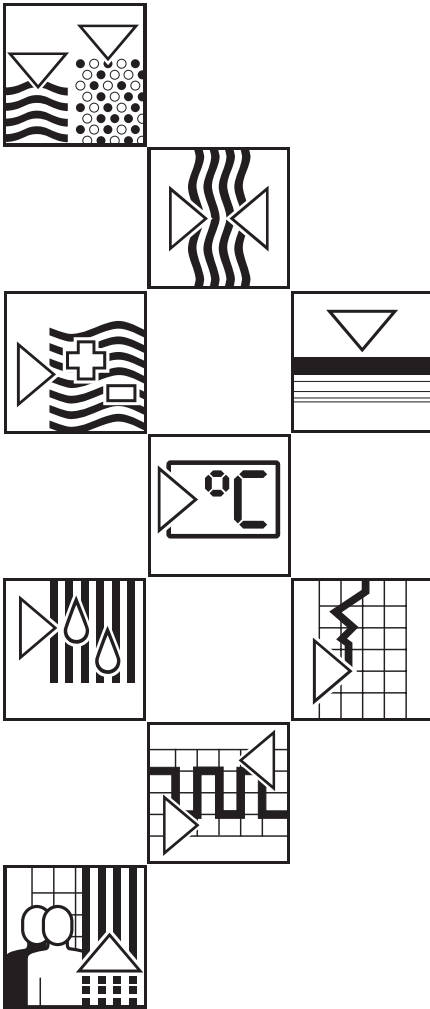

- Check: That the delivery note and delivery contents correspond!
Check the package and contents for external damage.

Complete delivery

Should there be any visible damage you should immediately inform both the transport agency as well as your supplier. If this is not done any later claims cannot be handled under the guarantee.

Transport insurance**Please take note of the following characters:**

Hint: Hints for better installation.



Attention: Ignoring this note can lead to damage of the device or faulty operation.



Danger: Ignoring this warning can lead to personal injury.



Should the "asp-station d 2" be in storage for more than 6 months please take note of the storage details in chapter **"Maintenance, general"**.



Please enter details here:




Unit number: _____

Software version: _____

Door key number: _____

.... Always give these details when reordering or on any queries.

Dimensional drawing, complete unit

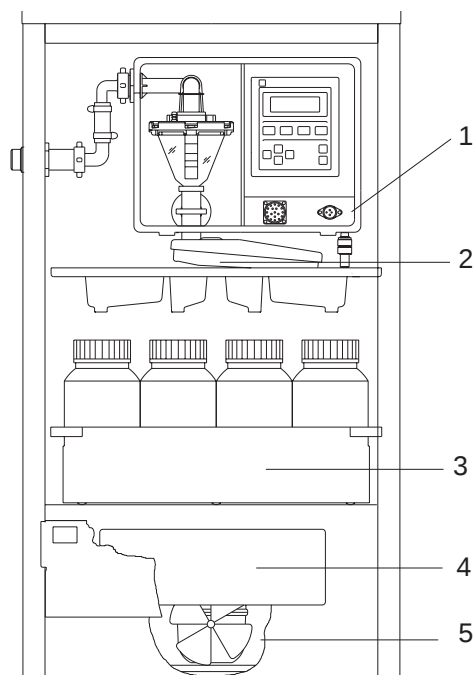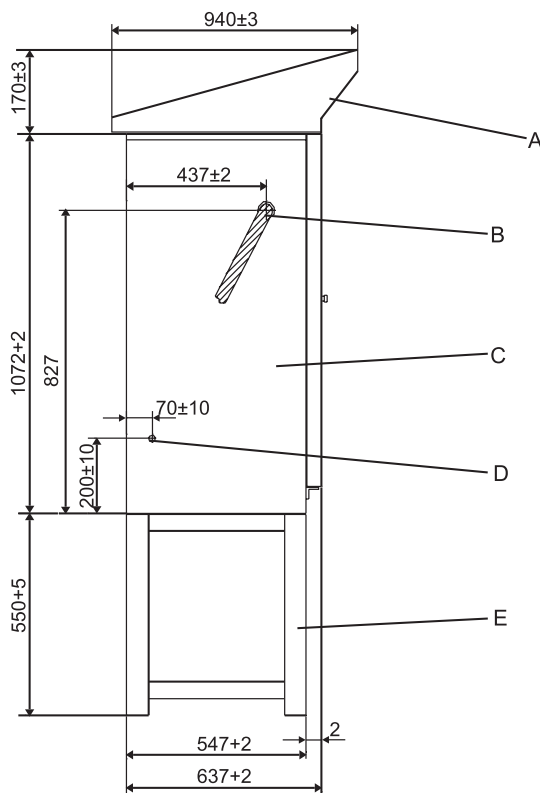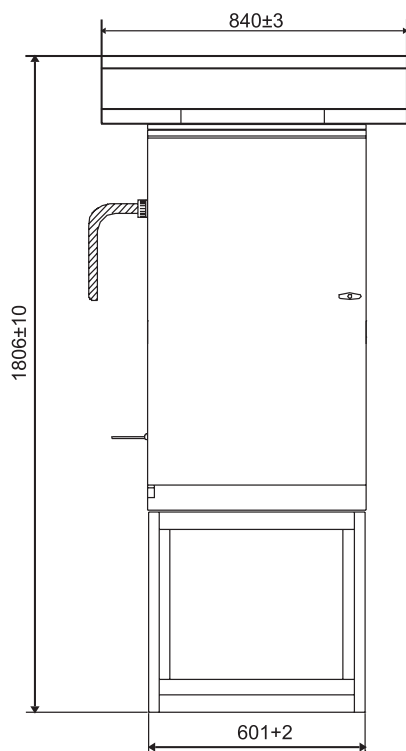

Dimensional drawing, complete unit with all options (above).

- A = Roof (option)
- B = Suction hose (accessories)
- C = Sampler *asp - station d 2*
- D = Power cable
- E = Base (option, also available as a completely enclosed base, eg. for mounting external pumps or electrode armatures))

Note: All dimensions shown are for the "standard housing".
For "wide housing" dimensions see technical data.

Sampler *asp-station a* (left):

- 1 = Controller *liqui-box d 2*
 - 2 = Distribution tray (tap and tray)
 - 3 = Bottle tray with bottles and lids
 - 4 = Terminal box (behind cover plate)
 - 5 = Refrigeration unit (inside lower part of housing)
- Extra: Flow through armature if needed is fitted in the lower right part of the sampler.

Contents	Page
Please note:	1
- Complete delivery	1
- Transport insurance	1
- Enter unit information	1
asp-station d 2	2
- Dimension drawing, complete construction	2
Contents	3
General notes	5
- Safety	5
Mechanical installation	6
- General	6
- Installation	6
- Hose connection / installation	6
- Sampling point recommendations	7
- Foundation recommendations	8
Electrical installation	9
- Power supply	9
- Terminal box	9
- Terminal connections	10
- Outputs	10
- Inputs	10
- Control input	10
- Connection examples	11
- Input	11
- Output	11
- What happens on power up ?	12
- Power failures	12
- Switching on and off (ON/OFF push buttons)	12
Sampling principle	13
For first installation	14
Setting up sample volume	16
- Setting up steps (1 to 8)	16
Maintenance	19
- General	19
- Repairs	19

	Page
Operating and display components	20
- General	20
- Operating components	21
- Setting up principle	21
- Short form instructions	22
- Programme selection and information	24
- Base settings	26
- Programmes: Creating and changeover	28
- Start/stop operation	30
- Service level	32
- Operator settings	34
 Changing analogue input	 36
 Sample distribution conversion	 37
- Changing number of containers/bottles	37
 Problems and solutions	 38
- Fault messages	38
- Spare parts	39
 Technical data	 40

This unit is constructed and tested according to EN 61010-1 / VDE 0411 Part 1 and left our works in perfect and safe condition. In order to maintain this condition and operate safely the user must take note of the following safety information and warnings contained in these instructions.

Safety

First check that the power supply to be used corresponds with that on the unit legend plate.

This unit is supplied with a loose power cable including plug and socket arrangement and is therefore classified to protection class I.

The power supply plug must only be connected to a socket with an earth protection connection. This protection must be continued when using extension leads. Any breakage of the earth conductor within or outside the unit or loosening the earth connections can make the unit potentially dangerous. Intentional disconnection or an open circuit of this earth connection is not permissible.

There are no components in the unit that can be repaired by the user. All repairs must be made by trained service personnel.

Removing covers or components, except where this can be done by hand, must only be carried out by skilled personnel.

If it is assumed that the unit cannot be safely operated it must be immediately taken out of operation and secured against unintentional use.

It can be assumed that the unit cannot be safely operated,

- if the unit is visibly damaged
- if the unit no longer operates
- if the unit has been in storage under adverse conditions for a longer period of time
- after long transport under adverse conditions.

The manufacturer does not accept liability for any damage that has been made due to the unit not having been used in accordance with these safety instructions.

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/828132010044006076>