

hp
photosmart
715
digital camera



user guide



i n v e n t

hp photosmart 715 digital camera

user guide

Trademark and copyright information

© Copyright 2001 Hewlett-Packard Company

All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

The information contained in this document is subject to change without notice. Hewlett-Packard shall not be liable for errors contained herein or for consequential damages in connection with the furnishing, performance, or use of this material.

Microsoft®, Windows®, and Windows NT® are U.S. registered trademarks of Microsoft Corporation.

Pentium® is a U.S. registered trademark of Intel Corporation.

Materials disposal

This HP product contains the following materials that might require special handling at end-of-life:

- Mercury in the fluorescent lamp in the liquid crystal display
- Lead in solder
- Alkaline manganese dioxide-zinc or lithium-iron disulfide AA batteries that are included with the camera

Disposal of this material can be regulated because of environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance (EIA) (www.eiae.org).

Contents

Chapter 1: Getting started

Camera parts	2
Setup	3
Step 1: Attach the wrist strap	3
Step 2: Install the batteries	4
Step 3: Choose the camera language	4
Step 4: Set the camera date and time	4
Step 5: Install the CompactFlash card	5

Chapter 2: Taking pictures

Taking a picture	7
Previewing your pictures	8
Using automatic focus, macro focus, and automatic exposure	9
Using focus lock	9
Using the macro focus setting	10
Using the optical or digital zoom	10
Using the self-timer	11

Chapter 3: Managing images on the camera

Viewing your images	13
Deleting your images	14
Creating a print order	16
Viewing small versions (thumbnails) of your images	18
Magnifying your images	19
Locking your images	20

Chapter 4: Adjusting the camera settings

Using the flash	21
Changing the image quality	23
Setting Instant Review	25
Changing the date and time	26
Adjusting the image display brightness	27
Turning the system beep on and off	28
Changing the camera language	28

Chapter 5: Sharing and printing images

Using the camera with a Windows computer	30
System requirements for a Windows computer	30
Installing the software on a Windows computer	31
Connecting the camera to a Windows computer	31
Unloading images to a Windows computer	32
Using the camera with a Windows NT 4.0 computer	33
Using the camera with a Macintosh computer	35
System requirements for a Macintosh computer	35
Changing the USB protocol setting	35
Installing the software on the Mac OS	36
Connecting the camera to a Macintosh computer	37
Unloading images to a Macintosh computer	38
Unloading images without using the camera software	39
Using a card reader	40
Printing photos on a printer equipped with a card reader	40

Chapter 6: Maintaining your camera

Powering your camera	41
Determining if the batteries need to be changed	41
Replacing batteries	43
Using an AC power adapter	43
Maintaining the CF memory card	45
Formatting a CF memory card	45
Removing the CF memory card	46
Caring for your camera and accessories	46
Camera	46
Lens adapter	46
Safety precautions	47

Chapter 7: Troubleshooting

Problems and solutions	49
Getting assistance	56
Visiting HP Web sites	56
Visiting related Web sites	56
Contacting HP Customer Support	57
Obtaining support within the United States	57
Obtaining support worldwide	58
Hewlett-Packard limited warranty statement	61

Appendix A: Reference

Symbols on the status LCD 63

Camera indicator lights (LEDs) 64

Camera menus 65

Camera specifications 66

Index 69





Getting started


Your HP photosmart 715 digital camera takes high-quality pictures you can share with family and friends on the Internet or by e-mail. It comes with software for manipulating, storing, and printing your photos. Your camera includes the following features:

- 3.3 megapixel (MP) resolution
- 3x optical zoom or 2x digital zoom
- point-and-shoot simplicity
- automatic exposure
- automatic focus
- automatic flash with red-eye reduction
- universal serial bus (USB) computer connection
- color image display for previewing and reviewing pictures
- economical “digital film” (reusable CompactFlash [CF] memory card)
- self-timer
- macro mode

Camera parts

The following illustrations show the parts of the camera.

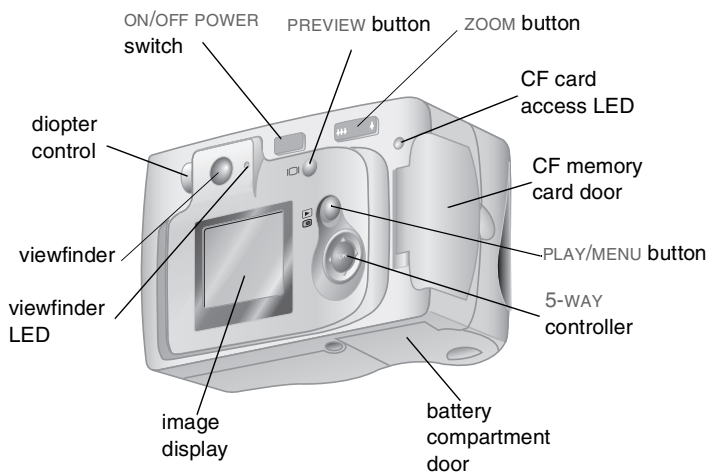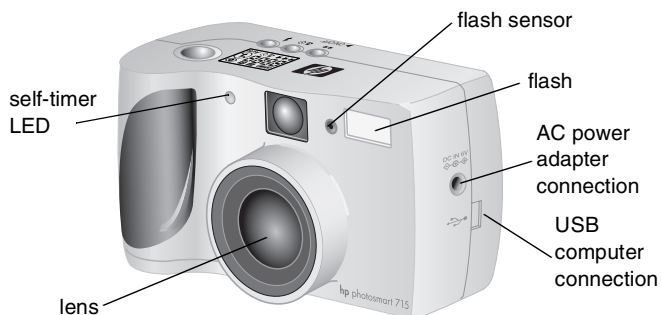

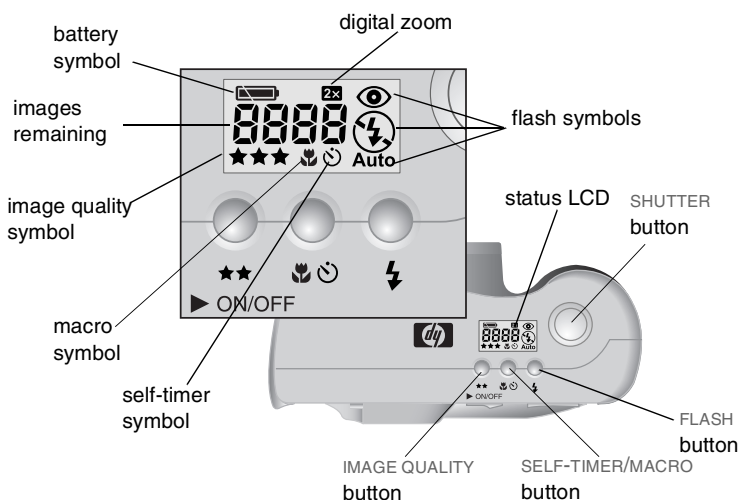

Setup

Setting up the digital camera is quick and easy—follow these steps and you will be ready to take pictures.

Step 1: Attach the wrist strap


- 1 Thread the short loop through the wrist strap attachment that is located under the CF memory card compartment door. You might need to use a pointed object, such as a paper clip, to pull the end of the loop through.



- 2 Pull the strap through the loop, and then pull the knot tight.

Step 2: Install the batteries

- 1 Locate the battery compartment door on the bottom of the camera. Slide the door out, and then lift it open.
- 2 Insert the batteries according to the markings inside the battery compartment.

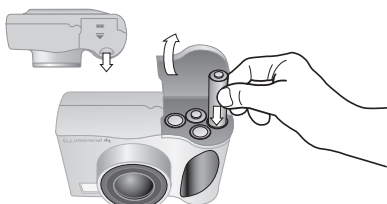

Step 3: Choose the camera language

- 1 Remove the lens cap from the camera and slide the ON/OFF POWER (►ON/OFF) switch to turn on the camera.
- 2 Press the right or left side of the 5-WAY (◀▶) controller until the language you want to use is highlighted on the image display.
- 3 Press OK in the center of the ◀▶ controller to choose the language.



Step 4: Set the camera date and time

- 1 Press right or left on the ◀▶ controller to set the day, and then press the bottom of the ◀▶ controller to select the next field.
- 2 Set the month, year, hour, minute, and date format using the same method.
- 3 To confirm the date and time, press OK.


Step 5: Install the CompactFlash card

- 1 Turn the camera off.

CAUTION Inserting or removing a CF memory card while the camera is on could damage the existing card or result in lost images.

- 2 Open the CF memory card door.

- 3 Hold the CF memory card so that the tiny ledge on the top rear of the card is between your fingers and the side with pinholes faces the camera.

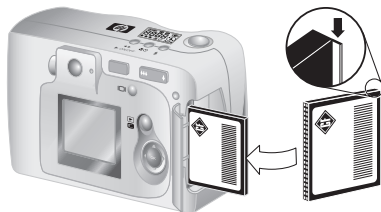

- 4 Insert the CF memory card in the camera and gently push it all the way in. The gray card ejection lever “pops up” when the card is seated correctly in the slot.

CAUTION The card should slide freely into the slot. If it stops when it is only partially inserted, turn the card over and try again. Do not force the card into the camera.

- 5 Fold the card ejection lever down against the card and close the CF memory card door.

Tip If you cannot close the CF memory card door, you might not have inserted the CF memory card correctly. Remove the CF memory card and try again.

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/918054110143006116>