DI6N0-03


DTC	B1140/32	Side Airbag Sensor Assembly (RH) Malfunction

CIRCUIT DESCRIPTION

The side airbag sensor assembly (RH) consists of the safing sensor, diagnosis circuit and lateral deceleration sensor, etc.
It receives signals from the lateral deceleration sensor, judges whether or not the SRS must be activated, and detects diagnosis system malfunction.
DTC B1140/32 is recorded when occurrence of a malfunction in the side airbag sensor assembly (RH) is detected.

DTC No.	DTC Detecting Condition	Trouble Area
B1140/32	• Side airbag sensor assembly (RH) malfunction	• Side airbag sensor assembly (RH) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM

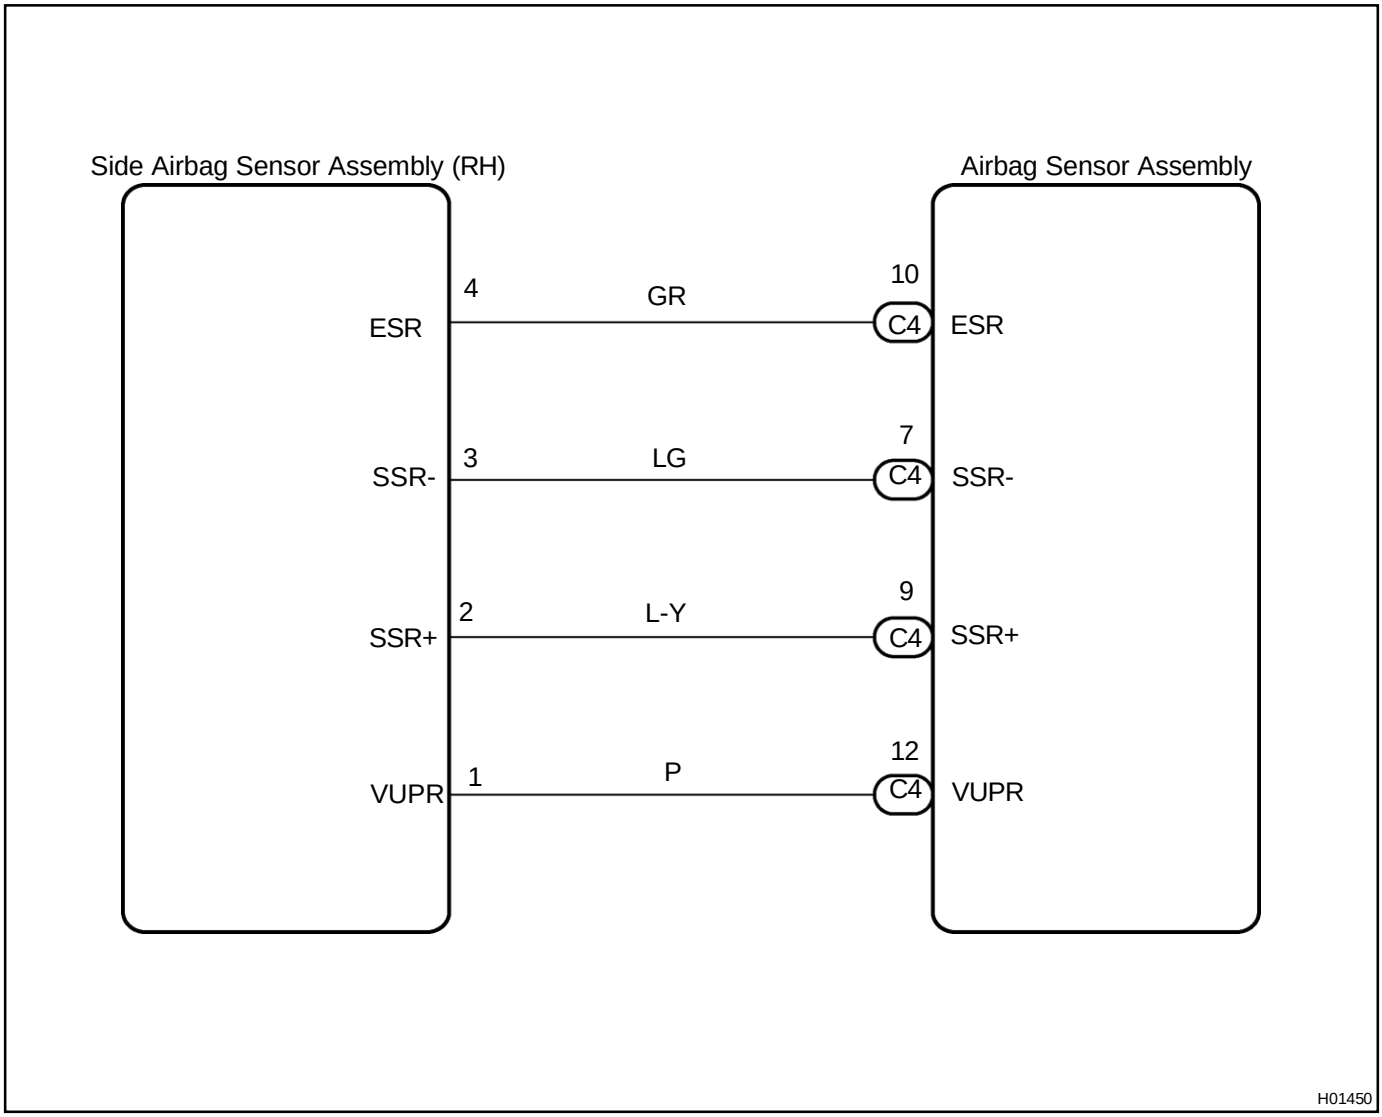

H01450

DI6N0-03


DTC	B1140/32	Side Airbag Sensor Assembly (RH) Malfunction

CIRCUIT DESCRIPTION

The side airbag sensor assembly (RH) consists of the safing sensor, diagnosis circuit and lateral deceleration sensor, etc.
It receives signals from the lateral deceleration sensor, judges whether or not the SRS must be activated, and detects diagnosis system malfunction.
DTC B1140/32 is recorded when occurrence of a malfunction in the side airbag sensor assembly (RH) is detected.


DTC No.	DTC Detecting Condition	Trouble Area
B1140/32	• Side airbag sensor assembly (RH) malfunction	• Side airbag sensor assembly (RH) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM

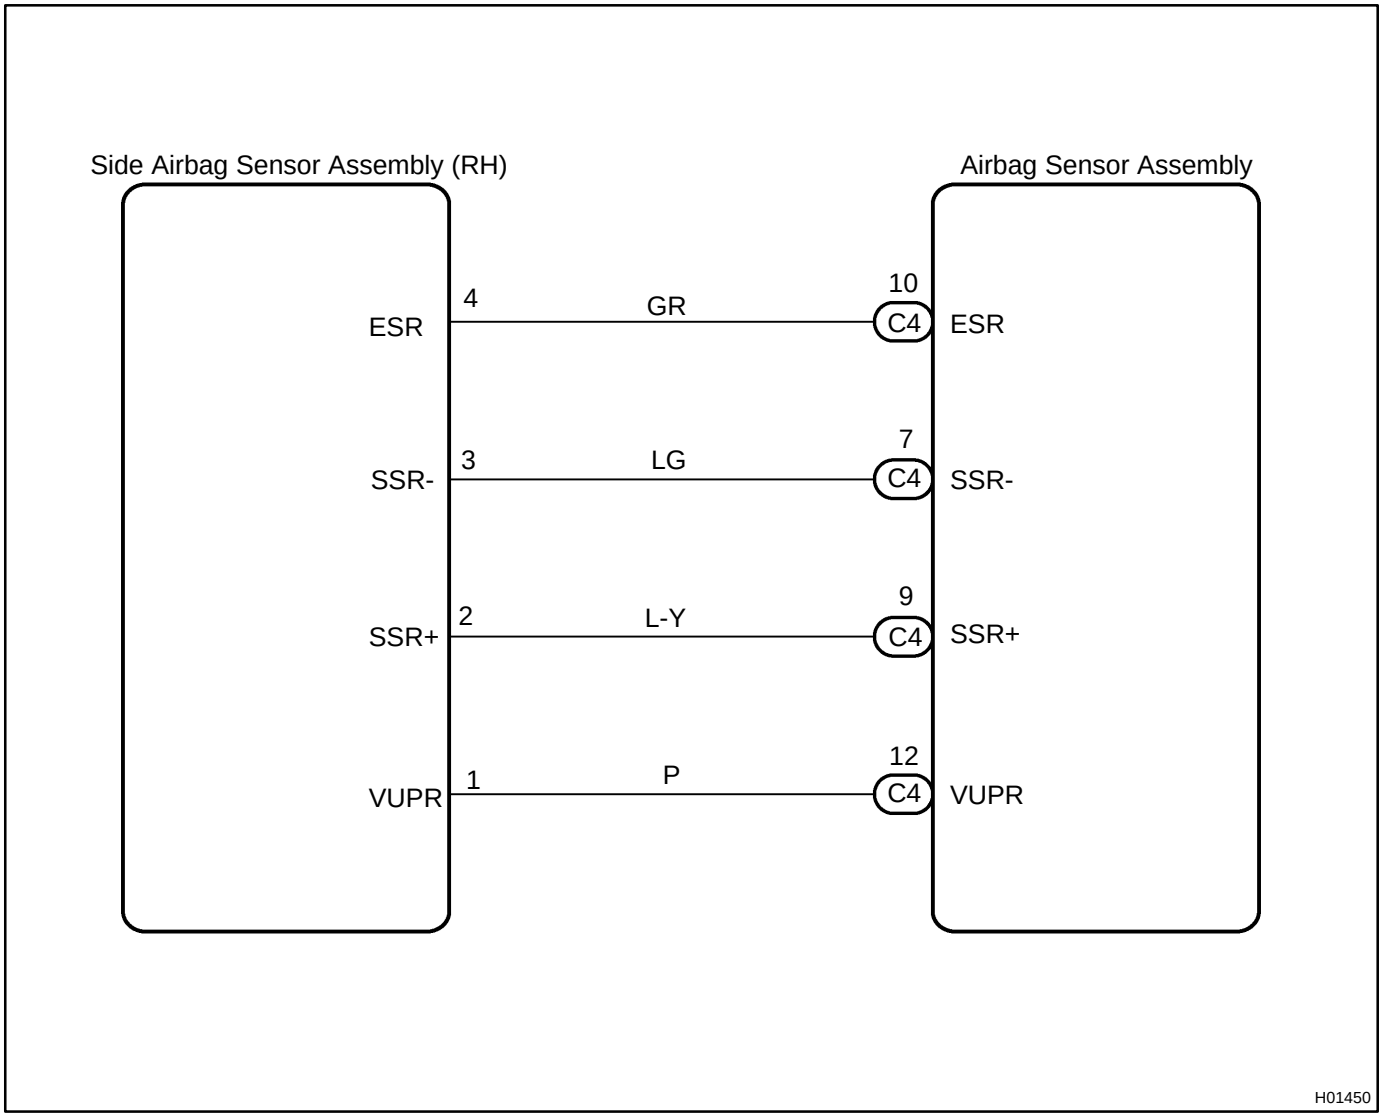

INSPECTION PROCEDURE

1	**Is DTC B1140/32 out put?**

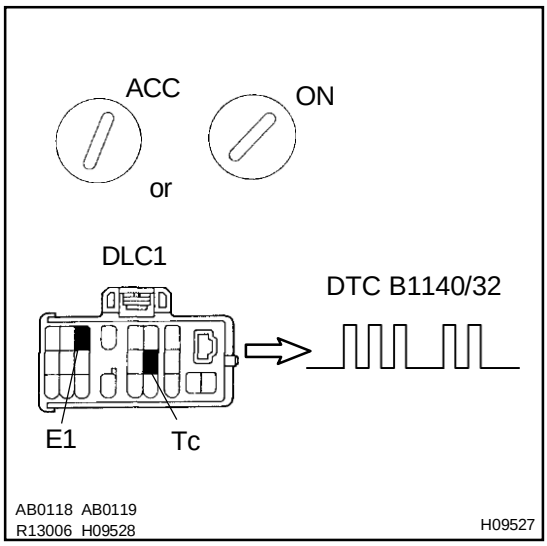

CHECK:

(a) Turn the ignition switch to ACC or ON, and wait at least for 20 seconds.
(b) Clear the DTC stored in memory (See page DI-358).
(c) Turn the ignition switch to LOCK, and wait at least for 20 seconds.
(d) Turn the ignition switch to ACC or ON, and wait at least for 20 seconds.
(e) Check the DTC (See page DI-358).

HINT:
Codes other than code B1140/32 may be output at this time, but they are not relevant to this check.

YES → **The malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.**


NO

2	**Is connector of side airbag sensor assembly (RH) properly connected?**

3	**Prepare for inspection (See step 1 on DI-486).**

INSPECTION PROCEDURE

1	**Is DTC B1140/32 out put?**

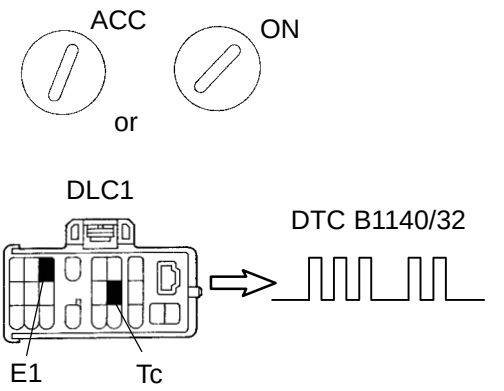

CHECK:

(a) Turn the ignition switch to ACC or ON, and wait at least for 20 seconds.
(b) Clear the DTC stored in memory (See page DI-358).
(c) Turn the ignition switch to LOCK, and wait at least for 20 seconds.
(d) Turn the ignition switch to ACC or ON, and wait at least for 20 seconds.
(e) Check the DTC (See page DI-358).

HINT:

Codes other than code B1140/32 may be output at this time, but they are not relevant to this check.

YES → **The malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.**

NO

2	**Is connector of side airbag sensor assembly (RH) properly connected?**

3	**Prepare for inspection (See step 1 on DI-486).**

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：https://d.book118.com/536044144150010042