User's manual
FLIR CM83

600 A True RMS Power Clamp Meter

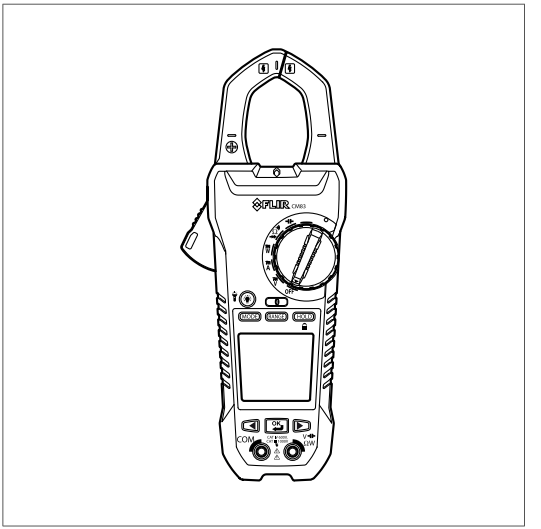

User's manual
FLIR CM83

#T559825; r. AI/33557/33557; en-US

Table of contents

1 Disclaimers 1
1.1 Copyright 1
1.2 Quality assurance 1
1.3 Documentation updates 1
1.4 Disposal of electronic waste 1
2 Safety information 2
2.1 FCC Compliance 4
2.2 Industry Canada compliance 5
3 Introduction 7
3.1 Key features 7
4 Description 8
4.1 Meter parts 8
4.2 Function switch 9
4.3 Function buttons 10
4.4 Display icons and indicators 11
4.4.1 Out-of-range warning 13
5 Operation 14
5.1 Powering the meter 14
5.1.1 Auto power off 14
5.2 Auto/Manual select mode 14
5.3 Auto/Manual range mode 15
5.4 Hold mode 15
5.4.1 Smart hold 15
5.5 Silent mode 15
5.6 Voltage and current measurements 16
5.6.1 Basic voltage measurements 16
5.6.2 Basic current measurements 16
5.6.3 Extended functionality 17
5.7 Non-contact voltage detector 21
5.8 Power measurements 21
5.8.1 Single-phase power measurements 21
5.8.2 Three-phase power measurements 22
5.8.3 Phase rotation 25
5.9 Resistance measurements 27

5.10 Capacitance measurements 27
5.11 Continuity test 28
5.12 Diode test 29
5.13 Streaming measurement data using Bluetooth 30
5.13.1 General 30
5.13.2 Procedure 30
6 Maintenance 31
6.1 Cleaning and storage 31
6.2 Battery replacement 31
6.2.1 Disposal of electronic waste 31
7 Technical specifications 32
7.1 General specifications 32
7.2 Electrical specifications 33
8 Technical support for external meters 39
9 Warranties 40
9.1 FLIR Global Limited Lifetime Warranty 40
9.2 FLIR Test and Measurement Limited 2 Year Warranty 41

1 Disclaimers

1.1 Copyright

© 2016, FLIR Systems, Inc. All rights reserved worldwide. No parts of the software including source code may be reproduced, transmitted, transcribed or translated into any language or computer language in any form or by any means, electronic, magnetic, optical, manual or otherwise, without the prior written permission of FLIR Systems.

The documentation must not, in whole or part, be copied, photocopied, reproduced, translated or transmitted to any electronic medium or machine readable form without prior consent, in writing, from FLIR Systems.

Names and marks appearing on the products herein are either registered trademarks or trademarks of FLIR Systems and/or its subsidiaries. All other trademarks, trade names or company names referenced herein are used for identification only and are the property of their respective owners.

1.2 Quality assurance

The Quality Management System under which these products are developed and manufactured has been certified in accordance with the ISO 9001 standard.

FLIR Systems is committed to a policy of continuous development; therefore we reserve the right to make changes and improvements on any of the products without prior notice.

1.3 Documentation updates

Our manuals are updated several times per year, and we also issue product-critical notifications of changes on a regular basis.

To access the latest manuals and notifications, go to the Download tab at:

http://support.flir.com

It only takes a few minutes to register online. In the download area you will also find the latest releases of manuals for our other products, as well as manuals for our historical and obsolete products.

1.4 Disposal of electronic waste



As with most electronic products, this equipment must be disposed of in an environmentally friendly way, and in accordance with existing regulations for electronic waste.

Please contact your FLIR Systems representative for more details.

2 Safety information

NOTE

Before operating the device, you must read, understand, and follow all instructions, dangers, warnings, cautions, and notes.

Note FLIR Systems reserves the right to discontinue models, parts or accessories, and other items, or to change specifications at any time without prior notice.

NOTE

Remove the batteries if the device is not used for an extended period of time.

WARNING

Do not operate the device if you do not have the correct knowledge. Formal qualifications and/or national legislation for the electrical inspections can apply. Incorrect operation of the device can cause damage, shock, injury or death to persons.

WARNING

Do not start the measuring procedure before you have set the function switch to the correct position. This can cause damage to the instrument and can cause injury to persons.

WARNING

Do not change to current or resistance when you measure the voltage. This can cause damage to the instrument and can cause injury to persons.

WARNING

Do not measure the current on a circuit when the voltage increases to more than 1000 V. This can cause damage to the instrument and can cause injury to persons.

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：https://d.book118.com/275304102241011040