USER MANUAL

FLIR CM72 and CM74 CLAMP METERS

CM72 600A True RMS AC Clamp Meter

CM74 600A True RMS AC/DC Clamp Meter



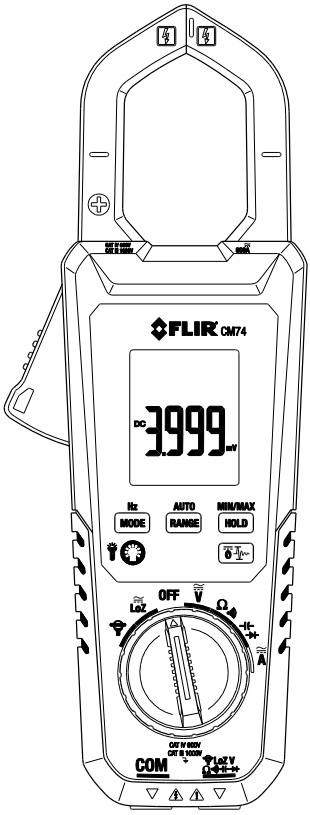


Table of Contents

1. DISCLAIMERS 4

1.1 Copyright 4

1.2 Quality Assurance 4

1.3 Documentation 4

1.4 Disposal of Electronic Waste 4

2. SAFETY 5

3. INTRODUCTION 7

3.1 Key Features 7

4. METER DESCRIPTION 8

4.1 Meter Parts 8

4.2 Function Switch 9

4.3 Function Buttons 9

4.4 Display Icons and Indicators 10

5. OPERATION 12

5.1 Powering the Meter 12

5.1.1 Auto Power Off 12

5.2 Auto/Manual Range Mode 12

5.3 HOLD Mode 12

5.4 Voltage and Current Measurements 13

5.4.1 Basic Voltage Measurements 13

5.4.2 'Lo Z' Voltage Measurements 13

5.4.3 Basic Current Measurements 14

5.4.4 Extended Functionality Modes 15

5.4.4.1 Inrush Current Mode (CM74 only) 15

5.4.4.2 DCA Zero Mode (CM74 only) 16

5.4.4.3 Frequency Mode 16

5.4.4.4 MIN/MAX Mode 16

5.4.4.5 VFD Mode (low pass filter) CM74 only 16
5.4.4.6 Flex Clamp Adaptor Use 17
5.5 Resistance Measurements 18
5.6 Continuity Test 18
5.7 Capacitance Measurements 19
5.8 Diode Test 20
6. MAINTENANCE 21
6.1 Cleaning and Storage 21
6.2 Battery Replacement 21
7. SPECIFICATIONS 22
7.1 General specifications 22
7.2 Electrical specifications 23
8. TECHNICAL SUPPORT 28
9. WARRANTIES 29
9.1 FLIR Global Limited Lifetime Warranty 29

1. Disclaimers

1.1 Copyright

© 2020, FLIR Systems, Inc., All rights reserved worldwide. No parts of the software including source code may be reproduced, transmitted, transcribed or translated into any language or computer language in any form or by any means, electronic, magnetic, optical, manual or otherwise, without the prior written permission of FLIR Systems.

The documentation must not, in whole or part, be copied, photocopied, reproduced, translated or transmitted to any electronic medium or machine-readable form without prior consent, in writing, from FLIR Systems.

Names and marks appearing on the products herein are either registered trademarks or trademarks of FLIR Systems and/or its subsidiaries. All other trademarks, trade names or company names referenced herein are used for identification only and are the property of their respective owners.

1.2 Quality Assurance

The Quality Management System under which these products are developed and manufactured has been certified in accordance with the ISO 9001 standard.

FLIR Systems is committed to a policy of continuous development; therefore, we reserve the right to make changes and improvements on any of the products without prior notice.

1.3 Documentation

To access the latest manuals and notifications, go to the Download tab at: https://support.flir.com. It only takes a few minutes to register online. In the download area you will also find the latest releases of manuals for our other products, as well as manuals for our historical and obsolete products.

1.4 Disposal of Electronic Waste



As with most electronic products, this equipment must be disposed of in an environmentally friendly way, and in accordance with existing regulations for electronic waste.

Please contact your FLIR Systems representative for more details.

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：https://d.book118.com/336211105155010032