

NETGEAR

Pro WiFi Mount Installation Guide



201-31204-01


March 2024

NETGEAR


Installation Guide Contents

- [Mount Kit Contents](#)
- [Adjusting the Size of the Mount Plate](#)
- [Wall and Ceiling Surface Mounting](#)
- [T-Bar and Recessed Ceiling Mounting](#)
- [Detaching the AP](#)

Mount Kit Contents

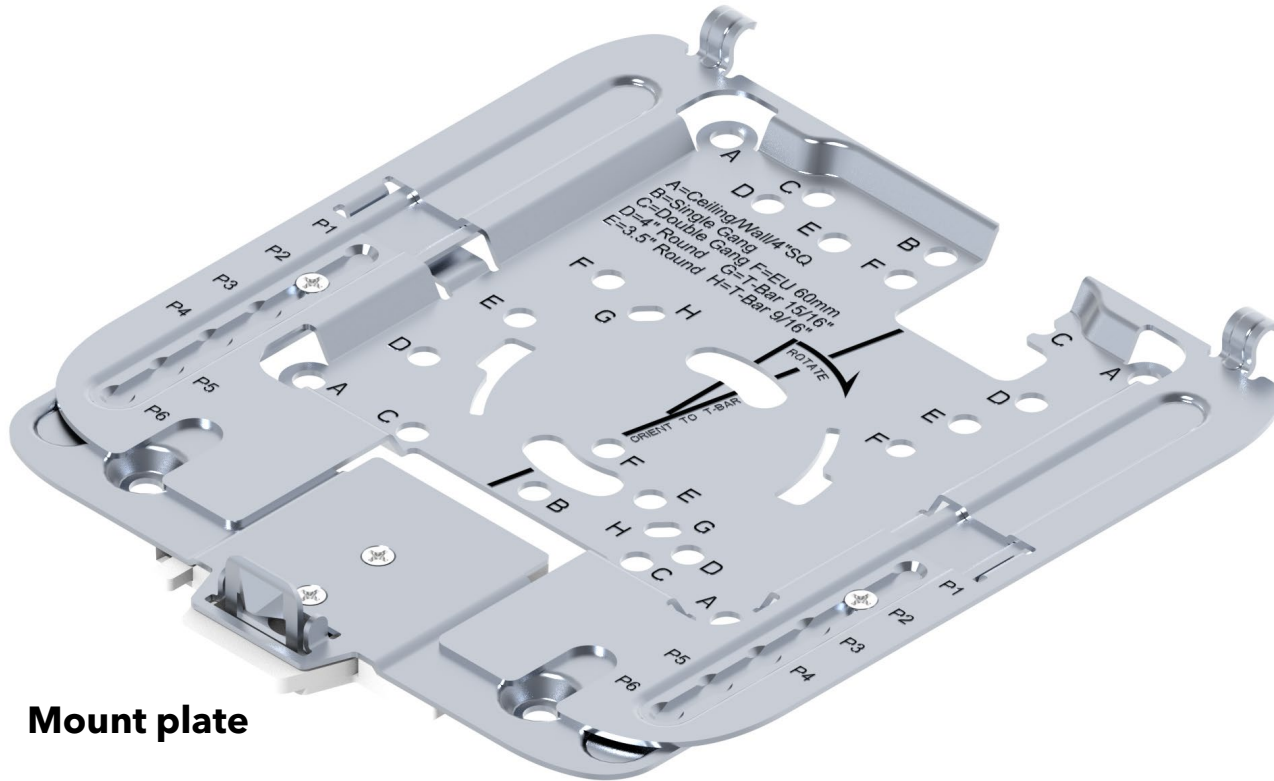


Mount plate

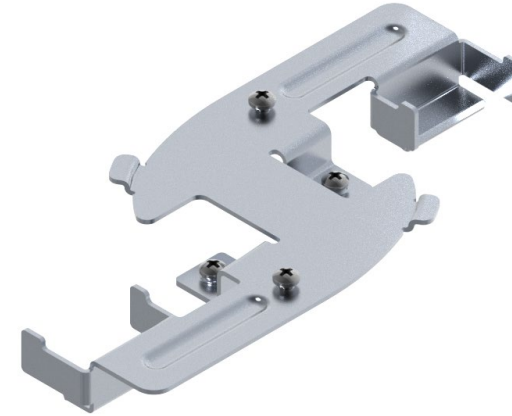

Deep clip

Use for a recessed drop ceiling up to 0.39 in. (10 mm)

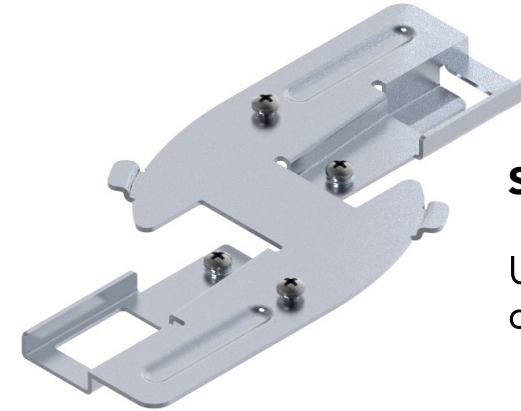

Shallow clip

Use for a flush or recessed drop ceiling up to 0.24 in. (6 mm)

Note: Screws and anchors are not included in the mount kit. You must obtain the correct screws and anchors for the mounting method that you decide on.


Adjusting the Size of the Mount Plate

For some models, you might need to adjust the size of the mount plate. Before you start any installation process, we recommend that you first hook the access point onto the mount plate to determine if the size of the mount plate is correct for your model access point.

The mount plate includes adjustable positions P1 through P6. Position P1 is for the smallest size plate; Position P6 is for the largest size plate.

To adjust the size of the mount plate:

- 1.** At the left and right side of the mount plate, loosen the screws at their current "P" positions.
- 2.** Move the upper and lower parts of the mount plate to extend or reduce the size of the plate.
- 3.** At the left and right side of the mount plate, tighten the screws at their new "P" positions.

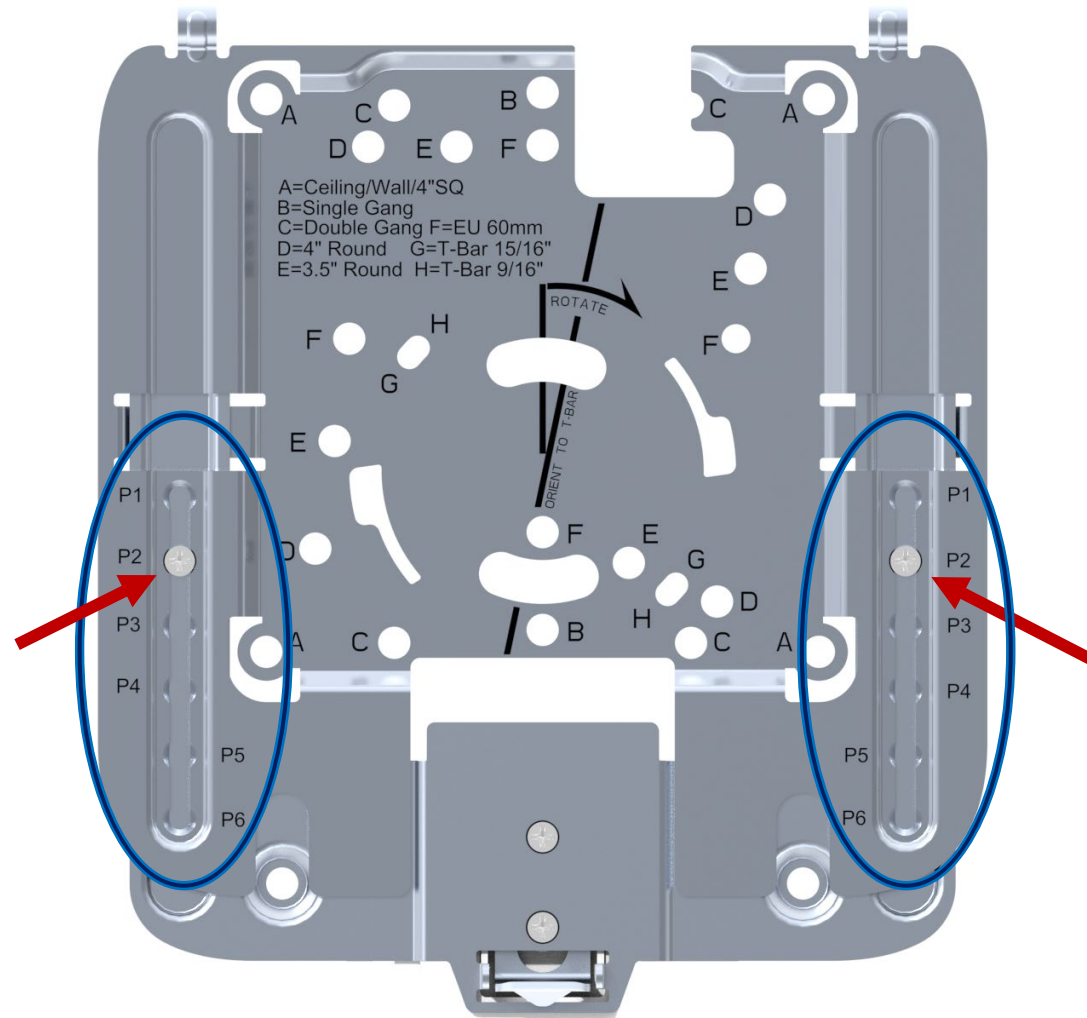

Wall and Ceiling Surface Mounting

Mounting positions:

A = Ceiling, Wall, or 4" Square Outlet Box

B = Single Gang Device Box


C = Double Gang Device Box

D = 4" Round Outlet Box

E = 3.5" Round Outlet Box

F = EU 60mm Device Box


Note: Outlet boxes and device boxes might also be called electrical junction boxes.

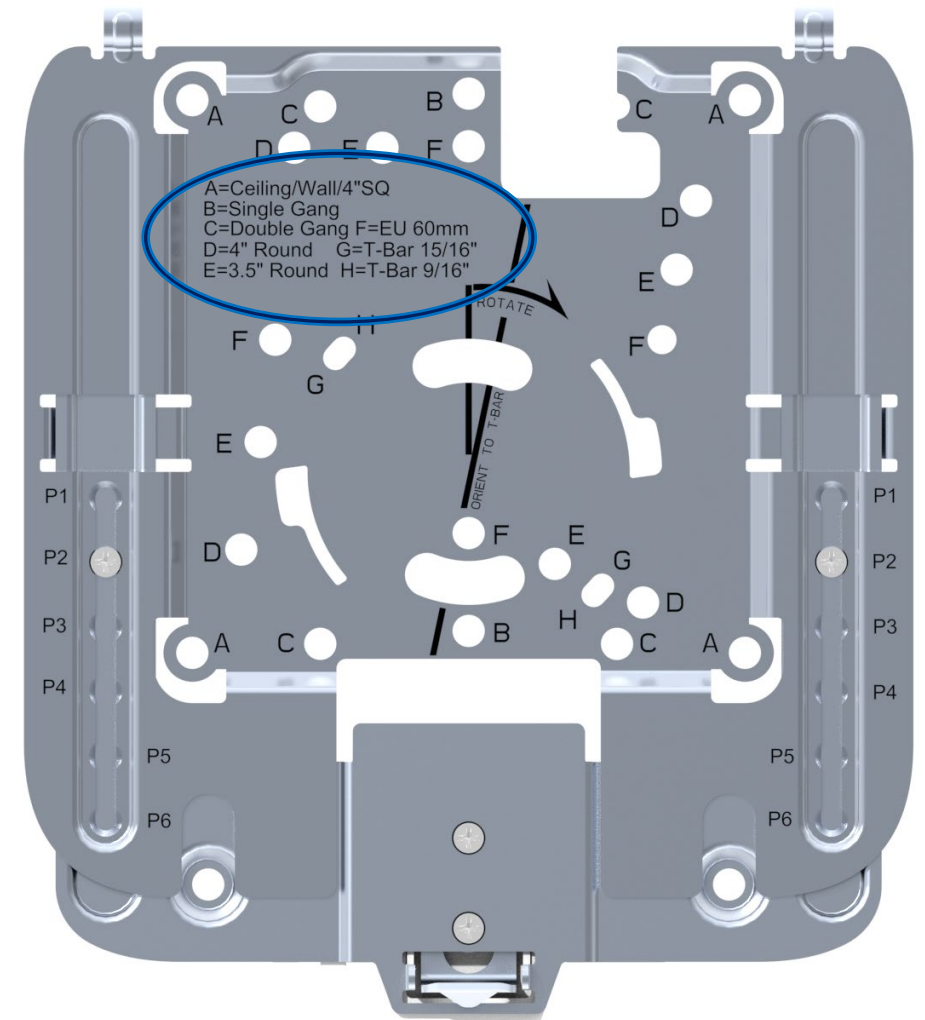

Position A: Ceiling, Wall, or 4" Square Outlet Box



Drywall Ceiling or Wall

Use four 8-32 X 1.25" metal screws and anchors. (Using only two screws and anchors is not sufficient.)

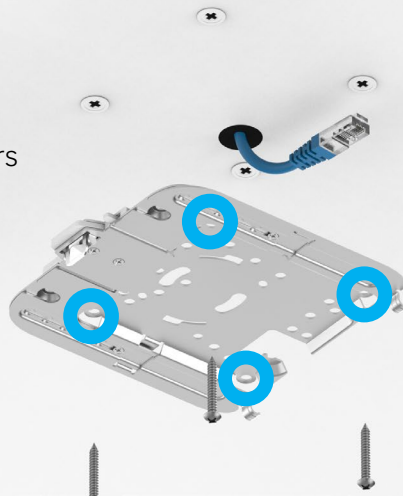


4" Square Outlet Box

Use two or four 8-32 X 1" machine screws or thread-forming screws. These screws should be supplied with the outlet box.

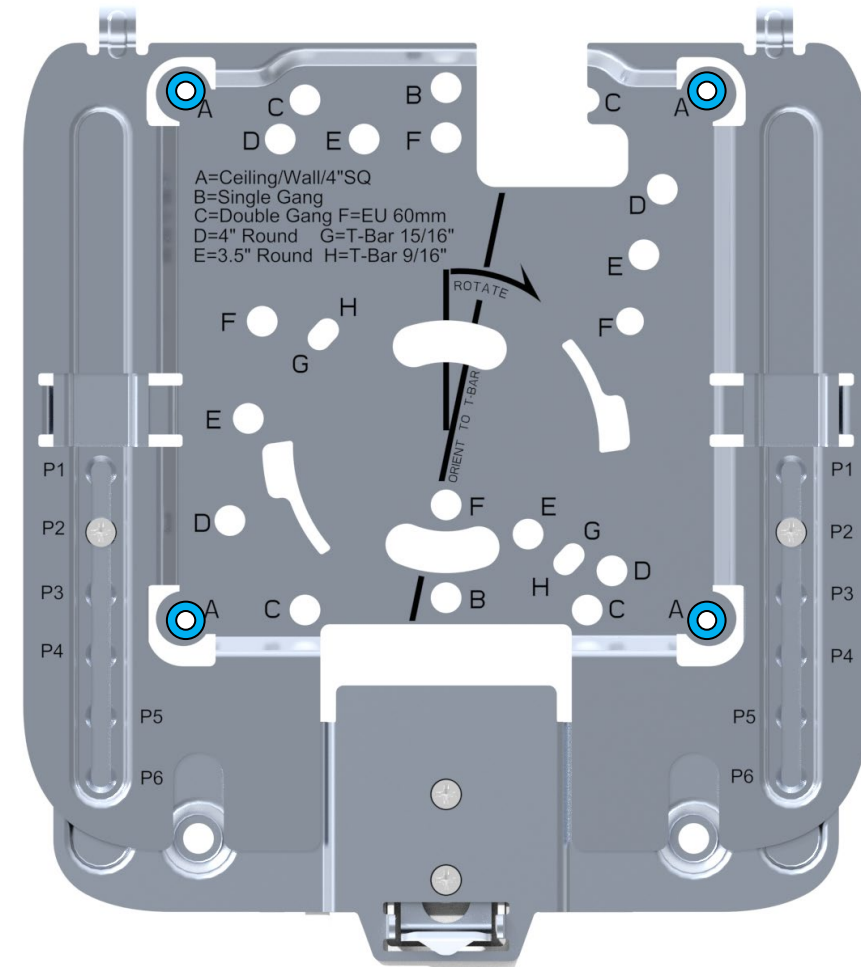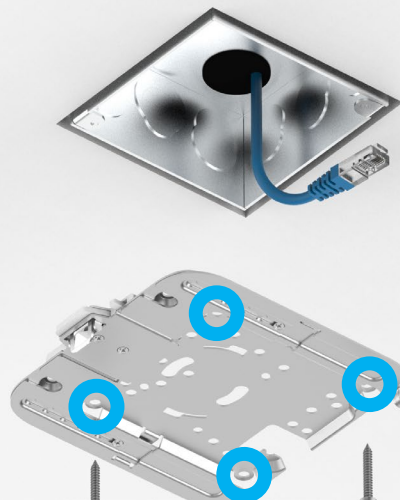


Caution: We recommend that you use four 8-32 screws capable of maintaining a minimum pullout force of 20 lb. (9 kg). Use screws of the correct length with the correct ceiling or wall anchor based on your ceiling or wall substrate.

Position B: Single Gang Device Box, Wood Studs, or Joists

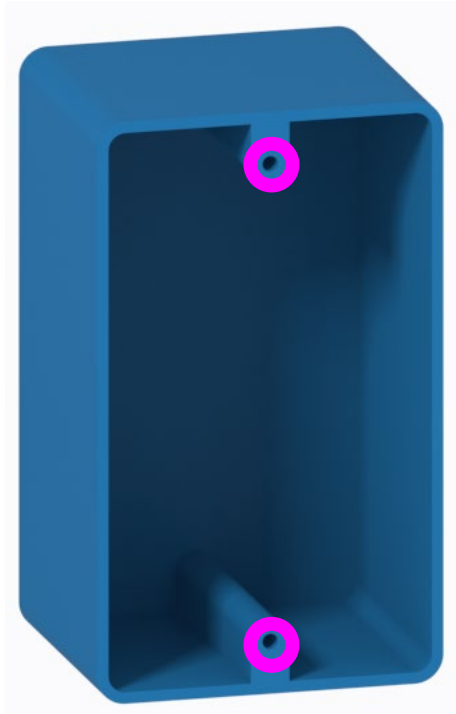


For attachment to a single gang device box, use two 6-32 x 1" machine screws or thread-forming screws. These screws should be supplied with the device box.


For attachment to a wood stud or joist, use two 8-32 wood screws of the appropriate length.

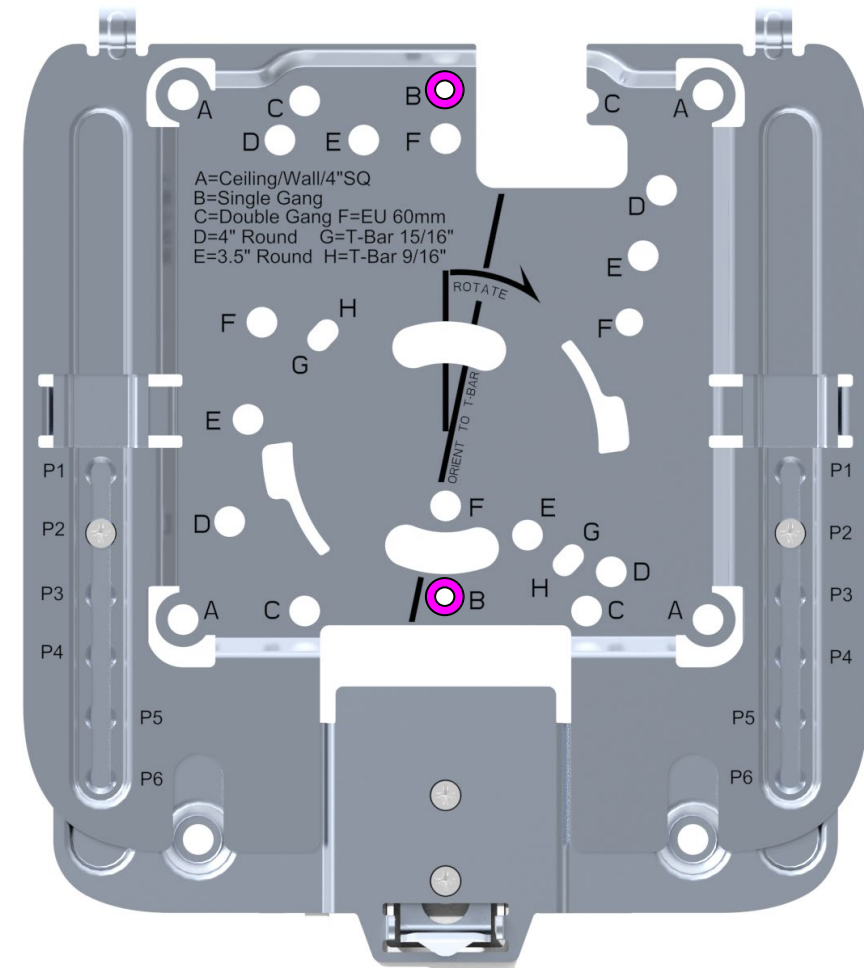


Single gang device box installation example

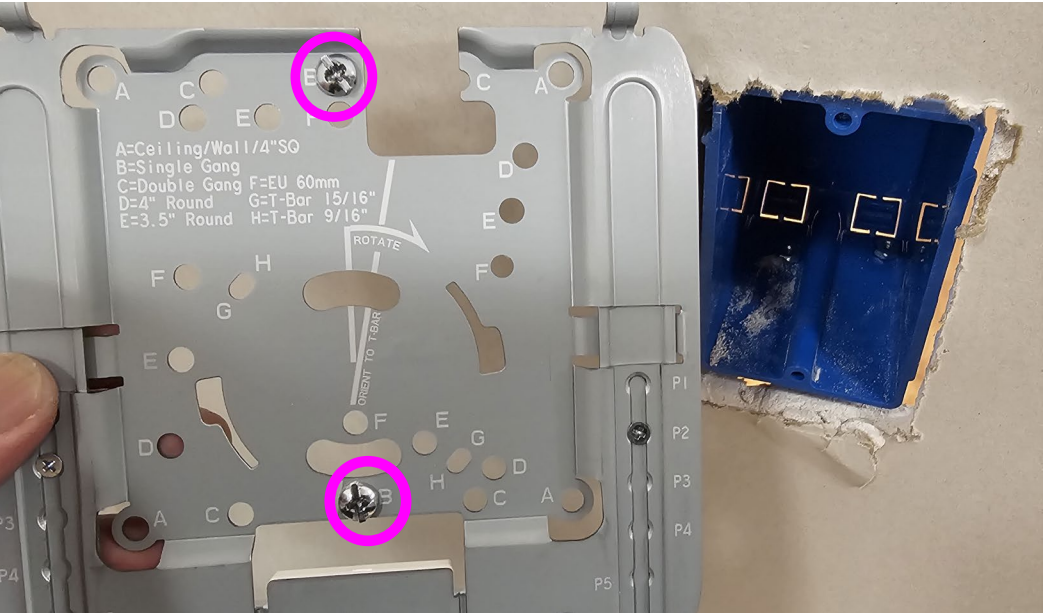



Position C: Double Gang Device Box

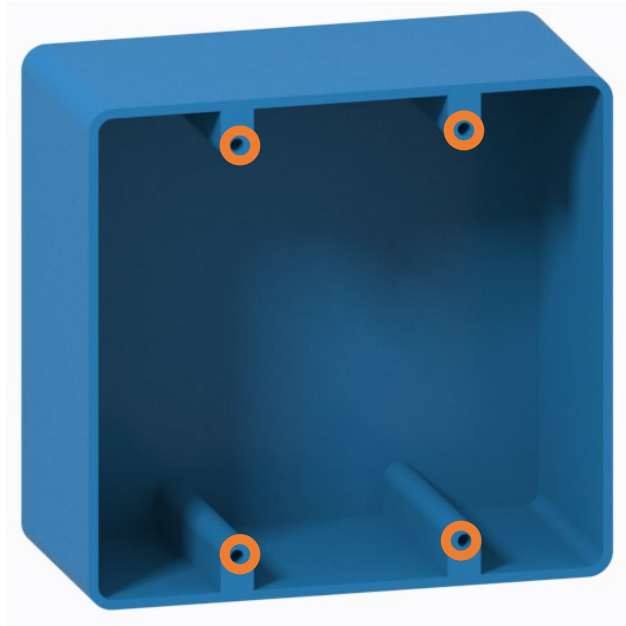

Use four 6-32 x 1" machine screws or thread-forming screws. These screws should be supplied with the device box.

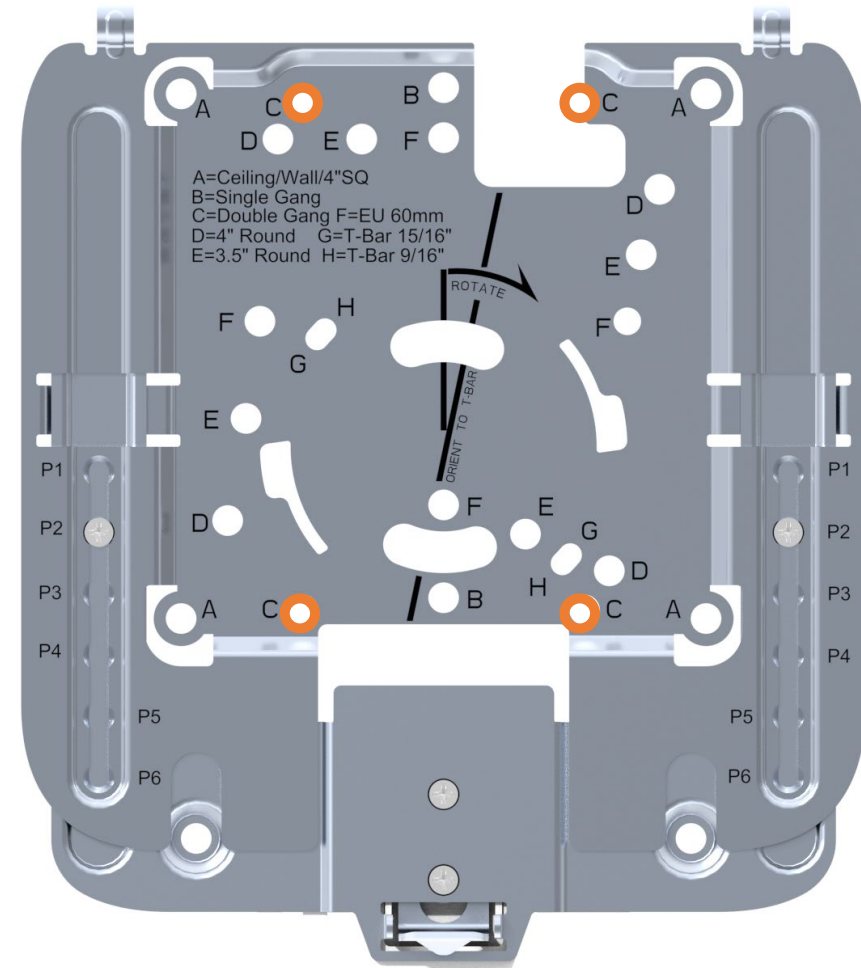

Double gang device box installation example

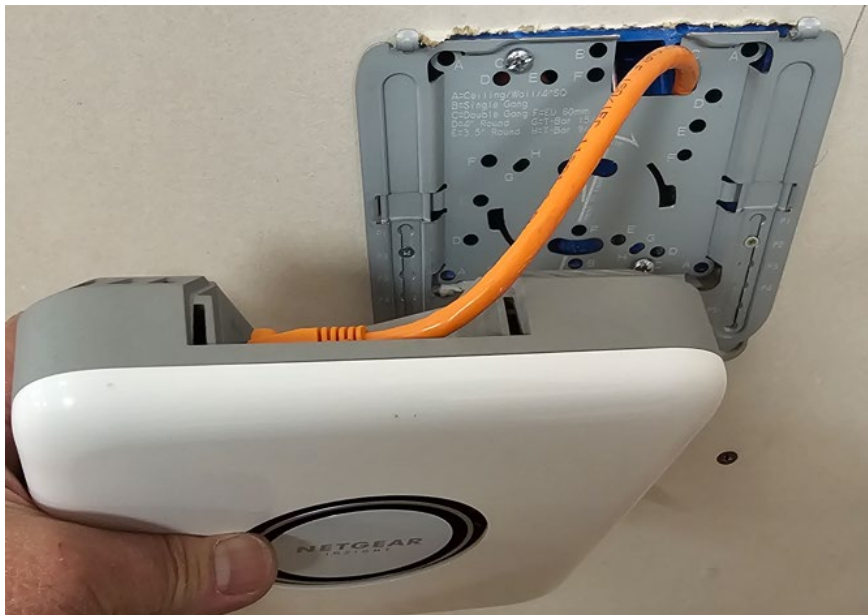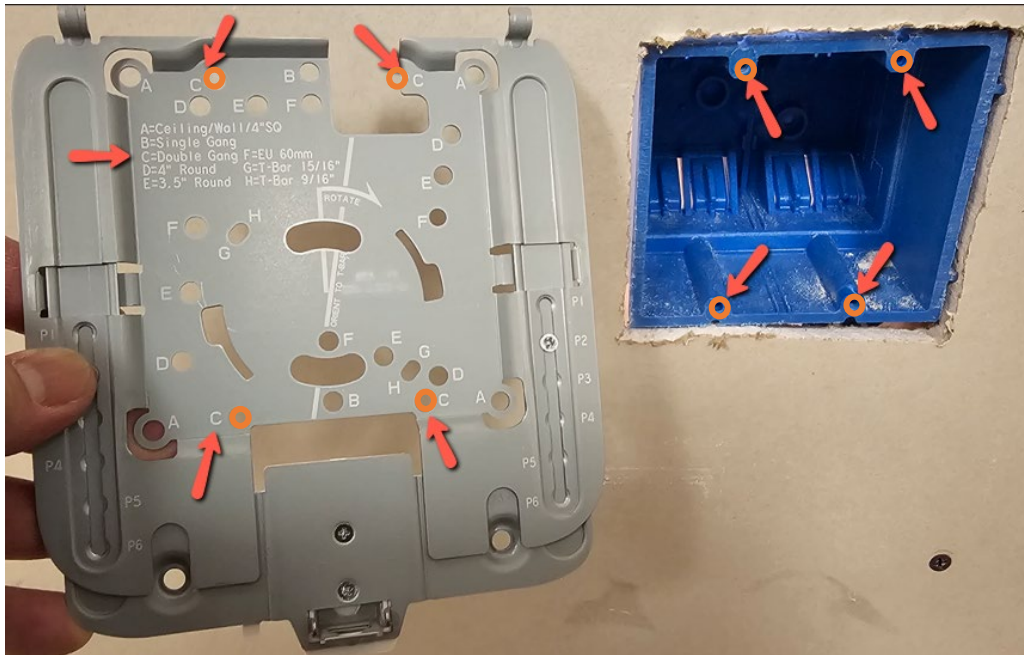

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/046240234055010102>